# Mitel Revolution

Configuration Guide for MiVoice MX-ONE

v2021.4

March 2022



#### NOTICE

The information contained in this document is believed to be accurate in all respects but is not warranted by Mitel Networks™ Corporation (MITEL®). Mitel makes no warranty of any kind with regards to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. The information is subject to change without notice and should not be construed in any way as a commitment by Mitel or any of its affiliates or subsidiaries. Mitel and its affiliates and subsidiaries assume no responsibility for any errors or omissions in this document. Revisions of this document or new editions of it may be issued to incorporate such changes.

No part of this document can be reproduced or transmitted in any form or by any means - electronic or mechanical - for any purpose without written permission from Mitel Networks Corporation.

#### **TRADEMARKS**

The trademarks, service marks, logos and graphics (collectively "Trademarks") appearing on Mitel's Internet sites or in its publications are registered and unregistered trademarks of Mitel Networks Corporation (MNC) or its subsidiaries (collectively "Mitel") or others. Use of the Trademarks is prohibited without the express consent from Mitel. Please contact our legal department at <a href="mailto:legal@mitel.com">legal@mitel.com</a> for additional information. For a list of the worldwide Mitel Networks Corporation registered trademarks, please refer to the website: <a href="mailto:http://www.mitel.com/trademarks">http://www.mitel.com/trademarks</a>.

# Contents

Introduction	4
About this Guide	4
Emergency Call Notifications (USA Only)	4
Documentation	
Mitel Revolution Overview	6
NotificationOverview	7
NetworkTopology	8
Software Dependencies and Compatibilities	
MiVoice MX-ONE Configuration	9
Configure SNMP Settings	9
SIP Trunk	10
Create SIP Trunk	10
Configure SIP Trunk	
Create an Alternate Route	
Configure 6800/6900 SIP Phones	
Configure Multicast IP for SIP Phones	10
Mitel Revolution Configuration	18
Installation and Configuration	18
Configure SIP Activator	18
Create SIP Lines	18
CreateNotifications	19
Add SNMP Activator for Emergency Call	22
Assign the SNMP Trigger to the Notification	
Trigger SNMP Emergency Notification	27
Stream Notifier Configuration	30
Priority Groups	31
Priority Group Configuration for Activators	33
Third-Party Troubleshooting	33
Mitel Revolution Technical Support	34
Creating tickets for Non-ARID Products	34
Creating an IVR Ticket (Americas Only)	
Creating a Web Ticket	34

Appendix 1	Mitel Revolution Integration Notes for MiVoice MX-ONE	38
	-	

## Introduction

The Mitel Revolution interface provides a way to centrally manage creating and sending notifications. This interface can be used to send emergency and non-emergency notifications such as Live or Stored Audio Notifications, Weather Alerts, AMBER Alerts, IPAWS Alerts, and Text Messages to supported devices.

Notifications can be sent to endpoints such as iOS and Android smartphones; Instant Messaging clients, SMS clients, and Mitel Revolution Desktop Notification Client; Paging Relay; Legacy Paging and Analog Systems; IP Speakers; Clocks; Message Boards; Social Media accounts; and more. Visit us on the web at <a href="Mittel Revolution Web Help">Mittel Revolution Web Help</a> to learn more about the Mitel Revolution product.

With Mitel Revolution, users can quickly send notifications, get real-time status on notifications, and view scheduled notifications and a list of recently sent notifications from their Dashboard. Users can also view sent notification details to see which endpoints received notifications. They can manage notifications from a single location, viewing all notifications, endpoints assigned, and the type of each notification.

**Note:** Mitel Revolution supports multicast paging for 6900 series phones. Multicasting is not supported through the MiVoice Border Gateway to teleworker configured sets.

## About this Guide

This document describes the configuration of Mitel Revolution for Mitel MiVoice MX-ONE.

## **Emergency Call Notifications (USA Only)**

For customers in the USA utilizing a next-generation 911 solution (NG911) for emergency call routing purposes, the NG911 vendor should be considered as the primary source for Kari's Law local alerting, and Revolution notifications of 911 calls should be considered an ancillary alert of the event, with the activation of 911-related Mitel Revolution notifications being triggered by the NG911 vendor and not the PBX.

If the customer is not using a NG911 vendor for emergency calls then Mitel Revolution can serve as the primary notifier and mechanism for enabling local alerts associated with Kari's Law.


### **Documentation**

- **Mitel Revolution Web Help**: This contains information about installing Mitel Revolution, initial setup, feature configuration, maintenance and troubleshooting, end-user tasks, system monitoring, and upgrade related details. You can access the web help at <a href="Mittel">Mitel</a> Revolution Web Help.
- MiVoice MX-ONE Administrator Guide Operational Directions: The document explains how to configure, administer, and maintain the features of the Mitel MiVoice MX-ONE system. You can download the document from MiVoice MX-ONE Administrator Guide - Operational Directions.
- MiVoice MX-ONE Management Applications Descriptions: This document describes
  the MiVoice MX-ONE Manager suite comprising the management applications MX-ONE
  Service Node Manager (system management) and MX-ONE Provisioning Manager (user


and extension management). You can download the document from  $\underline{\text{MiVoice MX-ONE}}$  Management Applications Descriptions.

# Mitel Revolution Overview

The Mitel Revolution interface provides a Dashboard for quick access to frequently used notifications, status of sent notifications, and scheduled notifications. The Dashboard can be configured for each user. Users having the required permissions can maintain their Dashboard themselves. Access to configuring the Revolution modules is denied to all user roles except the administrator.

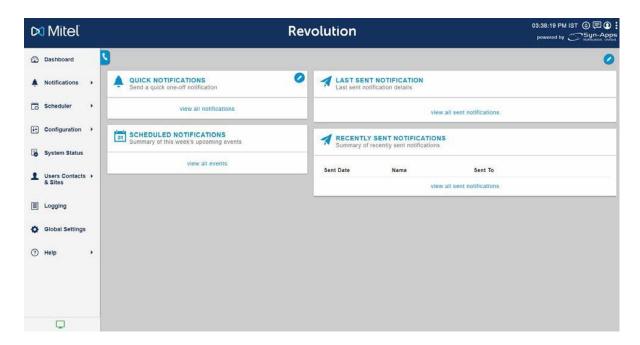

## **Notification Overview**

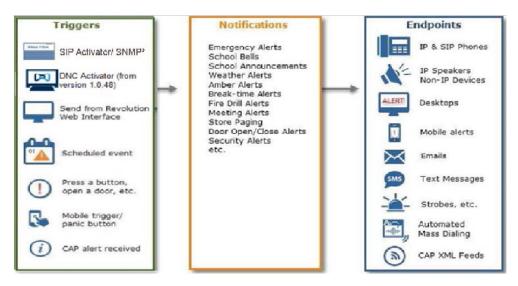


Creating notifications involves the following three main steps:

- 1. Assigning the triggers for sending notifications (SIP Activator/SNMP/DNC Activator).
- 2. Creating the content (image, audio, or text) to be sent.
- 3. Assigning the endpoints that receive the notifications.

For more information about creating notifications on the Mitel Revolution interface, see Create Notifications.

# **Network Topology**

The following diagram explains how the elements in the network are connected to Mitel Revolution:

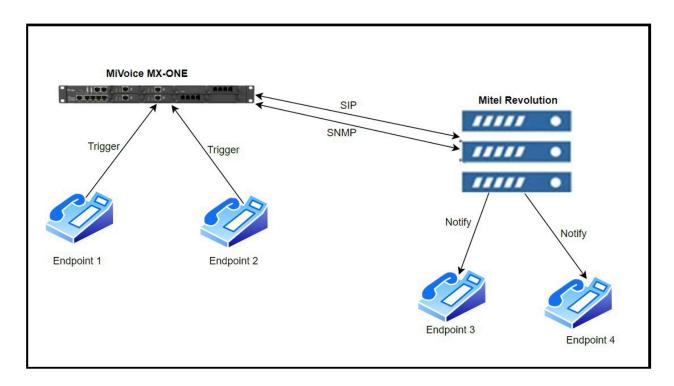

# Software Dependencies and Compatibilities

For a list of MX-ONE software versions supported and compatible with Mitel Revolution, see <u>Mitel Compatibility Matrix</u>.

# MiVoice MX-ONE Configuration

This section describes the steps to configure Mitel MiVoice MX-ONE for Mitel Revolution.

The user must configure the following general MX-ONE settings before proceeding to configure MX-ONE for Mitel Revolution:

 Create and configure an outgoing SIP trunk from the MiVoice MX-ONE to Mitel Revolution; see SIP Trunk.

**Note:** The MiVoice Office MX-ONE connection configured for the Mitel Revolution interface must not have a Secure RTP profile enabled.

## Configure SNMP Settings

To trigger a notification on Mitel Revolution whenever a user dials an emergency number, SNMP Trap messages for the SIP trunk must be configured in the MiVoice MX-ONE.

**Note:** Mitel Revolution supports SNMP V1, V2 and V3, but SNMP support in MX-ONE for emergency call notification is limited to SNMP V1 or V2.

For MiVoice MX-ONE Release 7.2 and later, perform the following steps to configure SNMP settings:

- 1. Log in to the MiVoice MX-ONE.
- 2. Edit the snmpd.conf files at the location /etc/snmp/ as follows:
  - For **snmpd.conf**, edit the following:
    - a. Set rwcommunity examplestring < Primary Revolution IP>
    - b. Set rwcommunity examplestring <Secondary Revolution IP>
    - c. Set trapcommunity examplestring < Primary Revolution IP>
    - d. Set trapcommunity examplestring <Secondary Revolution IP>
    - e. Do either of the following depending on the SNMP version:
      - For SNMP version 1

### Set trapsink < Primary Revolution IP>

• For SNMP version 2

#### Set trap2sink < Primary Revolution IP>

- **f.** Do either of the following depending on the SNMP version:
  - For SNMP version 1

#### Set trapsink <Secondary Revolution IP>

• For SNMP version 2

Set trap2sink <Secondary Revolution IP>

g. Restart the SNMP service

#### Note:

- Multiple Revolution IP entries can be added so that MX-ONE sends traps to all the
  destination addresses. Traps failing to reach the destination are alarmed by MX-ONE with
  an error.
- You can use a custom community string of your choice. Mitel recommends that you follow industry best practices including avoidance of default/public strings. For our testing, we have used "examplestring".
- We recommend that networking protections (ACL/firewalls) be used to restrict access to unauthorized SNMP connections other than between the MX-ONE and Revolution.
- Configure an emergency dest (ARS) in MX-ONE by setting the D26=1 in the ADC parameter while creating the route. For example, MDSH>roddi:rou=100,dest=123,srt=3,ADC=000500000000000010001000100;

### **SIP Trunk**

This section describes how to create and configure an outgoing SIP trunk.

### Create SIP Trunk

Perform the following steps to create a SIP trunk:

- **1.** Log in to MX-ONE through putty.
- 2. Execute the following command to create a SIP trunk.

```
sip_route -set -route <Route number> -uristring0 'sip:?@<Revolution
IP>' -fromuri0 'sip:?@<Mx-One IP>' -accept FROM_DOMAIN -match
'<Revolution IP>'
```

#### where,

Route number - creates a route with the Mitel Revolution server

Request URI - sent as 'sip:?@<Revolution IP>'

From Header - sent as 'sip:?@<MXONE-IP>'

From Domain - MX-ONE accepts all traffic containing the Revolution Server IP in the from domain

**Note:** Execute the command in MDSH mode.

## For example,

```
ROCAI:ROU=<Routenumber>,SEL=711000000000010,SIG=0111110000A0,TRAF=03151515,TRM=4,SERV=3100001001,BCAP=001100;
```


RODAI: ROU=<Routenumber>, TYPE=TL66, VARI=00000000, VARC=00000000, VARO=00000000;

```
ROEQI:ROU=<Route number>,TRU=1-1&&1-9;
roddi:rou=20,dest=678,srt=4,ADC=0005000000000250000001011000;
```

- **3.** After executing the command, verify the configuration in the MiVoice MX-ONE Service Node Manager (SNM).
- **4.** In the SNM web interface, use the **Route** form to create and configure MiVoice MX-ONE SIP trunks. Navigate to **Telephony > External Lines > Route >Select the route name >View.**

The following illustration provides an overview of the SIP Route.



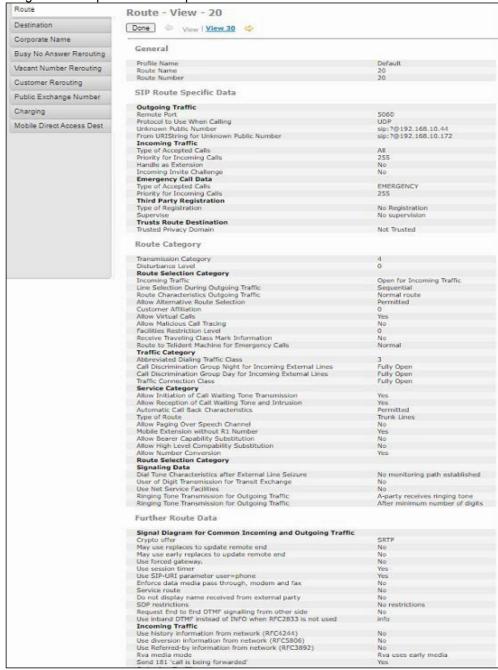


The following illustration provides a complete view of the SIP route.

## Configure SIP Trunk


Perform the following steps to configure the SIP trunk:

 In the Service Node Manager (SNM) web interface, navigate to Telephony > External Lines > Destination and click Add.

Rva uses early media

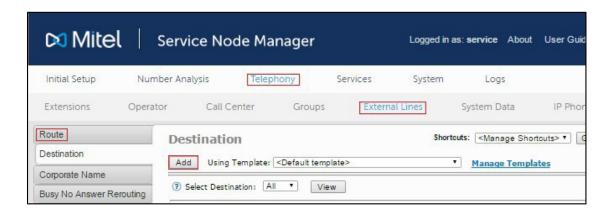

2. Choose the **Type of Destination** by selecting the **Destination** button and clicking **Next**.

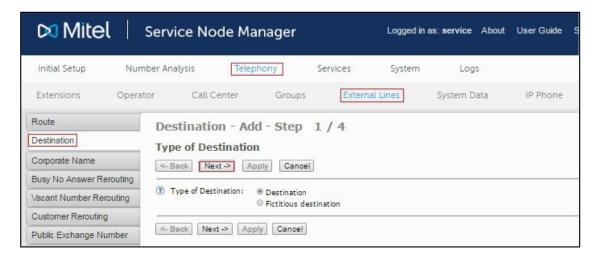

Route Destination - Change - 678 Destination Apply Cancel Corporate Name (?) Destination: 678 Busy No Answer Rerouting Route Name: 20 Primary Choice is the sequence number for the route choice in alternative routing Vacant Number Rerouting Start Position for Digit Transmission: [4 V] Customer Rerouting 7 Type of Seizure of External Line: Immediate seizure Porward Switching: Public Exchange Number Type of Called Number: Unknown public 🕶 Charging Type of Calling Public Number: Unknown public ➤ 7 Type of Calling Private Number: Unknown private > Mobile Direct Access Dest ② Use as Emergency Destination: Pre-digits in order to form a new External Number: 0 ~ Truncated Digits in Dialed Number: Type of Signal Seizure: Terminating seizure O Transit seizure B-Answer Signal Available: (?) Allow to send Traveling Class Mark: ? Route Type: Public 25 ~ Maximum Number of Transit Exchanges: ? PNR Number Translation Information: No Translation ✓ Supplementary Services Using User to User Interface: Not Allowed 7 Use Least Cost Routing for All Calls: Allow Sending of Expensive Route Warning Tone: Type of Protocol to use for Supplementary Service Call Offer: User to User Interface(UUI) O Generic Function Protocol(GFP) 7 Type of Protocol for Call Back/Call Completion: User to User Interface(UUI) O Generic Function Protocol(GFP) Show Original A-Number: (7) Use Original A-Number's Type of Number: 7 Enable Enhanced Sent A-Number Conversion: ① Use ETSI Diversion Supplementary Service: Basic...

3. Review the configuration, click **Apply**, and then click **Done**.

#### Create an Alternate Route

This option is used to let the MX-ONE switch to a secondary Revolution server if the Revolution redundancy solution is deployed.

1. Create the second route (alternate route) pointing to the secondary Revolution.

Apply Cancel

2. Set the destination for the second route the same as that for the first route, select Alternative Route Choice as 1, and specify the remaining settings as required.

As shown in the following example, when a user dials 678 followed by a number, MX-ONE tries the primary Route 20 and if there is no response from this route within the time configured in rodai cmd then MX-ONE tries the Alternate Route 30, which points to the secondary Revolution.

Ensure that while creating the first trunk route (RODAI), VARO 6<sup>th</sup> bit is set between 1-9 (number of seconds to wait for an answer to the INVITE, after which the call is rejected or routed through the alternate route).

RODAI:ROU=20, TYPE=TL66, VARI=00000000, VARC=00000000, VARO=0000500;



## Configure 6800/6900 SIP Phones

To configure 6800/6900 series SIP phones with Mitel Revolution, add the following configuration parameters in the configuration file (startup.cfg, or aastra.cfg), which registers the phones on the Mitel Revolution server:

xml application post list: <<Primary revolution server IP>>,<<Secondary revolution server IP>> action uri poll 1:http://<<Primary revolution server IP>>/MitelRegistrar/?dn=\$\$SIPUSERNAME\$\$&ip=\$\$LOCALIP\$\$ action uri poll interval 1: 60 action uri poll 2:http://<<Secondary revolution server IP>>/MitelRegistrar/?dn=\$\$SIPUSERNAME\$\$&ip=\$\$LOCALIP\$\$ action uri poll interval 2: 60xml

where,

- xml application post list is the HTTP server that is pushing XML applications to the IP phones.
- primary revolution server IP is the IP address of the Mitel Revolution primary server and secondary revolution server IP is the IP address of the Mitel Revolution secondary server (enter this IP address only if you have a secondary server).
- action uri poll is the URI to be called at every action uri poll interval (seconds).
- action uri poll interval is the interval, in seconds, between calls from the phone to the action uri poll. The interval can be between 60 seconds and 300 seconds depending on how frequently you want the phone to register.

#### Note:

- Reboot the phone after the parameters are included in the configuration file.
- XML Notifications are not supported on 68xx and 69xx sets that are configured as Teleworker phones.


After successful configuration, the 6800/6900 SIP phones are listed under the **Endpoints** section in Mitel Revolution. Ensure that **Status** is **Active** and **Licensed** is enabled.



## Configure Multicast IP for SIP Phones

Perform the following steps in the Mitel Web UI to set the Multicast IP for 6800/6900 series SIP phones:

- 1. Go to Basic Settings > Preferences.
- 2. In the Preferences page, navigate to Group Paging RTP Settings > Paging Listen Addresses.
- 3. In the **Paging Listen Addresses** field, set the Multicast IP followed by the port number.

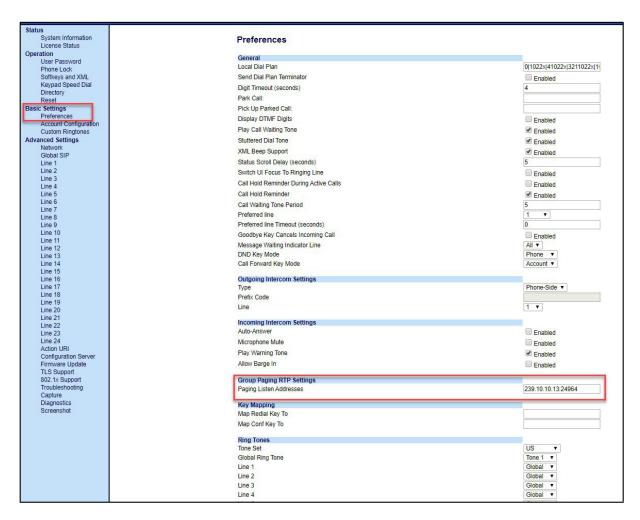

### 4. Click SAVE.

**Note:** Multicast is not supported via MBG for teleworkers.

For multicast configuration on Mitel Revolution, see Stream Notifier Configuration.

# Mitel Revolution Configuration

This section describes how to configure Mitel Revolution with the MiVoice MX-ONE.

## **Installation and Configuration**

Refer to the following topics in the Mitel Revolution Web Help for information about installing Mitel Revolution on Windows Server 2008, 2012/2012r2, or 2016 and configuring it for your Mitel system.

- System Requirements
- Installation

## Configure SIP Activator

This section describes the Mitel Revolution configurations for MiVoice MX-ONE.

Create SIP Lines


Note: SIP lines are created for the extension range defined in the MX-ONE.

Perform the following steps to create a new SIP line:

- 1. Go to Configuration > Phone Systems > SIP.
- 2. Click NEW and select NEW SIP LINE.
- 3. Enter a descriptive Name for the SIP line.

For **Extension**, enter the SIP extension number defined in the MiVoice MX-ONE Service Node Manager. For example, 1234.

- **4.** (Optional) Enter a numeric **Security Code** of your choice. Security codes contain at least 3 digits. Leave the field with the default value 0 if you do not want to have a security code. You may choose to repeat the Security codes.
- **5.** (Optional) Enter an **Activator Text Title** and **Activator Text Body** that can be used with, or in place of, a notification title and body text.
- 6. Click SAVE.

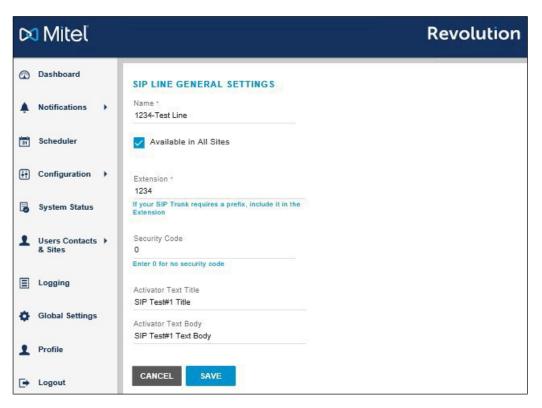

SIP lines entered here can be assigned to notifications as actions that trigger sending the notifications.

For more details about SIP lines, see Create SIP lines section in the Mitel Revolution web help.


## **Create Notifications**

This section describes the procedure to create a trigger for a one-way audio notification.

For an overview of how the system works and other types of notifications, see **Notifications Basics** and **Manage Notifications** sections in the <u>Mitel Revolution web help</u>.

Perform the following steps to trigger a one-way audio notification:


- 1. Go to Notifications > Manage.
- 2. Click NEW NOTIFICATION.
- 3. Enter the following **GENERAL** settings:
  - a. Notification Name: Enter a descriptive name for the notification.
  - b. **Notification Type**: Select **One-Way** from the drop-down list.
  - c. **Priority**: Assign a priority level in the range 1 to 10.
  - d. **Dashboard Icon**: Select an image from the drop-down list.

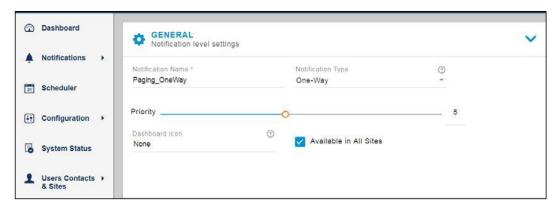

- 4. Click the TRIGGERS settings and enter the following values:
  - Select SIP from the Activator drop-down list.
  - Select New Trigger from the Trigger drop-down list.
  - Enter a descriptive Name for the SIP line.
  - Add the Extension number that you defined in the MiVoice MX-ONE.




- 5. Click MESSAGE DETAILS settings and enter the following values:
  - Select Show from the Caller ID drop-down list.
  - Select an **Opening Tone** and a **Closing Tone** from the respective drop-down lists.
  - Set the **Volume** for the notification. This volume overrides the volume set on the endpoint receiving the notification, such as a phone or speaker.
  - (Optional) Select an image from the Stored Images drop-down list. This is the image that is sent with the notification. You can repeat this step to select more images, if needed.
  - Choose Font Color for the notification fonts.
  - Enter a Title and the content for notification in the Body.
  - Leave 'Clear notification...' unselected. (Selecting 'Clear notification...' removes the notification message from a phone's display once the selected audio files finish playing).

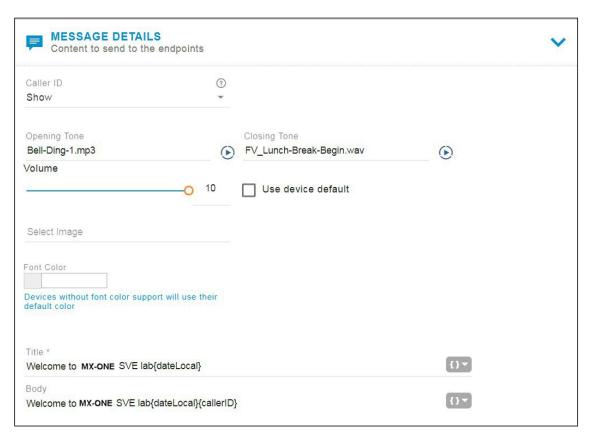

**6.** In **ENDPOINT & CONTACT SELECTION**, type the keyword in the Search field and select the endpoint to which the notification must be sent. You can select individual endpoints, contacts, or user tags.

Leave 'Allow users to add endpoints dynamically' at None.

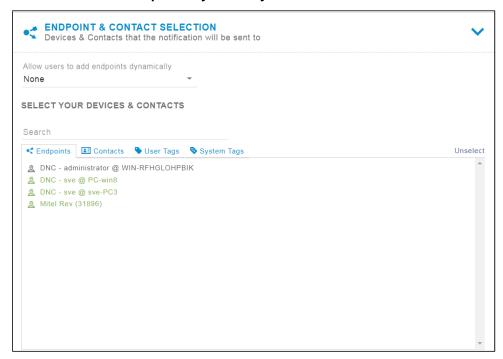

## 7. Click SAVE.

# Add SNMP Activator for Emergency Call

## Note:

If the customer site is configured to use an NG911 vendor for emergency call routing, the Mitel Revolution activator for emergency call notification must be the NG911 vendor service (for example, through an inbound email notification from the NG911 provider to Mitel Revolution, or through an API-based integration between the NG911 vendor and Mitel Revolution), and not a 911 activation from the PBX.


Perform the following steps to add an SNMP activator for an emergency call:

- 1. Go to Configuration > Phone Systems > Dial Monitoring.
- 2. Click NEW and select NEW MITEL DIAL MONITOR.

The **MITEL DIAL MONITOR GENERAL SETTINGS** page opens.


- 3. Enter a Name for the emergency number.
- 4. For Monitored Number, enter the number to be configured in your MiVoice MX-ONE.
- **5.** From the drop-down list of **Version** select the same version that you have configured in MX-ONE.
- 6. Click SAVE.

**Note:** When a user dials the emergency number, the MiVoice MX-ONE sends out a trap to the Mitel Revolution interface and notification is initiated based on the notification settings on Mitel Revolution. The Stored Message and Text and Image notification types are supported for emergency notifications.

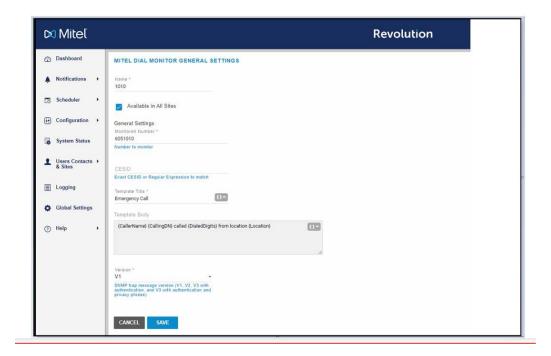

## SNMP Setting for SNMP Community String

1. Go to Configuration > Integrations > SNMP trap trigger.

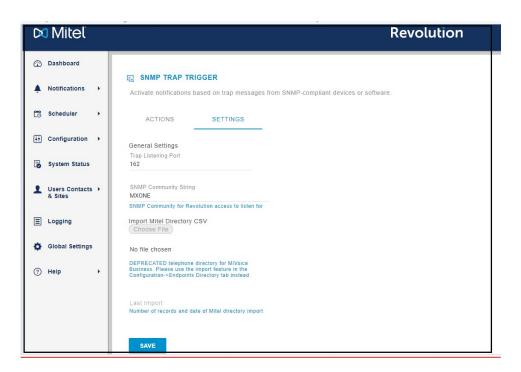

- 2. Enter the string name in the String Community String field.
- 3. Click Save to save the settings.

## Importing Location details to SIP device for XML Registration

Users registered directly with Revolution using XML post will not have their locations details updated in their directory. To update the locations details of these users, the admin must import their location details using the following steps:

Go to Configuration > EndPoints > DIRECTORY.



2. Click the pencil icon ( ) Bulk Edit > Bulk Update and Add from CSV.



 Click Choose File and select the CSV file from your saved location. The Edit and Import from CSV – Column Mapping screen is displayed.



4. From the drop-down list of **Match Data to** select **Destination Code**. Clear the **Update Endpoints** check box.

**NOTE:** By default, the **Update Endpoints** check box is selected.



5. Click Import.

The location details of users registered directly with Revolution using XML post will be updated in their directory.

For more details about the fields in the emergency settings, see the **Configure Revolution SNMP Activator** section in the <u>Mitel Revolution web help</u>. For more details about emergency number setup, see the **Emergency Number** section in <u>MiVoice MX-ONE Management</u> Applications Descriptions.

Assign the SNMP Trigger to the Notification

Perform the following steps to create a notification and to assign Mitel dial monitor triggers to the notification:

- 1. Go to Notifications > Manage.
- 2. Click NEW NOTIFICATION.
- **3.** Enter specific values in the following fields:

Field	Value	
General	From the <b>Notification Type</b> drop-down list, select Text and Images or Stored Audio notification as the notification type.	
	Select <b>Text to Speech</b> as this is an emergency notification.	
	To include an opening tone to invite the receiver's attention, select <b>Stored Audio</b> notification type. Do not select <b>One-Way</b> , <b>Recorded</b> , or <b>Two-Way</b> notification types.	
Select Triggers	From the <b>Activator</b> drop-down list, select <b>SNMP</b> and then select the trigger you created.	
Message Details	Select the <b>Title</b> and <b>Body</b> variables that you have defined in <b>SNMP</b> the <b>Mitel Dial Monitor Activator</b> page of Revolution. The following table describes the variables that can be selected while creating a notification.	
Endpoint & Contacts	Assign the endpoints and contacts you want the emergency notification to be sent to.	
	If you want the notification to be sent to the mobile app, add the contacts, and select the <b>Mobile</b> check box in the <b>Contact Methods section</b> .	

While creating notifications, you can configure the following variables to derive the Caller Name, Number, Location, Department information on the SNMP trap Notification, text message, and so on.

Variable	Description	
{SysName}	IP address or host name is configured in the SNMP Configuration form used to identify the system responding to the emergency call.	
{SeqNumber}	An incrementing number beginning from 1; used for correlating the retry logs.	
{CallType}	Indicates that the call is an emergency call.	
{CallingDN}	The DN of the device used to place the emergency call.	
{DialedDigits}	The digits that are out-pulsed on the outgoing trunk after digit modification is performed.	


{RegistrationDN}	Used when an emergency call is placed from a hot desk service.
{DetectTime}	The date and time (in seconds) when the emergency call was initiated by the system.

For more details about creating and assigning notifications, see the **Notifications Basics** and **Manage Notifications** sections in the <u>Mitel Revolution web help.</u>

## **Trigger SNMP Emergency Notification**

Perform the following steps to trigger an emergency notification:

- 1. Go to Notifications > Manage.
- 2. Click NEW NOTIFICATION.
- 3. Enter the following GENERAL setting values:
  - **Notification Name**: Enter a descriptive name for the notification.
  - Notification Type: Select Stored Audio from the drop-down list.
  - Activation Type: Select the activation type from the drop-down list and set the Repeat Interval (in seconds) to repeat the sending of the notification.
  - Priority: Assign a priority level in the range from 1 to 10.
  - Dashboard Icon: Select an image from the drop-down list.

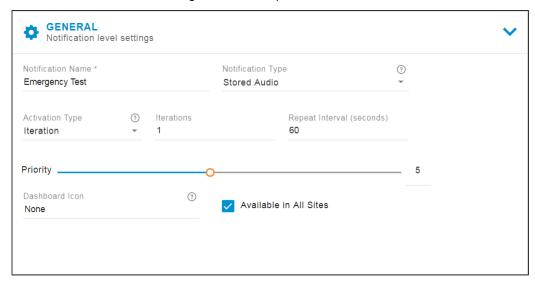

- **4.** Click the **TRIGGERS** settings and enter the following values:
  - Select SNMP from the Activator drop-down list.
  - Select Emergency from the Trigger drop-down list.



- 5. Click **MESSAGE DETAILS** setting and enter the following values:
  - Select **Show** from the **caller ID** drop-down list.
  - Select the audio to play from the Select Audio drop-down list.
  - Set the volume by adjusting the volume button.
  - Choose Font Color for the notification.
  - Type the **Title** and content for notification in the **Body** and add the required variables from the respective drop-down lists.



**6.** In **ENDPOINT & CONTACT SELECTION**, type the keyword in the Search field and select the endpoint to which the notification must be sent. You can select individual endpoints, contacts, or user tags.




## 7. Click SAVE.

## **Stream Notifier Configuration**

Perform the following steps to create a new static stream for multicast configuration:


1. Go to Configuration > Static Stream.

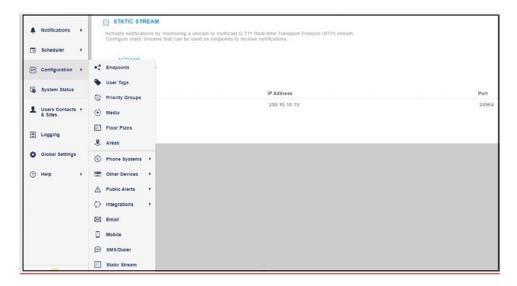

- 2. Click **NEW STATIC STREAM** and provide the following details for Static Stream General settings:
  - Name: Provide a descriptive name for the multicast stream.
  - IP Address: Enter the multicast IP.
  - Port: Enter the port for Multicast IP.



3. After the stream is created, assign the stream as an endpoint for the notification.

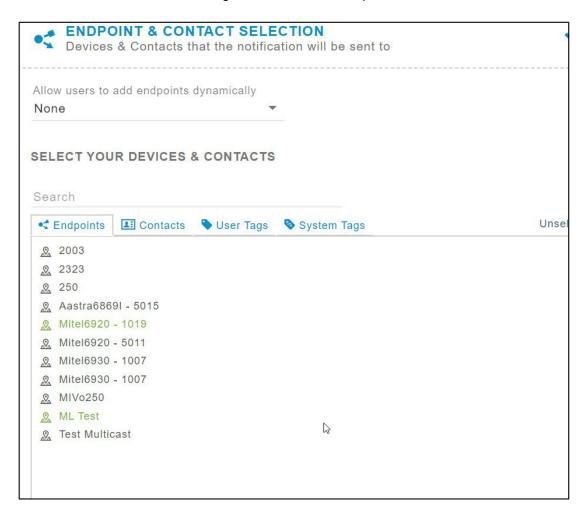

## **Priority Groups**

Priority Groups define a primary server and the failover order of your redundant servers.


Priority groups are used to:

- Define failover order for your redundant servers.
- Define different server priorities such that we can distribute activations to different servers. For example, for Group A you could list your primary server first, while for Group B your secondary could be first.

If we do not create any priority groups, beyond the Default, then Revolution behaves as if it was in an Active/Standby scenario for any failover scenarios and all notifications will go through the highest priority server that is active.

Follow the steps to create the Priority Groups

- 1. Navigate to **Configuration** > **Priority Groups**. The Priority Groups page opens.
- 2. Click **NEW** to create a new Priority Group.
- **3.** Click and drag the server boxes to specify a priority order of your choice, with highest priority server placed first.

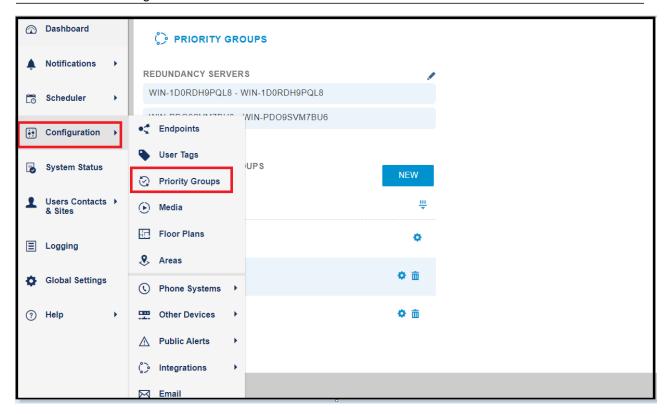

Mitel Revolution Configuration

SERVER PRIORITY GROUPS

Name

□

DEFAULT

Secondary

□

New Priority Group

□

WIN-HOOP7QQJ2A1 - WIN-HOOP7QQJ2A1


□

WIN-APDGOSM2OU3 - WIN-APDGOSM2OU3

Priority Groups are referenced when trigger activators are created or edited. Priority Groups are selected from the **Priority Groups** field in the configured order. Notification triggers are activated from the first server listed (or lower priority servers in the case of failover) in the **Priority Groups** field.

# Priority Group Configuration for Activators

To configure Priority Group for Activators, navigate to **Configuration > Phone Systems > SIP > SIP Line**.

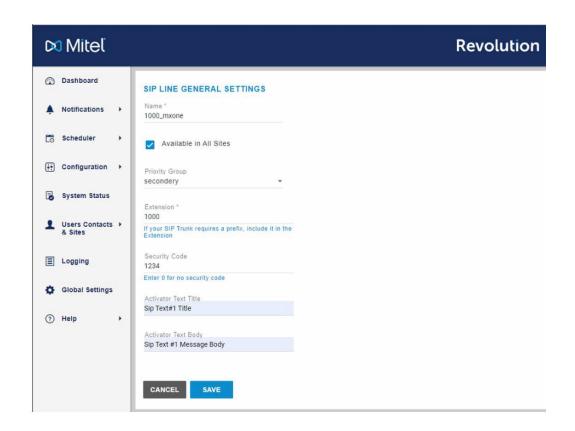

# **Third-Party Troubleshooting**

Basic troubleshooting can be done by using the various Mitel Revolution log files.

You can access the log files from **Mitel Revolution** > **Logging**.

See the <u>Mitel Revolution web help</u> > <u>Logging</u> topic for more information about troubleshooting. Also, refer to the <u>Mitel Revolution web help</u> > <u>Troubleshooting</u> topics.

# Mitel Revolution Technical Support

Technicians who have completed Mitel Revolution technical training and certification can open tickets with Mitel Technical Support for further assistance with Mitel Revolution.

## Creating tickets for Non-ARID Products

This section describes the procedures to create tickets for a non-ARID product by using IVR and Mitel Website.

## Creating an IVR Ticket (Americas Only)

- 1. Call the Mitel Revolution Support team at any of the following phone numbers:
  - 800-722-1301 (option 5 # 8)
  - 613-592-7849 (option 8)
- 2. When prompted to enter an ARID (License ID), press # to listen to the list of non-ARID products.
  - Press 3 for Applications (Mitel Revolution, Mitel Performance Analytics, Mitel Mass Notification, CT Gateway)

**Note:** These menu options may change at any time, based on the support status of the product.

3. When prompted, enter the product version number, using the \* key for dots and the # key to submit.


**Note:** To know the version number of your product, log in to TechCentral Tracker to find the list of versions in the drop-down menu.

#### For example:

If you are using Mitel Revolution R2021.1, to enter this in the IVR you would select "2021\*1#" on your keypad.

## Creating a Web Ticket


- 1. Log in to https://www.mitel.com/login > MiAccess (partner Login) > TechCentral Tracker.
- 2. Click Create New Service Request.
- 3. Enter the Service Request Details (Severity, Summary) and Contact Information.
- **4.** On the **Product Information** page, select **Select a product**.

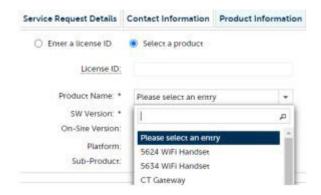

- 5. In the Site Information page, select the site from the drop-down list under Select Site.
  - If the customer site is not listed, please use your company's name



6. In the Troubleshooting Notes page, enter the details of the issue and click SUBMIT.

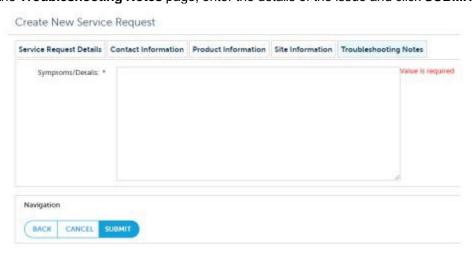

# Appendix 1 Mitel Revolution Integration Notes for MiVoice MX-ONE

The following table summarizes a list of integrated features available when Mitel Revolution is connected to the MiVoice MX-ONE.

<u>Activator Active-Standby</u> – The scenario where PBX can successfully switch to Standby server when the Revolution Active is not responding.

<u>Activator Active-Active</u> – The scenario where PBX can send Activator to both primary and secondary Revolution server as needed.

**Notification Active-Standby** – The scenario where Revolution can successfully use the Standby server to dispatch notifications when the primary stops responding.

**Notification Active-Active** – The scenario where both primary and secondary can simultaneously process notifications.

Activator/Notification		Integration Detail	
Activators			
SIPActivator	Supported	Supported	
	SIP Activate	or code is sent to Revolution using SIP trunks.	
Emergency Call Activator	Supported	Supported	
	SNMP traps	s are sent to Revolution for an emergency call.	
	Note: Supp	ported version is SNMP Version 1 and Version 2.	
SIPActivator	Supported	Supported	
(Active-Standby)	Activator to	MX-ONE uses the alternate (secondary) route to send SIP Activator to the secondary Revolution when the primary does not respond.	
Emergency call trigger	Supported	Supported	
(Active-Standby)		SNMP traps are sent to both Revolution servers. Revolution dispatches the notification based on whichever is active.	
SIPActivator	Supported	Supported	
(Active-Active)	Activator co	A different route needs to be set up on MX-ONE so that SIP Activator code can be sent to both the primary and secondary Revolution servers as needed.	
Emergency Call trigger	Supported	Supported	
(Active-Active)			
Notifications	'		
PBX Paging Notification	MiNET	Not Applicable	
		MX-ONE does not support MiNET.	
	SIP	Not Supported	

		MX-ONE does not support PBX Paging based on SIP integration. Support Multicast Paging Relay from
		Revolution.
XML Text Display	MiNET	Not Applicable
		MX-ONE does not support MiNET.
	SIP	Supported devices include 68xx, 6920, 6930, 6940, and 6970.
	MiNET	Not Applicable
XMLAudio		MX-ONE does not support MiNET.
	SIP	68XX and 69XX phones support two-way Audio.
XMLNotifications	XML Notifications are not supported on 68xx and 69xx sets that are configured as Teleworker phones.	
Multicast	MiNET	Not Applicable
		MX-ONE does not support MiNET.
	SIP	68XX and 69XX phones support multicast streaming.
Locationdetails	Create a CSV file with Name, Extension, and Location as required fields, and upload it to the EndPoints Directory. Revolution pulls the location from the CSV file and adds the location information to the notification.	
PBX Paging Notification	Not supported	
(Active-Standby)	MX-ONE does not support PBX paging based on SIP integration.	
	Support Multicast Paging Relay from Revolution.	
XMLNotification	Supported	
(Active-Standby)	Secondary Revolution sends XML Notifications when the primary instances is no longer active. SIP devices (release later than 6.0) support registering with multiple XML servers. XML notifications work as long as the registration with Revolution is active.	
Multicast Notification	Supported	
(Active-Standby)	Secondary Revolution dispatches the multi-cast notifications while the primary is not available.	
PBX Paging Notification	Not supported	
(Active-Active)	MX-ONE does not support PBX paging based on SIP integration.	
		ast Paging Relay from Revolution.
XMLNotification	Supported	
(Active-Active)	Phones need to register with the respective Revolution servers	

	from which the notifications would come from. Both primary and secondary Revolution can handle XML notifications if the phone is pointed to the respective Revolution.
Multicast Notification	Supported
(Active-Active)	Both primary and secondary Revolution can handle multi-cast notifications at a given time.
Clearing notifications displays after a specified time	By default, the notifications are cleared after a pre-set time duration. Set the duration to delay clearing of notifications beyond the default time duration.
Queuing Notifications	Revolution will queue the notifications for any overlapping endpoints running high priority notifications. In this case, the lower-priority notifications will return a status of "Queued" and will attempt to run only after the high priority notifications complete.  Note: This functionality is available only for non-live notification
	types. Therefore, you cannot use this for one-way, two-way, conference, answer, or listen-in notification types.
XML and priority XML notifications (one way/stored audio/two-way) to devises	When a call is ringing, only the priority XML notifications (stored audio / one-way / two-way) will be sent out.
XML and priority XML notifications (one way/stored audio/two-way) to devises that are in calling state	During a call, both XML and priority XML notifications for one-way and two-way will be sent out. For stored audio, only the priority XML notifications will be sent out.



© Copyright 2022, Mitel Networks Corporation. All Rights Reserved. The Mitel word and logo are trademarks of Mitel Networks Corporation, including itself and subsidiaries and authorized entities. Any reference to third party trademarks are for reference only and Mitel makes no representation of ownership of these marks.