

# Emergency Notification

INSTALLATION INSTRUCTION



## NOTICE

The information contained in this document is believed to be accurate in all respects but is not warranted by Mitel Networks™ Corporation (MITEL®). Mitel makes no warranty of any kind with regards to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. The information is subject to change without notice and should not be construed in any way as a commitment by Mitel or any of its affiliates or subsidiaries. Mitel and its affiliates and subsidiaries assume no responsibility for any errors or omissions in this document. Revisions of this document or new editions of it may be issued to incorporate such changes.

No part of this document can be reproduced or transmitted in any form or by any means - electronic or mechanical - for any purpose without written permission from Mitel Networks Corporation.

## TRADEMARKS

The trademarks, service marks, logos and graphics (collectively "Trademarks") appearing on Mitel's Internet sites or in its publications are registered and unregistered trademarks of Mitel Networks Corporation (MNC) or its subsidiaries (collectively "Mitel") or others. Use of the Trademarks is prohibited without the express consent from Mitel. Please contact our legal department at [legal@mitel.com](mailto:legal@mitel.com) for additional information. For a list of the worldwide Mitel Networks Corporation registered trademarks, please refer to the website: <http://www.mitel.com/trademarks>.

© Copyright 2016, Mitel Networks Corporation

All rights reserved

# 1

## GENERAL

This document describes the usage of the emergency notification feature.

Emergency messages can be sent to analog, digital, and IP (SIP and H.323) extensions in MX-ONE.

### 1.1

## PREREQUISITES

The following prerequisite applies for the emergency notification feature:

- TMU boards
- A digital phone or a SIP or H.323 terminal (with auto-answer)

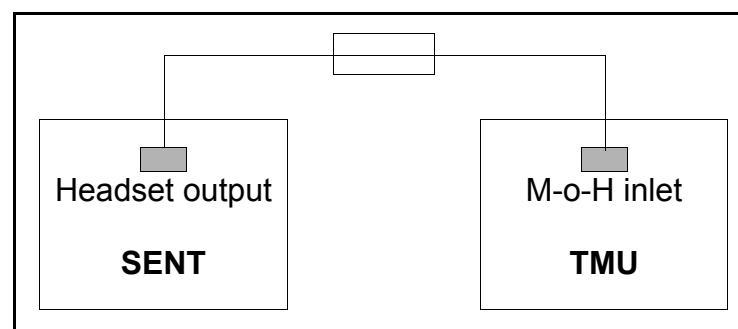


Figure 1: SENT connected to TMU board.

# 2

## PREPARATION

For installations using live voice messages, and a digital phone as SENT (Special Emergency Notification Terminal), an isolation transformer should be used between the SENT headset connector and the amplifier differential input. The transformer blocks the -48 V of the SENT from upsetting the amplifier.

# 3

## AIDS

I/O terminal.

# 4

## MOUNTING

For instructions on how to initiate the emergency notification feature, see the operation directions for EMERGENCY NOTIFICATION.