

## English



LED Display: On, flashing, off

Set the ringing volume.

Call key: Sep up or disconnect a call.

Navigation key up/down: Vertical scrolling.

Press the left navigation key: Return a step back or delete the last input. Press and hold down: Back to idle display.

Press right the navigation key if on the display. Scroll through the available information.

+ on the display: Continuation of the current display.

Hotkey: Scroll through user-defined Foxkeys. Press and hold down: Configuring Keys.

Redkey (Option): Customer-specific function: Ask your system administrator.

**ABC** Foxkeys (Fox). Execute the displayed function using the key.

Scroll through the available functions.

Menu key: Access to the terminal settings (see ring settings and profiles).

### Ring settings and Profiles

Press the menu key to carry out ring settings via the Foxkey, switch on the vibra call, set up the profiles and carry out further terminal settings.

### Hands-free operation / open listening mode

Make calls without holding the phone up to your ear. Activate or deactivate before or during the call: Press the menu key, then the Foxkey .

*Warning! Do not hold the phone up to your ear, the volume rises sharply during hands-free operation!*

### Dialling by name (Quickdial variant)

Select from all of the names stored in the telephone system:

1. Press the corresponding keys, each once, for the first few letters.  
To separate the first and last name use the hash key (#) (your system administrator tells you whether you must enter the first letters of the last name or of the first name).
2. Press the Foxkey **ABC**, then scroll vertically until the required name is shown.

3. Press the call key to dial stored numbers.
- Access to the available external phone books: Press the star key (\*) before the first letter.

## Forward calls

1. Fox **MENU**, then scroll with Fox  $\rightarrow$ , then press **FORWARD CALLS**.
2. Scroll vertically up to **FORWARD TO SUBSCRIBER**, then press **OK**.
3. Enter the call number and press **OK**.

## Call forwarding reset

1. Press the right navigation key to scroll up to **RESET** is displayed.
2. Press **RESET**.

## Deflect a call during the ringing phase

1. Press **DEFLECT** during the ringing phase,
2. Enter the call number and press **OK**.

## Call transfer

During a call:

1. Press **ENQUIRY CALL**, enter the number and wait until the call is answered.
2. Press the call key, the call is transferred. If nobody answer, press the left navigation key to return to the first call.

## Brokering

Switching between two callers without interruption of the calls. You are taking a call:

1. Press the **ENQUIRY CALL** key.
2. Enter the second number and wait until the call is answered.
3. Press the **BROKERING** key, to switch callers.

## Conference call

Connect several callers for a conference call.

You are taking a call:

1. Press **ENQUIRY CALL**, enter the number and wait until the call is answered.
2. Fox **MENU**, then scroll with Fox  $\rightarrow$ , then press **CONFERENCE**.
3. Add participants via inquiry.  
Leaving a conference call: Press the Call key.

## Callback

The person is busy or does not answer.

1. Press the **CALLBACK** key.
2. Press the call key, the display shows **CALL EXPECTED....**  
As soon as the required call party is free, your phone places a call.
3. Press the call key, the call party is called again.

## User's Guide

Document No. eud-0659, version 1.5;  
10-2006

For detailed information about the User's Guide, see

<http://www.aastrach/docfinder>