



 LED display: On, flashing, off

 Sets the sound volume.

 Call key: Sets up or disconnects a call.

 Navigation key up/down: Vertical scrolling.

Pressing the left navigation key:

 Goes back one step or deletes the last input. Pressing and holding down: Goes back to the banner page.

Pressing the right navigation key; if  is on the display: scrolls through the available information.

 is on the display: shows the rest of the display.

 Hotkey: Scrolls through the user-defined Foxkeys. Pressing and holding down: Configures the keys.

 Foxkeys (Fox). Executes the displayed function using the key.

 Scrolls through the available functions.

 Menu key: Accesses the device settings (see Settings and Profiles).

 Alarm button: Triggers the alarm immediately and manually.

Alarm symbols on the display:

-  No-movement alarm activated.
-  Man-down alarm activated.

Settings and Profiles

Press the menu key and use the Foxkeys to carry out ring settings, switch on vibra call, set up profiles and carry out other device settings.

Setting and Activating Alarms

Press the menu key, then the Foxkey **ALARM SETTINGS**. – **DETECTION DURATION**: Duration of alarm situation before alarm is signalled on the handset. – **ALARM DELAY**: Alarm is signalled to the system only after set time has expired. – **ALARM SERVER MODE**: Activate if system is coupled with an alarm server. – No changes can be made without the valid alarm PIN.

Temporarily Deactivating the No-movement and Man-down Alarm

Press and hold down the menu key, then the Foxkey **ALARMS OFF FOR <DURATION>**, then **YES** (flashing alarm symbols). – Reset duration with **EDIT**. – Reactivate before expiry: Press **No**.

Hands-free Operation / Open Listening Mode

Make a call without holding the phone up to your ear. To activate or deactivate before or during the call: Press the menu key, then the Foxkey .

Warning! Do not hold the phone up to your ear as the volume rises sharply during hands-free operation!

Dialling by Name (Quickdial variant)

Select from any of the names stored in the telephone system:

1. Press each of the corresponding keys once for the first few letters. To separate the first and last name use the hash key (#) (the system administrator can tell you whether to enter the last or first name first).
2. Press the Foxkey **ABC**, then scroll vertically until the name you want is shown.
3. Press the call key to dial the stored number.

To access any external phone books available: Press the star key (*) before the first letter.

Forwarding Calls

1. Press the Fox **MENU**, then scroll with Fox , then press **FORWARD**.
 2. Scroll vertically up to **FORWARD TO SUBSCRIBER**, then press **OK**.
 3. Enter the call number and press **OK**.
-

Resetting Call Forwarding

1. Press the right navigation key to scroll until **RESET** is displayed.
2. Press **RESET**.

Transferring a Call

During a call:

1. Press **ENQUIRY CALL**, enter the number and wait until the call is answered.
 2. Press the call key; the call is transferred. If nobody answers, press the left navigation key to return to the first call.
-

Callback

The person is busy or does not answer:

1. Press the **CALLBACK** key.
 2. Press the call key; the display shows **CALL EXPECTED....**
As soon as the required call party is free, your phone places a call.
 3. Press the call key; the call party is called again.
-

User's Guide

Document No.

eud-0816, Version 1.0 – 10.2006

A more detailed User's Guide can be found at <http://www.aastra.ch/docfinder>