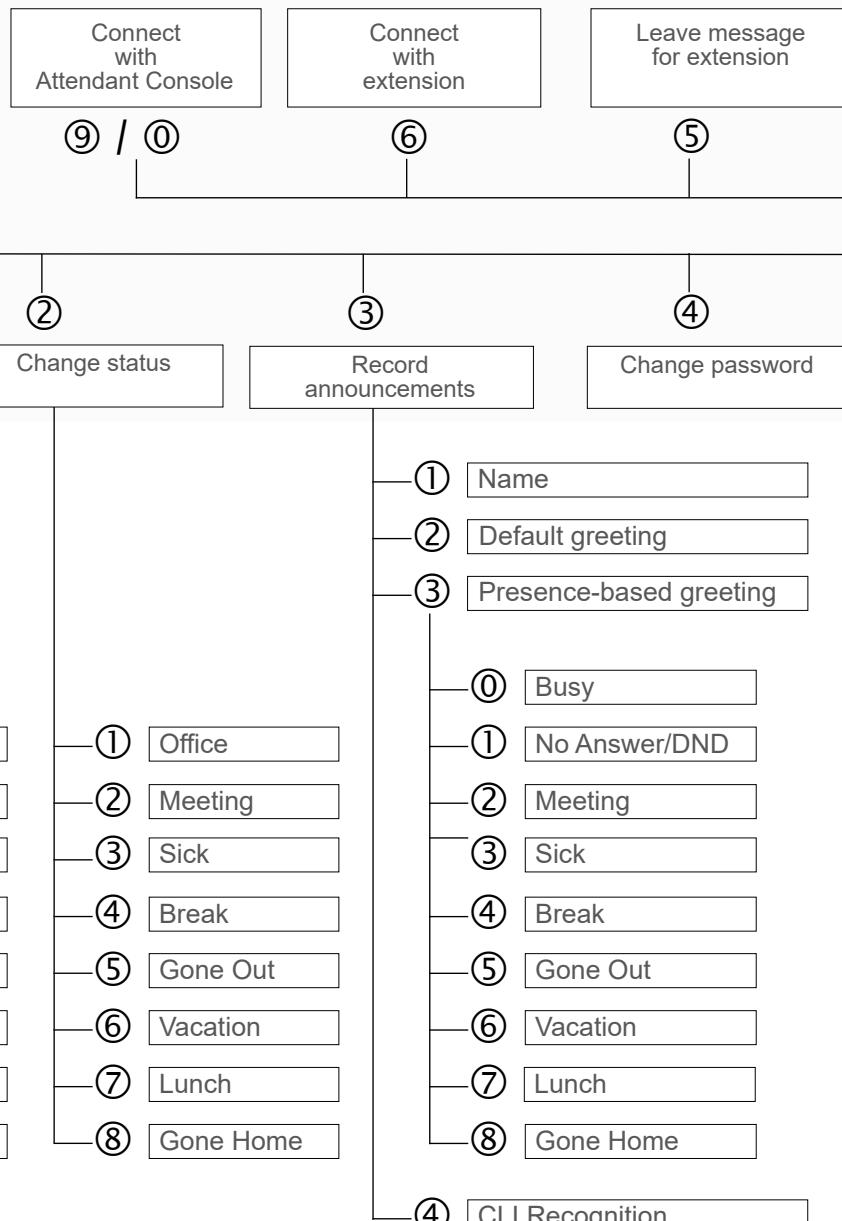


Internal call to voicemail box

- Call voicemail box (e.g., 351).

External call to voicemail box

- Call voicemail box (e.g., +49 89 1234-351)
- Enter office number and password.

**Shared keys:**

1 = Confirm

2 = Edit

* = Enter station number

= Up one level

UC Suite

Telephone User Interface (TUI)

Quick Reference Guide

This Quick Start Guide describes the basic functions of the voicemail box and how to use them over the phone. All functions are controlled using the keys on your phone. The voicemail box provides context-sensitive prompts to assist in the operation. These provide you with information on the possible options available in the current menu.

A31003-P3000-U102-5-7619

05/2024

mitel.com

