 


User Interface

Programmable Keys

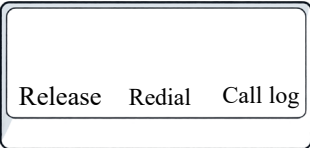

 
Your phone has three program-mable function keys, shown on the left with default configuration.




Fixed Function Keys




4-Way-Navigator

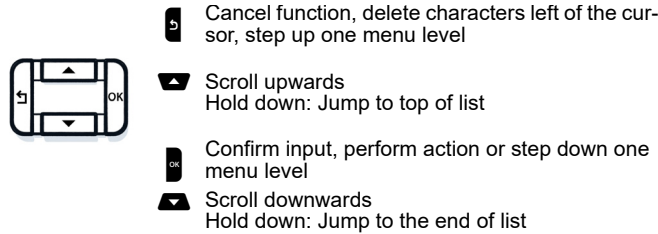

Audio keys

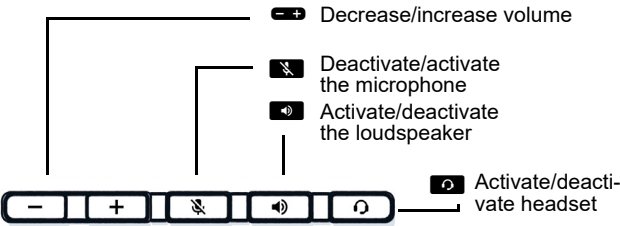 


Key Pad Shortcuts

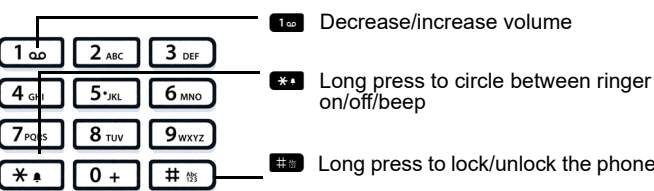 


Notification LED

 With the Notification LED different phone status can be identified:



Notification on the display

 The display of the status label will be controlled by the state of the key.
Line or function key can be pulsing or inverted similar to a LED.

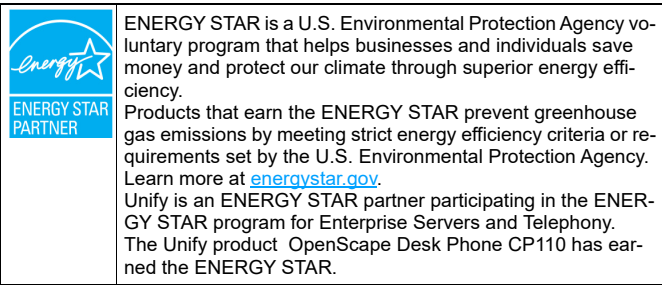

Unify
OpenScape
Desk Phone CP110

HFA

Quick Reference Card

mitel.com



© 2024 Mitel Networks Corporation. All Rights Reserved. Mitel and the Mitel logo are trademark(s) of Mitel Networks Corporation. Unify and associated marks are trademarks of Unify Software and Solutions GmbH & Co. KG. All other trademarks herein are the property of their respective owners.

09/2024
Reference No.: A31003-C1000-U133-2-7619

Using your Unify OpenScape Desk Phone CP110

Place a Call

- Lift handset, dial number or
- Dial number and lift handset or
- For handsfree mode: dial number.

Answer a Call

- Lift handset or
- for handsfree mode: press .

End a Call

- Hang up, or
- For handsfree mode: press .

Open listening

During a call with handset:

- Press .

Switch off open listening:

- Press .

Switch between Handset and Handsfree Mode

Switch to handsfree mode during a Call:

- Hold down  until you hang up handset.

Switch to handset:

- Lift handset.

Hold and Retrieve a Call

During a call with Party A:

- Press Hold key (if configured). Party A is put on hold.
- To retrieve a held call: press Retrieve line (if configured).

Using your Unify OpenScape Desk Phone CP110

Consultation

During a call with Party A:

1. Press . Party A is put on hold.
2. Call Party B.
3. If the conversation with Party B is finished, press  or wait, until Party B has hang up.

You are now connected again to Party A.

Toggle

During a call with Party A:

1. Press . Party A is put on hold.
2. Call Party B.
3. If connected to Party B, press  and  to toggle. Pressing  repeatedly toggles between Party A and B.

Make a Conference Call

During a call with Party A:

1. Press . Party A is put on hold.
2. Call Party B.
3. If connected to Party B, choose option Start conference on the display.

You are now in a conference call with Party A and B.

Transfer a Call

During a call with Party A:

 
1. Press . Party A is put on hold.
2. Call Party B.
3. If connected to Party B, choose option Start transfer on the display. Alternatively, the call can be transferred without consultation (blind transfer).

The party A will be transfered to Party B.

Call back

1. Call an internal Party. The Party does not lift the handset or is busy.
2. Press Callback on the Programmable key (if configured).
3. As soon as the not reached Party has hung up, the callback is triggered and your telephone rings.
4. Answer the call back. The not reached Party is called.

Programmable keys

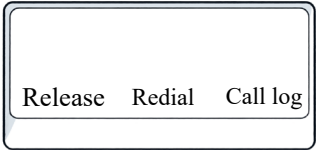

Your phone has three programmable function keys, shown on the left with default configuration.



Examples of Programmable keys

Function	Explanation
Call waiting	Allows a second incoming call while in an active call
Callback	Requests an automatic call back (busy/no answer)
Caller list	List of placed, answered and missed calls
Call forwarding	Forwards all incoming calls to the programmed destination when the line is busy
Call forward. no reply	Forwards all incoming calls to the programmed destination if they are not answered
Consult	Puts an active call on hold and provides a prompt for dialing
Pickup - directed	Picks up another ringing phone
Phonebook	Phonebook
Do not disturb	Incoming calls do not ring; callers hear the busy signal
Toggle/connect	Toggles OpenScape Voice services
Redial	Calls the last dialed number
Release	Ends a call
Repdial key	Dials pre-defined numbers and control sequences