



A MITEL
PRODUCT
GUIDE

OpenScape Desk Phone CP710

User Guide for Zoom Phone (SIP)

12/2025

Notices

The information contained in this document is believed to be accurate in all respects but is not warranted by Mitel Europe Limited. The information is subject to change without notice and should not be construed in any way as a commitment by Mitel or any of its affiliates or subsidiaries. Mitel and its affiliates and subsidiaries assume no responsibility for any errors or omissions in this document. Revisions of this document or new editions of it may be issued to incorporate such changes. No part of this document can be reproduced or transmitted in any form or by any means - electronic or mechanical - for any purpose without written permission from Mitel Networks Corporation.

Trademarks

The trademarks, service marks, logos, and graphics (collectively "Trademarks" appearing on Mitel's Internet sites or in its publications are registered and unregistered trademarks of Mitel Networks Corporation (MNC or its subsidiaries (collectively "Mitel, Unify Software and Solutions GmbH & Co. KG or its affiliates (collectively "Unify" or others. Use of the Trademarks is prohibited without the express consent from Mitel and/or Unify. Please contact our legal department at iplegal@mitel.com for additional information. For a list of the worldwide Mitel and Unify registered trademarks, please refer to the website: <http://www.mitel.com/trademarks>.

© Copyright 2025, Mitel Networks Corporation

All rights reserved

Important information

The information contained in this document is believed to be accurate in all respects but is not warranted by Mitel Europe Limited. The information is subject to change without notice and should not be construed in any way as a commitment by Mitel or any of its affiliates or subsidiaries. Mitel and its affiliates and subsidiaries assume no responsibility for any errors or omissions in this document. Revisions of this document or new editions of it may be issued to incorporate such changes. No part of this document can be reproduced or transmitted in any form or by any means - electronic or mechanical - for any purpose without written permission from Mitel Networks Corporation.

	<p>For safety reasons, the telephone should only be supplied with power:</p> <ul style="list-style-type: none">• using the original power supply unit.• over a LAN with PoE (Power over Ethernet), which complies with the IEEE 802.3af standard.
	<p>Never open the telephone. Should you encounter any problems, consult your administrator.</p>
	<p>Use only original accessories. The use of other accessories is hazardous and will render the warranty, extended manufacturer's liability and the CE and other markings invalid.</p>

Software update

During a software update, the phone must not be disconnected from the power supply unit or the LAN. An update action is indicated by messages on the display and by flashing LEDs.

Care and cleaning instructions

- Never spray the phone with liquids as the penetrating fluids can lead to malfunctions or may damage the device.
- Do not use substances such as alcohol, chemicals, solvents or scouring

agents, as these substances can lead to surface damage.

- Clean the phone with a soft and slightly damp cloth.

Online documentation

This document along with additional information is available online at Mitel Doc Center.

Technical notes, current information about firmware updates and Zoom Phone features can be found on the Internet at:

- Unify OpenScape Experts Wiki:

[OpenScape Desk Phone CP in Zoom Phone Environment](#)

- Zoom support: [Zoom Phone Features](#)

Location of the telephone

- The telephone may only be operated using the LAN cabling internally in the building. The device should be connected to the IP infrastructure using a shielded LAN cable: Cat-5 for 100 Mbps or Cat-6 for 1000 Mbps. Make sure in the building installation that this cable shielding is earthed.
- When using the additional Wi-Fi dongle CP10 when connecting the phone to the network, make sure that the network security standards (e.g. encryption) and availability are met
- The telephone is designed for operation in a protected environment within a temperature range of 5 °C to 40 °C.
- Do not install the telephone in a room where large quantities of dust accumulate; this can considerably reduce the service life of the telephone.
- Do not expose the telephone to direct sunlight or any other source of heat, as this is liable to damage the electronic components and the casing.
- Do not install the telephone in bathrooms or shower rooms.

Product-oriented environmental protection

Unify is committed in terms of its product strategy to bringing environmentally friendly products to market, taking account of the entire product life cycle. Unify

strives to acquire the relevant environmental labels for its products in the event that the environmental label programs permit qualification for individual Unify products.

Energy Star



ENERGY STAR is a US Environmental Protection Agency voluntary program that helps businesses and individuals Save money and protect our climate through superior energy efficiency.

Products that earn the ENERGY STAR prevent greenhouse gas emissions by meeting strict energy efficiency criteria or requirements set by the US Environmental Protection Agency.

Unify is an ENERGY STAR partner participating in the ENERGY STAR program for Enterprise Servers and Telephony.

The Unify products OpenScape Desk Phones have earned the ENERGY STAR. Learn more at energystar.gov

License information

For further information about EULA (End User License Agreement) and Open Source licenses, consult your administrator or the web-based management (WBM).

MARKS



CONFORMS TO
ANSI/UL STD 62368-1
CERTIFIED TO
CAN/CSA C22.2 No. 62368-1

Intertek

3187698

Contents

Important information	2
Software update	2
Care and cleaning instructions	2
Online documentation	3
Location of the telephone	3
Product-oriented environmental protection	3
License information	4
Marks	4
OpenScape Desk Phone in Zoom Phone environment	14
Connecting to Zoom Phone	14
Certified Zoom Phone provisioning	14
Updates and Configuration	14
Emergency Services	15
Security and Audio	15
Network Requirements	15
OpenScape Desk Phone Basic and Enhanced Features	16
Basic Call features	16
Enhanced Call Features	16
General information	17
About this manual	17
Icons used in the manual	17
Displays for describing operation	18
Selecting and confirming actions	18
Action not selected	19
Conversation display	19
Service	20
Intended use	21
Telephone type	21
Speakerphone quality and display legibility	21

Multi-line telephone	21
Repair and recycling concept, extending performance capability	22
Recycling and disposal of equipment in the OpenScape Desk Phone family	22
Repair reliability and spare part supply	23
Expandability of the performance	24
Remote configuration for cloud service providers	25
Connect the telephone	25
From factory defaults to operational telephone	25
Getting to know the OpenScape Desk Phone CP710	26
The user interface of the phone	26
Function keys	27
Fixed function keys	28
Programmable function keys on the phone	28
Navigation keys	29
Audio controls	30
Dialpad	31
Display	34
Display brightness	34
Display contrast	34
Home screen	35
Displays on the status line for adjusting the volume	42
Voicemail	43
Adjusting the display angle	43
Different display interfaces	43
Context-dependent displays	45
Actions with function keys	45
Action via dialpad	45
Actions with navigation keys	45
Ports on the underside of the phone	46
Threading the connection cables	47
How to use network connections	47
Using the USB port	48
About key modules	48
Function keys on the key module	48

Key module KM410.....	49
Key module KM710.....	50
Updating the phone.....	51
Viewing system notifications.....	51

Operating the OpenScape Desk Phone CP710..... 52

Conversations.....	52
Opening details of a conversation or conducting a call.....	53
Creating or editing conversations.....	54
Searching for conversations.....	56
Filtering conversations.....	59
Displaying the history of a conversation.....	60
Deleting conversations.....	60
Marking all conversations as read.....	62
Telephony interface.....	63
Telephony view.....	63
Programmable function keys.....	64
Programmable keys in the menu "Favourites".....	64
Programmable keys on the key module.....	65
Answering machine ("Voicemail").....	66
Settings menu.....	66
User settings.....	66
Administrator settings.....	68

Configuring the phone default settings..... 69

Adjusting the display brightness.....	69
Adjusting the default volumes.....	69
Adjusting the key clicking sound.....	70

Making calls..... 73

Incoming calls.....	73
Answering a call via the handset.....	73
Answering a call via the loudspeaker (speakerphone mode).....	74
Answering a call via the headset.....	74
Answering a video call.....	75
Rejecting a call.....	78

Deflecting a call.....	79
Outgoing calls.....	79
Off-hook dialling.....	79
Dial with the handset on hook.....	80
Dialling with the selected dialling key.....	81
Dialling from conversations.....	82
Redialling.....	83
Calling back a missed call.....	83
Using autodial delay.....	84
During a call.....	85
Activating or deactivating the microphone.....	85
Changing the volume.....	85
Switching from handset to speakerphone mode.....	85
Switching from speakerphone mode to the handset.....	86
Switching from headset to speakerphone mode.....	86
Open listening to the room.....	86
Displaying DTMF digits.....	87
Using pre-configured DTMF codes.....	87
Consulting a second party.....	88
Switching to the held party (alternating).....	89
"Conference" calls.....	89
Putting on hold and retrieving Alternately or simultaneously.....	94
Connecting parties.....	95
Placing a call on hold.....	95
Call waiting (second call).....	96
Transferring a call.....	98
Ending a call.....	99
Configuring local call forwarding.....	100
Configuring "Call forwarding" controls.....	100
Setting alerts.....	101
Using Microsoft® Exchange.....	101
Searching for contacts via conversations.....	102
Listening to voice mail.....	103

Using Bluetooth..... 105

Discoverability.....	105
Pairing and connecting.....	105

Pairing Bluetooth devices.....	106
Connecting or disconnecting a Bluetooth device.....	107
Transferring contacts.....	107
Receiving a vCard.....	108
Sending a vCard.....	108
Synchronize contacts with a paired device via Bluetooth.....	109
Using a Bluetooth headset.....	110
Pairing and connecting a Bluetooth enabled headset.....	111
Testing a Bluetooth headset.....	111
Using a Bluetooth enabled conference phone.....	111
Pairing and connecting a Bluetooth enabled conference phone.....	112
Testing the Bluetooth enabled conference phone.....	112
Using a Bluetooth hands-free device.....	113
Incoming HFAG call.....	113
Connected HFAG call.....	113
Outgoing HFAG call.....	113
HFAG call states in "Conversations".....	114
Using a Bluetooth keyboard.....	114
Using a Bluetooth "Remote button".....	115
Trigger on reconnect.....	116
Using a Bluetooth temperature sensor.....	117
Pairing and connecting a Bluetooth temperature sensor.....	117
Temperature and humidity measurements.....	117
Deactivating the temperature sensor.....	118
Bluetooth settings.....	118
Activating Bluetooth.....	118
Changing the Bluetooth name of the phone.....	118
Managing Bluetooth devices.....	119
Disconnecting a Bluetooth device.....	119
Disconnecting a Bluetooth enabled device automatically.....	120
Setting the proximity threshold.....	120
Deactivating audio.....	121
Removing a Bluetooth device from the list.....	122
Renaming a Bluetooth device in the list.....	122
Blacklist for Bluetooth devices.....	123
Adding Bluetooth devices to the blacklist.....	123
Removing a Bluetooth device from the blacklist.....	123

Beacon.....	124
Activating “iBeacon” or “Eddystone”.....	124
Connecting to a server for phone beacons.....	125
Setting the UUID.....	125
Setting classes for “Major” and “Minor”.....	125

Programming the function keys..... 127

List of available functions.....	127
About programming a key.....	128
Programming a key.....	128
Labelling function keys.....	130
Programming enhanced functions.....	130
Using contact data from a conversation.....	132
Deleting an assigned function from a key.....	132
Setting up a selected dialling key.....	133
Resetting all assigned functions to keys.....	134

Making calls in the team..... 135

Group call.....	135
Group Call pickup via BLF Key.....	135
Picking up a group call immediately.....	136
Ignoring a group call.....	136
Making calls via multiple lines (“multi-line”.....	136
Line or trunk keys.....	136
Configuring Associated Lines.....	138
Incoming calls.....	139
Call monitoring.....	141
Call parking.....	143
During a call.....	146
Settings for MultiLine (keyset).....	149
Rollover for a line.....	151

Privacy and security..... 152

“Do not disturb”.....	152
Enabling do not disturb via “Presence”.....	152
Enabling do not disturb via a key.....	152

Allowing "Do not disturb".....	152
Security.....	153
Setting the user password.....	153
Deactivating the password prompt.....	155
Locking the phone.....	156
Other settings and functions.....	159
Audio settings.....	159
Ringer type.....	159
Switching to a ringer beep.....	159
Pattern melody.....	160
Pattern sequence.....	160
Room character.....	161
Open listening mode.....	161
Setting the headset port use.....	162
Special ringers.....	163
Activating or deactivating the ringer.....	164
Configuring direct video.....	164
Country-specific setting.....	164
Display language.....	165
Date display format.....	166
Time display format.....	166
Screen saver.....	167
Activating the screen saver.....	167
Setting the screen saver activation interval.....	168
Uploading images for the screen saver.....	169
Energy saving mode.....	169
Setting daylight saving time.....	170
Setting the difference between daylight saving and standard time.....	170
Enabling automatic daylight saving time.....	171
Displaying the date and time settings.....	171
Displaying network information.....	172
Resetting user data.....	172
Managing avatar images.....	173
Assigning a contact avatar.....	174
Programming call forwarding.....	175
Using call forwarding.....	176

Activating immediate call forwarding.....	176
Saving destination phone numbers for call forwarding.....	176
Managing call forwarding.....	177
Copying and pasting destination phone numbers.....	178
Activating or deactivating call forwarding.....	178
Defining the ring duration before call forwarding is activated.....	179
Call forwarding chain.....	179
Enhanced call forwarding.....	180
CTI calls.....	181
Beep on auto-answer.....	181
Beep on auto-reconnect.....	182
Enabling or disabling the hold reminder tone.....	182
Setting the hold reminder time.....	183
Enabling or disabling "Hold and hang-up".....	183
Enabling or disabling "Music on hold".....	184
Allowing call joining.....	184
Permitting call deflection.....	185
Deflecting to a phone number from an existing local conversation.....	186
Deflecting to a DSS number.....	186
Allowing call waiting.....	186
Connecting contacts by hanging up.....	187
Allowing call transfer.....	187
Settings for autodial delay.....	188
Allowing "Busy when dialling" for outgoing calls.....	189
Allowing "Transfer on ring".....	189
Enabling immediate dialling.....	190
Allowing a conference.....	190
Allow joining in a conference.....	191
Activating or deactivating the LED notification.....	191
Selecting the voicemail messages LED notification.....	192
Selecting the LED notification for missed calls.....	192
Clear LED notification for missed calls.....	193
Call logging.....	193
Disable logging.....	193
Displaying the missed call log.....	194
Call recording.....	195
Recording modes.....	195

Explanations of recording.....	196
Recording calls.....	198
Diagnostic data.....	202
Individual settings that impact energy efficiency.....	203
Web interface (WBM).....	204
Launching the web interface.....	204
Administrator settings.....	204
Logging into the user settings.....	204
User menu.....	205
Licenses.....	205
Importing contacts via WBM.....	205
Exporting contacts via WBM.....	207
Fixing problems.....	208
Caring for your phone.....	208
Troubleshooting.....	208
Messages during remote configuration.....	209
Index.....	211

OpenScape Desk Phone in Zoom Phone environment

Starting with SIP software V2 R1, the OpenScape Desk Phone CP G2 phones are released for Zoom Phone. Zoom Phone is a cloud VoIP service enhanced with AI capabilities.

The CPX10 series is fully Zoom-certified and supports an extensive set of Zoom Phone features. The list of supported features by Zoom Phone can be found on the official Zoom support page: [Supported desk phone features](#).

Any SIP software preinstalled on the CP phone is sufficient to start with Zoom Phone. During the initial provisioning, the phone automatically downloads and installs the appropriate Zoom-approved SIP software version.

Connecting to Zoom Phone

CP phones can be connected either as a 3rd-party SIP device or as a certified Zoom Phone.

CERTIFIED ZOOM PHONE PROVISIONING

- Zero Touch Provisioning (ZTP): The phone connects automatically to Zoom Phone. No local setup is required.
- Assisted Provisioning: If automatic connection fails, the admin may need to enter minimal information (handled centrally by Zoom).

Updates and Configuration

- Firmware, software deployment, and configuration are fully managed by Zoom.
- Custom provisioning templates allow Zoom administrators to tailor the phone settings.

For more information, see the official Zoom support page: [Managing phones and devices](#).

Emergency Services

Phones can submit location information for nomadic emergency services if supported by the network.

Security and Audio

- Every connection is secured by SIP over TLS and AES-256.
- OPUS is used as high quality audio codec.
- Cloud failover ensures minimal service interruption.

Network Requirements

Ensure your network allows connectivity to Zoom Phone. Your IT administrator manages any required firewall or port configurations.

OpenScape Desk Phone Basic and Enhanced Features

Basic Call features

All basic call features are supported with Zoom phone:

- Basic call
- Hold
- Transfer
- Three party conference (local)
- Voicemail
- Call Forward (local)
- Multiple Call Handling (up to three call appearances)

Enhanced Call Features

Additionally, the following enhanced call features are supported by the CP410 and CP710 Desktop phones:

- [Multiple call handling with three line keys](#)
- [Speed Dial Keys](#)
- [Busy Lamp Field](#)
- [Call Park](#)
- [Group Pickup](#)
- [Call Delegation](#)
- [Shared Line Group](#)
- [Privacy Mode](#)
- [Call Flip](#)
- [Call Monitoring \(Barge, Monitor, Whisper, Take over, Listen\)](#)
- [Multi Party Conference \(only beta, on customer request\)](#)

General information

About this manual

This document contains general descriptions of the technical options available on OpenScape CPx10 phones, which may be connected to Zoom Phone. Some features may not always be available in individual cases, depending on your Zoom Phone provisioning and administrator settings.

If a particular function on your phone is not available as described, this may be due to one of the following reasons:

- The function is not configured for you and your telephone. Please contact your system administrator.
- Your communication platform or Zoom Phone configuration does not include this function. Please contact your administrator for information on enabling additional features.

This User Guide should be read and followed by every person installing, operating or programming the OpenScape Desk Phone.

For your own protection, read the section dealing with safety in detail. Follow the safety instructions carefully in order to avoid endangering yourself or other persons and to prevent damage to the unit.

This User Guide is designed to be simple and easy to understand, providing clear step-by-step instructions for operating the Zoom-connected OpenScape Desk Phone.

ICONS USED IN THE MANUAL

Operations and settings that can be made both at the phone and over the web interface are indicated by an icon and page reference.



This icon refers to an operation or setting performed via the web interface.



This icon refers to an operation or setting performed directly on the phone.

Indicates important additional information in relation to handling.

Indicates required intervention by the Administrator.


Displays for describing operation

Keys required to perform an action, such as  or  and the associated display text, are shown in the highlighted column on the left. The action is described in the main column on the right.

To improve the legibility of the user guide, the operating steps are not always shown in full.

SELECTING AND CONFIRMING ACTIONS

Original illustration on display

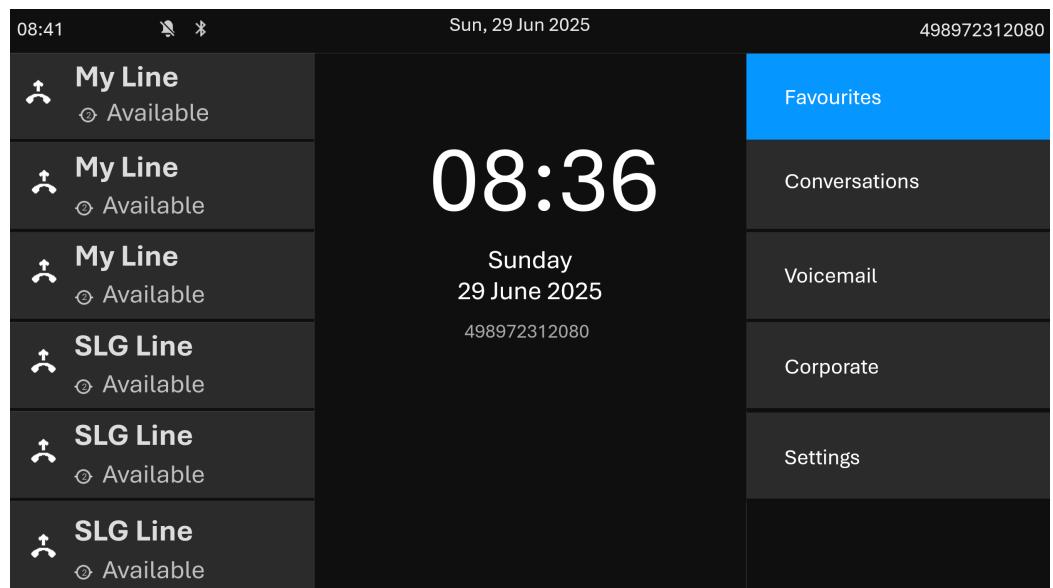


Step-by-step illustration in the user guide

 Charlie Miller

The information area on the left of the display is shown in a left-aligned field.

The action area on the right of the display changes colour according to the action required or the status.

 Settings



When an action is selected, it will be shown right-aligned in blue.


The action is executed by selecting the corresponding function key.

OK

The selected function can also be confirmed using the key "OK".

ACTION NOT SELECTED

Display illustrations

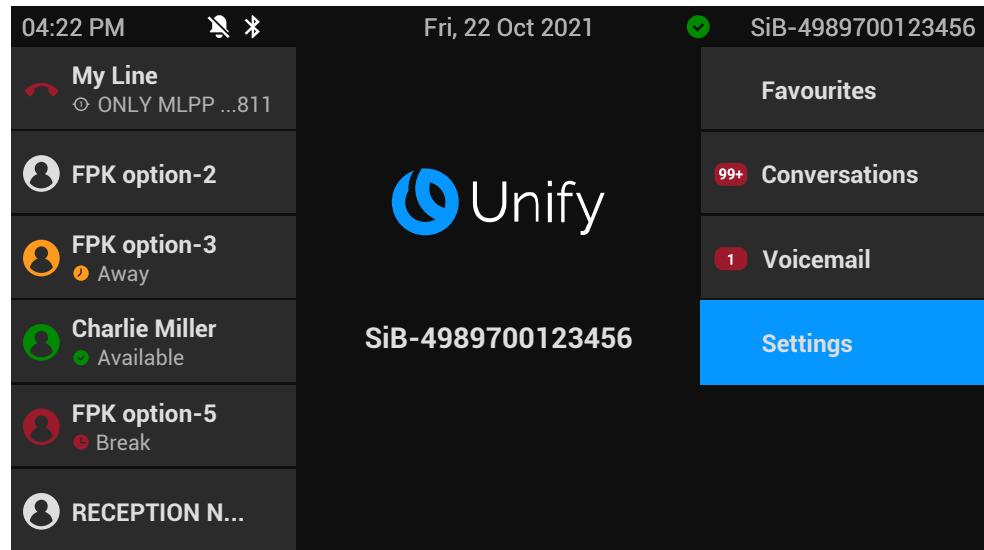

Step-by-step illustration in the user guide

Favourites




When an action is not selected, it will be shown right-aligned in a dark grey colour. The corresponding key is also shown.

The action can be executed by pressing the key even if it has not been selected.


CONVERSATION DISPLAY

Depending on the Landing screen settings, when the phone is idle, the first entry in the conversation list is highlighted and selected.

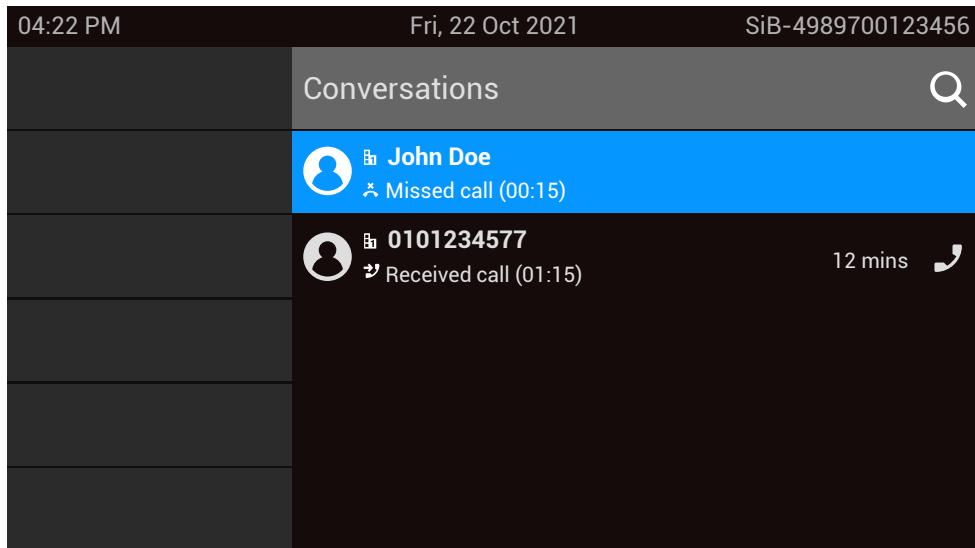

Information displayed for a selected conversation

 Melanie Miller




If a conversation contact is selected in the list, it will be highlighted in blue.

Accept and select the conversation by pressing the adjacent function key or press **OK** to establish the connection.



To open the context menu, press the navigation key.

 John Doe



Information displayed for a non-selected conversation

A conversation is displayed with a grey background if it is not selected.

Press the adjacent navigation key to establish the connection.

Service

The service department can only help you if you experience problems or defects with the phone itself.

Should you have any questions regarding operation, your specialist retailer or Network administrator will be glad to assist you.

For queries regarding connection of the telephone, contact your Network provider.

If you experience problems or defects with the phone, dial the service number for your country.

Intended use

The OpenScape Desk Phone CP710 is a desktop unit designed for voice transmission and for connection to the LAN. It can also be used as a workstation device. The OpenScape Desk Phone CP710 can also be connected to Wi-Fi with the additional Wi-Fi dongle CP10.

Any other use is regarded as unintended.

Telephone type

The identification details (exact product designation and serial number) of the telephone can be found on the nameplate on the underside of the base unit. Specific details concerning your communication platform can be obtained from your administrator.

Have this information ready when you contact our service department regarding faults or problems with the product.

Speakerphone quality and display legibility

- To ensure good speakerphone quality, the area in front of the microphone (bottom right of the telephone front panel) should be kept clear. The optimum distance is approx. 50 cm.
- Proceed as follows to optimize display legibility:
 - Turn the phone to tilt the display to ensure you have a frontal view of the display and avoid light reflections.

Multi-line telephone

The OpenScape Desk Phone CP710 can be used as "multi-line telephone", meaning multiple lines—direct numbers or shared lines—can be assigned to the phone. Each line appears on its own line keys, allowing you to make and receive calls on different numbers.

The programmable keys are configured as line keys on multi-line phones ("Programming the function keys" → page 127).

All lines and their status is displayed in the screen Favourites, configurable with the 12 available programmable keys. For additional line capacity, you can attach one or more key modules.

You can customize your line keys in the Zoom web portal (see also [Customizing line keys and positions settings](#)). This is useful if:

- You have multiple direct numbers
- You are part of a call delegation setup (executive/assistant scenarios)
- You are a member of a shared line group

For direct numbers, you can modify the order, outbound caller ID, and alias.

For shared lines, you can modify the order and alias.

After customization, the desk phone will automatically reboot to apply the updated configuration.

The CPx10 phones support Keyset-style features when connected to a Zoom server. This allows users on a shared line to place calls on secondary line keys, answer calls for others, or pick up a call that another phone placed on hold.

Repair and recycling concept, extending performance capability

This section contains additional information in accordance with the basic award criteria for the "Blue Angel" eco-label as specified in RAL-UZ 220. The CPx10 telephones comply with all legal requirements of the country in which they are marketed.

RECYCLING AND DISPOSAL OF EQUIPMENT IN THE OPENSCAPE DESK PHONE FAMILY

Return of OpenScape Desk Phone waste equipment.

a) Legal and other foundations

The take-back of equipment and spare parts is based on

- EU Directive 2012/19/EU (WEEE),
- The German "Act Governing the Sale, Return and Environmentally Sound Disposal of Electrical and Electronic Equipment" (ElektroG),
- The criteria of the Blue Angel RAL UZ 220 for "Telephone systems and Corded Voice-Over IP Telephones".

b) Separate collection according to ElektroG

Users of electrical and electronic equipment are obliged to collect waste equipment separately and supply for proper disposal.

This waste equipment must not be disposed of together with unsorted municipal waste (normal household waste). Separate collection is a condition for reuse, recycling and efficient recovery of waste equipment and the basis for the recovery of materials.

c) Take-back according to the criteria of the Blue Angel

In addition to the legal requirements governing take-back of electrical and electronic equipment, Mitel Networks Corporation takes back the OpenScape Desk Phone CPx10 telephones introduced on the market in Germany and manufactured after March 2014. Insofar as no direct collection of this waste equipment has been agreed, the OpenScape Desk Phone end-of-life phones can be returned free of charge to the following address:

eds-r gmbh // rücknahmesysteme
Maybachstr. 18
90441 Nuremberg, Germany

d) Reuse, recycling and recovery

Attention is paid to ease of disassembly / recycling of the OpenScape Desk Phone waste equipment as early as the product development stage.

- Reuse: The old appliances are repaired and refurbished and put into the spare parts cycle, where they are then reused.
- Recycling and recovery of OpenScape Desk Phone CPx10 telephones that are no longer usable: Before further treatment, the end devices are roughly dismantled and fed into various recycling processes. The various metals are separated in special shredding plants for electronic waste. Copper and precious metals are further processed in refining. Aluminium and iron are separated and sent to the smelter.

REPAIR RELIABILITY AND SPARE PART SUPPLY

Mitel Networks Corporation guarantees repair support and spare part supply for up to 6 years following product discontinuation of the OpenScape Desk Phone phones.

EXPANDABILITY OF THE PERFORMANCE

The functionality of all OpenScape Desk Phone CPx10 phones can generally be extended by software updates.

If necessary, contact your administrator or system administrator or your sales partner of Mitel Networks Corporation.

Remote configuration for cloud service providers

Connect the telephone

Connect the telephone to the LAN. If the power is not supplied by the LAN cable, connect a power supply if appropriate (the power supply is not needed with PoE). The telephone should now boot.

The telephone recognizes based on the stated conditions that a remote configuration is about to be performed and starts the process.

From factory defaults to operational telephone

This section describes the Remote administration process, from the initial factory defaults to the operational telephone.

If your telephone is already operational, continue reading from section "Getting to know the OpenScape Desk Phone CP710" → page 26.


You can start up your new OpenScape Desk Phone yourself using a remote maintenance function. The prerequisites for this are:

- The administrator has provided you with a PIN for the initial start-up.
- You have a LAN connection with access to the internet.
- You have a new CP710 phone that you want to start up using the remote maintenance function.


Getting to know the OpenScape Desk Phone CP710

The following sections describe the most frequently used controls and displays.

The user interface of the phone

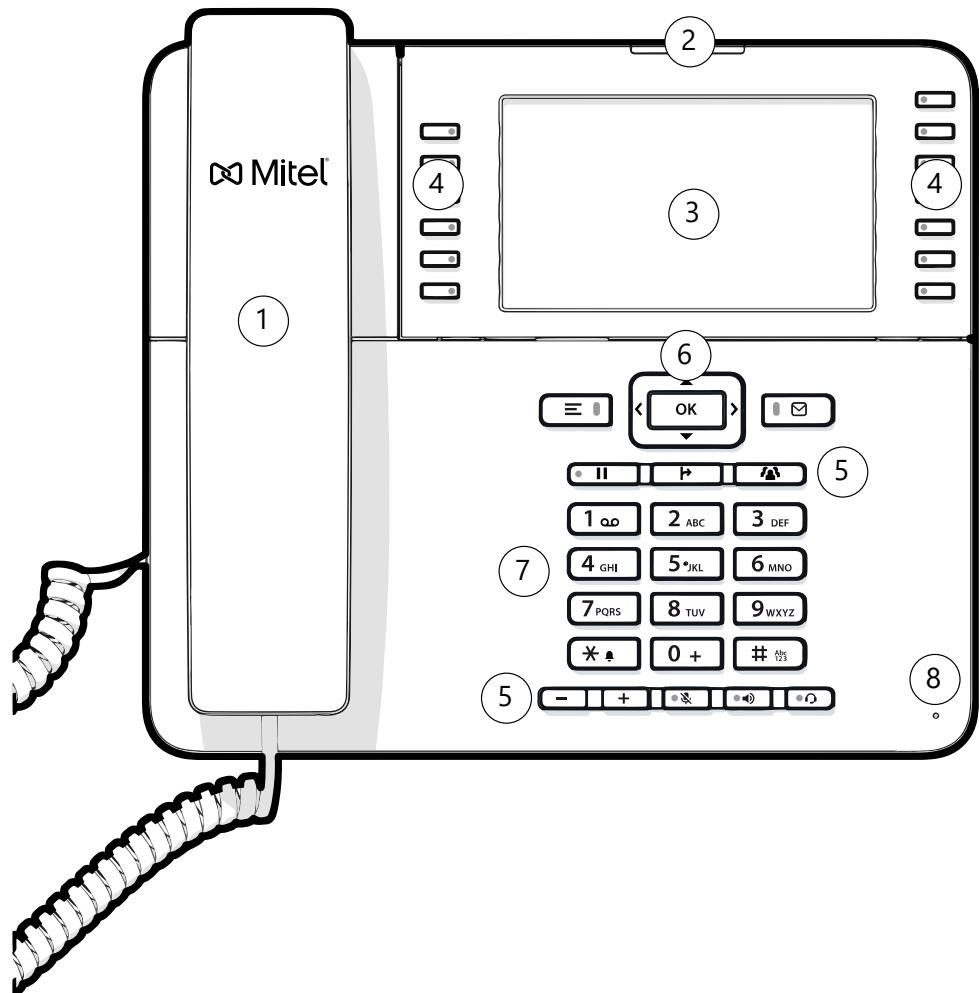

1	You can make and receive calls as normal using the handset .
2	The status LED displays the phone connection status. Incoming calls and new voice mails are visually signalled via the notification LED.
 
<p>3</p>	<p>The display shows information during telephone operation.</p>
<p>4</p>	<p>The programmable function keys on the left of the display can be set to various functions.</p> <p>The fixed function keys on the right of the display correspond to the fixed functions on the display.</p>
<p>5</p>	<p>The function keys (non-programmable) are assigned to the following functions:</p> <p> : Provides access to the user menu for locally controlling the phone settings.</p> <p> : Allows voice mails to be managed.</p> <p> : Hold or retrieve the active call.</p> <p> : Transfer a call to another contact.</p> <p> : Enable access to the conference functions.</p> <p> : Activate or deactivates the speakerphone during an active call.</p> <p> : Activates or deactivates the headset.</p> <p> : Increases or decreases the speaker or headset volume.</p> <p> : Activates or deactivates the microphone. This prevents the other party from listening in, e.g. when consulting with someone else in the room or in case of background noise.</p>
<p>6</p>	<p>The navigation keys help you navigating through the various phone functions, applications and configuration menus.</p>
<p>7</p>	<p>The dialpad can be used to enter phone numbers and write text.</p>
<p>8</p>	<p>You can interact with calls with the microphone even when the handset is hung up.</p>

FUNCTION KEYS

Function keys on the phone can have the following options:

- “Soft keys” or with a function that is assigned through the settings (see “[Programming the function keys](#)” → page 127)

- Function keys with predefined functions that cannot be changed, e.g. for "Favourites".

Key	Function when key is pressed
	Function key next to the display: Activates the function shown next to the key on the display or opens an additional menu. If there is no description on the display next to the key, the key is not active.

FIXED FUNCTION KEYS

You can switch to the function applied to these keys.

Key	Function when key is pressed
	Switches between current screen and main menu (see "Different display interfaces" → page 43).
	Switches to Presence and back (see "Presence" → page 1).
	Provides access to the voice mail system
	Puts current call on hold, or retrieves from hold
	Transfer key: puts a call on hold and gives you dial tone to call another party
	Establishes a conference call

PROGRAMMABLE FUNCTION KEYS ON THE PHONE

Your OpenScape Desk Phone has twelve programmable function keys (with LED) on both sides of the display when in the screen "Favourites", which you can program with different functions or phone numbers.

Each programmable function key has two levels and functions can be programmed on either level.

The status of a function is shown by the LED display for the corresponding function key. Depending on how they are programmed, you can use the keys as follows:

- Function keys, see "Programming the function keys" → page 127


Line and direct station selection (DSS) keys can only be programmed by the administrator via the program or service menu.

Meaning of LEDs on function keys

LED	Meaning of function key
Off	The function is deactivated.
Lights up green	The function is activated.
Lights up red	The line is busy (line or DSS key).
Lights up green	Call forwarding is active.
Blinking green	A Group pickup call is available. A call is incoming (line or DSS key).
Blinking amber	A recall is active (only line key). A call is on hold (only line key).

NAVIGATION KEYS

This control allows you to move between input fields and navigate in lists and menus.

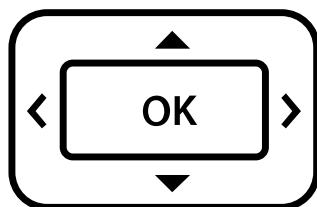

The pictograms for the navigation keys in this manual do not look identical to the navigation keys on the hardware.

Key / pictogram	Functions when key is pressed
	<ul style="list-style-type: none"> • In lists and menus: One level up • Entry selected: Cancel action • In input fields: Delete character to the left of the cursor
	<ul style="list-style-type: none"> • In lists and menus: One level down
	<ul style="list-style-type: none"> • In lists and menus: Scroll up • Press and hold: Skip to the start of the list or menu
	<ul style="list-style-type: none"> • In lists and menus: Scroll down • Press and hold: Skip to the end of the list or menu
	With entry selected: <ul style="list-style-type: none"> • Perform action • Confirm your selection

AUDIO CONTROLS

Audio keys


Key	Function when key is pressed
	Activates and deactivates the loudspeaker "Answering a call via the loudspeaker (speakerphone mode)" → page 74.
	Activates and deactivates the headset "Answering a call via the headset" → page 74.
	Activates and deactivates the microphone (also for speakerphone mode) "Activating or deactivating the microphone" → page 85.

Volume



Use the controls to adjust the properties of your phone, for example the volume.

DIALPAD

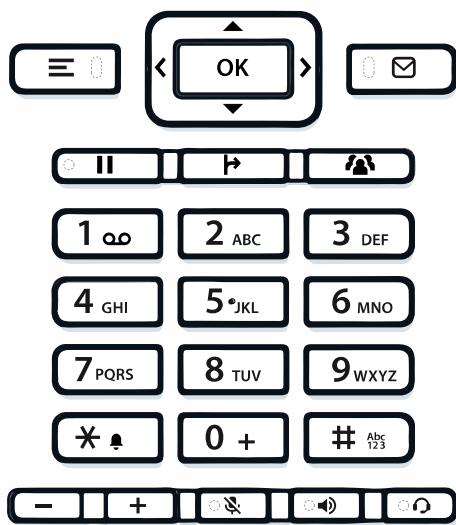

You can only use the digits 1 to 9 and 0 as well as the * and # characters when dialing a number.

In situations where text input is possible, for example when entering the user password, you can also use the dial keys to enter text in addition to the digits and special characters mentioned.

For this, press the key repeatedly until text input is displayed (see "Input editor" → page 32).

When entering text, all characters available for the key pressed and the character selected are briefly displayed.

Character overview

The character overview depends on the current language setting.

Key	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x	14x	15x	16x	17x
	w	x	y	z	9												
	.	*	1	#	,	?	,	"	+	-	()	@	/	:	-	
	0	+															
	(d)																

(a) Special characters (not in 123 mode)

(b) Space

(c) Extended character

(d) Toggle between uppercase and lowercase and number entry

Multi-function keys

Key	Function during text input	Function when held down
	Types special characters	<ul style="list-style-type: none"> • 2 seconds: Ringer off • 3 seconds: Beep rather than ringer
	Switches between uppercase and lowercase text and number entry: <ul style="list-style-type: none"> • "Abc" mode • "ABC" mode • "123" mode 	Activates the telephone lock
	Types special characters (not in 123 mode).	Calls the answering machine.

Input editor

Additional options are available in the text editor. This is used when programming a forwarding destination, for example. In this way, you can, for example, move the cursor freely and copy or insert text.

OK

Use the key to select further editor functions via the navigation keys and confirm each one of the following items:

- OK: Applies changes and closes the editor
- Delete: Deletes characters from right to left
- Cancel: Discards changes and exits the editor

- Mode (# can also be used here to switch):
 - 123: Digits only
 - ABC: Uppercase letters only
 - Abc: First letter in uppercase, subsequent letters in lowercase
 - abc: Lowercase letters only
- Move cursor left: Moves the cursor to the left
- Move cursor right: Moves the cursor to the right
- Copy: Copies the entire content to the clipboard
- Paste: Inserts the entire content from the clipboard at the cursor position

Text input

Where text input is possible, you can use the dialpad to input text, punctuation and special characters in addition to the single-digit numbers 0...9 and the hash-tag (#) and asterisk (*) symbols.

Example



To enter the capital letter "U", press the hash key # on the dialpad. All available characters for this key are displayed during input below the input field.

- Press the numerical keys repeatedly to enter the letter.
- To enter a digit in an alphanumerical input field, press the relevant key and hold it down.



Complete your input by pressing the corresponding function key.

Number input

If you press a dialpad key when the phone is in idle mode, the screen displays an input field for entering single-digit numbers.



You can only enter the numbers 0...9 as well as the characters * and # via the dialpad in 123 mode (indicated at the left-hand margin of the input field).

Alphabetic labelling of dial keys is also useful when entering vanity numbers (letters associated with the phone number's digits as indicated on the phone spell a name, e.g. 0700 - PATTERN = 0700 - 7288376).



Complete your input by pressing the corresponding function key.

Display

The various screens displayed in the following sections depend on the configuration by the administrator. Some items may not be displayed if not configured.

DISPLAY BRIGHTNESS

You can adjust the display brightness to suit your ambient lighting.



Press the key to open the main menu.



Open "Settings".



Open "User settings".



Enter and confirm the user password, if required.




Select "Phone".



Select "Display".



Select "Brightness". The current setting is displayed.

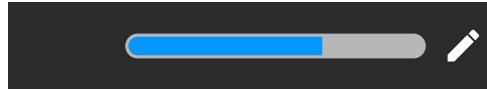

Select "Edit".



Use the function key to increase the value.



Use the function key to decrease the value.

- Optionally, use the keys on the dialpad.



Save the setting.


DISPLAY CONTRAST

The OpenScape Desk Phone OpenScape Desk Phone CP710 comes with a high-resolution colour LCD display.

The contrast settings cannot be changed.

HOME SCREEN

If no calls are taking place or settings being made, the phone is in idle mode. The screen shown depends on the Landing screen settings.

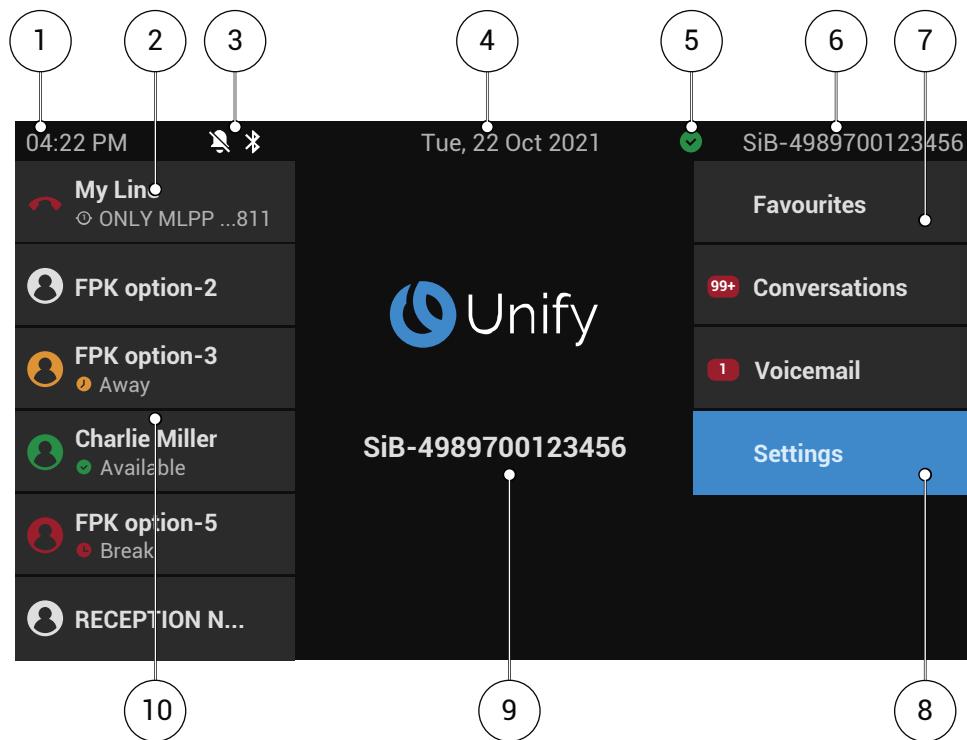

1	Current time
2	Line status
3	Status icons
4	Date
5	Presence status
6	Phone number
7	Menu options (e.g. for other screens)
8	The selected menu option is highlighted
9	Phone's own identity
10	Permanent programmable keys



Press this key to return to the home screen from a voicemail menu (see "Voicemail" → page 43).



Press this key to return to the home screen from the **Program** or **Service** menu.

Icon overview

Icons for different situations and options are displayed on the phone screen.

Status bar

The status bar at the top of the screen displays the current time, phone status, presence status, and the phone number or name. Different icons represent different situations and status.

When the phone is idle, the status bar displays also the current date. The current date interchanges with Bluetooth sensor reading information, if a Bluetooth temperature sensor has been paired with the phone.

When the phone has a call, the status bar also displays information about the current call.

Icon	Meaning
	Deactivated ringer
	The ringer is set to a beep
	Function "Forwarding on all calls" enabled
	Recording is set to auto-start. Recording is flashing if a recording is in progress.
	Recording can be started manually.
	Remote access is activated. When active, the icon is flashing.
	Bluetooth keyboard is paired.
	Bluetooth remote device is paired.
	Bluetooth function activated
	Bluetooth function is activated and a device is connected

Icon	Meaning
	Battery level of the connected Bluetooth device.
	Battery level of the connected Bluetooth device, when the device has a call.
	Bluetooth temperature sensor reading.
	Bluetooth humidity sensor reading.
	Mobility function is activated and the mobility login is complete.
	Mobility data synchronization is in progress.
	A mobile user is logged on to the telephone.
	The function "Do not disturb" is enabled
	Phone is locked

Call status

Various icons are displayed indicating the call status.

Icon	Meaning
	Active (connected) call.
	Active (connected) HD call.
	Active (connected) Bluetooth HFAG

Icon	Meaning
	Active (connected) video call
	Call that has encountered a "Busy" condition.
	Answered call (old)
	Missed call
	Dialed call
	Call on hold
	New voice mail
	Call you forwarded
	Your call was forwarded
	A call that has encountered "Unobtainable".
	Incoming call
	Incoming Bluetooth HFAG call. When busy, the icon is flashing.
	Ignored call waiting call
	Call back
	Unsecure call
	Secure call
	Ringer
	Call moved to mobile number

Navigation

Various icons are displayed indicating the navigation options.

Icon	Meaning
	Expandable list
	Expanded list
	Options
	Scroll up or down in lists
	Cancel
	Information
	Back to previous entry or list
	Blacklist
	Call log
	Search
	Filter in lists
	Settings
	Mailbox
	Video available
	Phone is locked

Communication

Various icons are displayed indicating the communication options, i.e. how to handle an incoming call.

Icon	Meaning
	Accept call
	Deflect call
	Call on hold
	Redial
	Repertory call
	Conference call
	Add caller to conference
	Transfer
	Select line
	Number of events (1...99, additional events are marked with a "+"-sign)

Call monitoring icons	Meaning
	Monitor
	Whisper
	Bargein
	Takeover

Line status

Various icons are displayed indicating the line status.

Icon	Meaning
	Connection on line 1 (the digit displays the line number)
	Line busy
	Line active
	Line on hold
	Line alert
	Unregistered line

Presence status

Various icons are displayed indicating the availability and presence status.

Icon	Meaning
	Available
	Busy
	Do not disturb
	Be right back
	In meeting
	Offline

Connectivity status

Various icons are displayed indicating the connectivity status.

Icon	Meaning
	Mailbox
	USB available
	Unsecure Wi-Fi connection. The strength of the signal is indicated by the "filling".
	Secure Wi-Fi connection. The strength of the signal is indicated by the "filling".
	Active Wi-Fi setting with no connection.

Contact information


Various icons are displayed indicating the contact information type.

Icon	Meaning
	Work phone number. The small digit displays the primary or secondary work phone number.
	Mobile phone number
	Private ("home") phone number

DISPLAYS ON THE STATUS LINE FOR ADJUSTING THE VOLUME



 Use the keys to adjust the ringer, handset and speaker volume. The following status messages are displayed:

Display	Meaning
	Ringer volume in 10 levels

Display	Meaning
	Ringer volume in 10 levels when the ringer is switched off
	Handset or speaker volume in 10 levels after picking up the handset or switching to speakerphone mode.

VOICEMAIL


Press the key shown.

If your telephone is connected to a voicemail system (such as Smart Voicemail), the key lights up on incoming messages in addition to the notification LED.

An corresponding message is displayed.

If your system is appropriately configured, activating this function opens the menu for voicemail.

ADJUSTING THE DISPLAY ANGLE

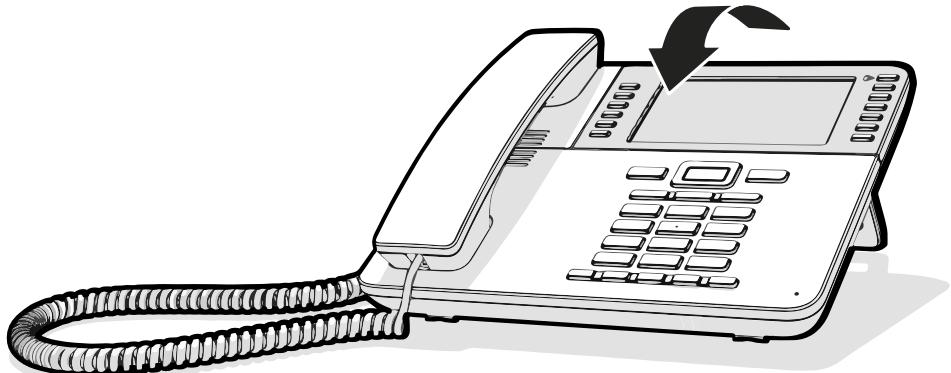

You can tilt the display. Adjust the display unit for best readability. The display snaps into position.

DIFFERENT DISPLAY INTERFACES


Your OpenScape Desk Phone is fitted with a colour graphic display, in which different contents are displayed depending on the particular situation.

Conversations

When set, the conversation list is displayed on the landing screen and is a collection of contact details and data from the call log.

Main menu

You can access the main menu at any time using the key . The time of day, the day of the week and date, as well as your own name or phone number will be displayed.

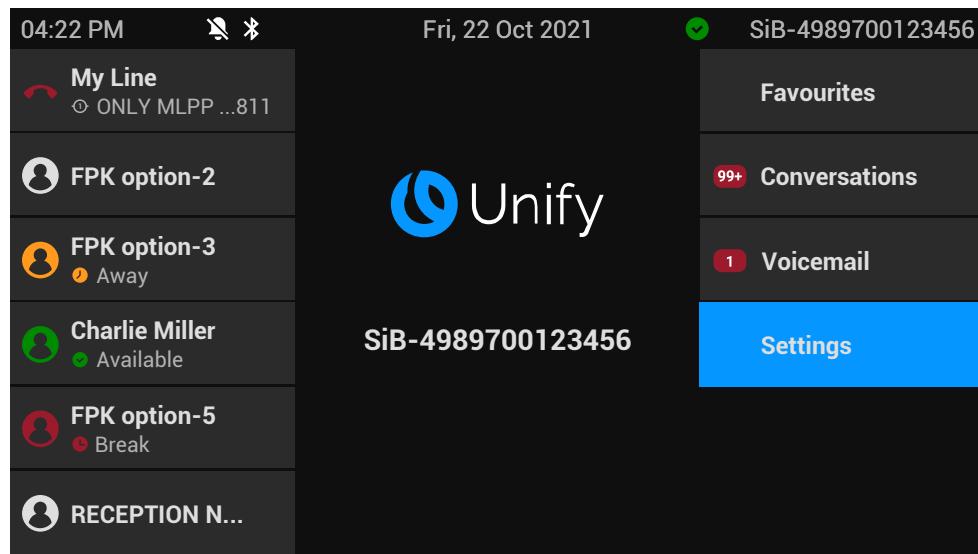

The main menu offers additional features and is the starting point for the menu tree. However, as telephony features take priority on a phone, the landing screen may be the conversation list or the display that you have configured.

If a voicemail number has been configured, the item "Voicemail" is displayed.


Start	First level	Second level
Main menu	Favourites Conversations Voicemail Corporate Settings	User settings Administrator settings

Context-dependent displays

Depending on the current situation, the display on the phone displays different content.

ACTIONS WITH FUNCTION KEYS

 Initiating the search function




Select "Search" to start an alphanumeric search (see "Searching for conversations" → page 56).

Use the function key adjacent to the conversation entry to dial the respective contact.

You can select a conversation by using the navigator keys for scrolling, and open the details of the conversation with the key (see "Opening details of a conversation or conducting a call" → page 53).

ACTION VIA DIALPAD

 Press any key on the dialpad to start dialling a phone number with automatic phone number searching.



As soon as you enter the first digits, an input field opens for selecting the phone number and you will be shown conversations that match the input to date in the corresponding positions.



If the conversation is already shown in the list before your input is complete, you can dial the number immediately using the associated function key or start a call with a new number (see "Opening details of a conversation or conducting a call" → page 53).

ACTIONS WITH NAVIGATION KEYS

Viewing details

You can open a selected conversation entry displaying a right arrow icon by pressing the navigation key to see the associated details.


Activating an application

You can use the key "Settings"  to toggle, for example, between the main menu and the settings screen.

Browsing lists

You can use the Navigator keys to scroll through entries and confirm the functions.

Ports on the underside of the phone

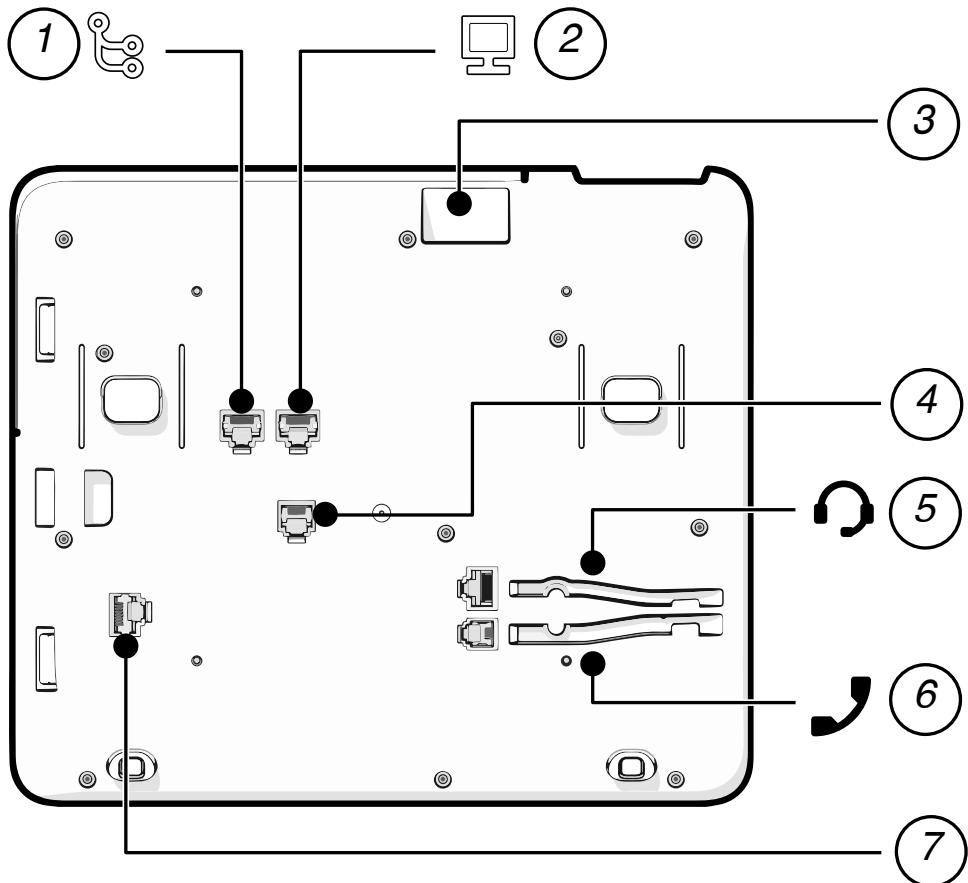


1	Network LAN port	2	PC LAN port
3	USB-A port	4	Optional power supply
5	Headset port	6	Handset port
7	Key module port		

Note

The key module is not “hot-swappable”: Always switch off the phone before removing or connecting a key module.

THREADING THE CONNECTION CABLES

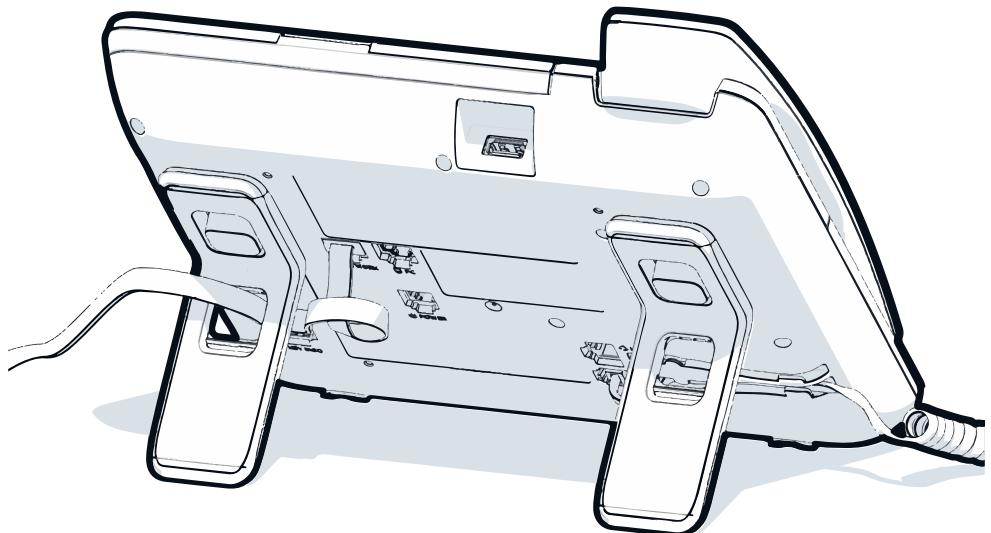

The picture shows an example of the OpenScape Desk Phone series. Your actual phone may look different.

Thread the connection cables on the back of the phone through the holes in the stand. Arranged in this way, the device always has a secure stand.

HOW TO USE NETWORK CONNECTIONS

The OpenScape Desk Phone provides a 1 Gb/s Ethernet switch and a USB port. An internal Ethernet switch connects the PC LAN port of the phone with the network LAN port to the PC.

This option for connecting the telephone and PC must be activated on the telephone by the administrator.

Using this connection option saves one network port for each switch used and allows shorter network cables to be used when arranged correctly.

1	USB port	2	PC LAN port
3	Network LAN port		

USING THE USB PORT

The USB type A port above the display can be used for connecting the following items:

- A USB headset, not included.
- A mobile ION handset (DECT), not included.
- The Wi-Fi USB dongle CP10 as a replacement for the LAN connection cable, not included.

A Wi-Fi network is required (see the Admin Guide for more information on how to set up the Wi-Fi connection).

Do not unplug the USB dongle during calls, as this disrupts the network connection.

About key modules

The OpenScape Desk Phone CP710 can be extended with key modules that provide additional programmable function keys.

The key modules are attached to the right side of the phone and must be connected to the socket on the underside (see "Ports on the underside of the phone" → page 46).

The following types of key module can be attached:

- KM410
- KM710

Up to four key modules can be simultaneously attached to the OpenScape Desk Phone CP710, but they must be of the same type: either KM410 or KM710, not both.

FUNCTION KEYS ON THE KEY MODULE

When you have pressed the corresponding function key on the key module, the status icon on the key changes, and possibly also the information shown on the display.

Key module KM710

A function or selected dialling can be programmed on two levels ("normal" and "shifted") that can be invoked by pressing the key <➡>  below the function keys,


thereby doubling the functions that can be assigned to the key module (see "Programming the function keys" → page 127).

An icon at the bottom of the lower display indicates the current level by a solid left bar for normal level or a solid right bar for shifted level.



Use this key on the key module to switch between levels.

KEY MODULE KM410

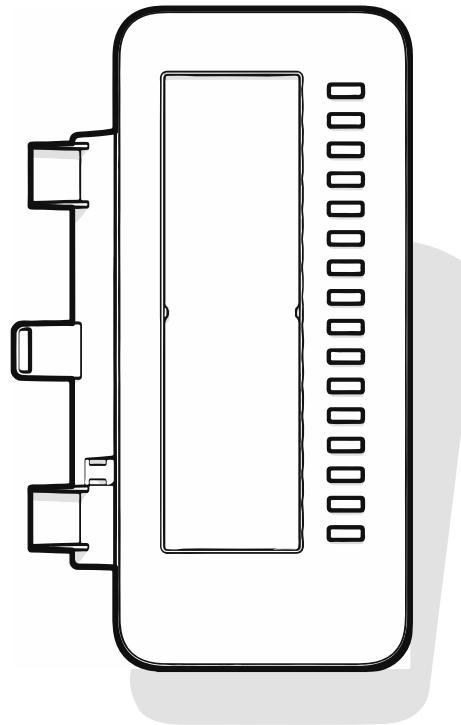


The KM410 is an optional key module attached and connected to the right side of the phone that provides an additional 16 illuminated and programmable function keys (see "Programmable function keys" → page 64).

The key module has a panel that can hold a hard paper label informing about the corresponding key assignments.

The status of a function is also shown by the LED on the corresponding key.

KEY MODULE KM710

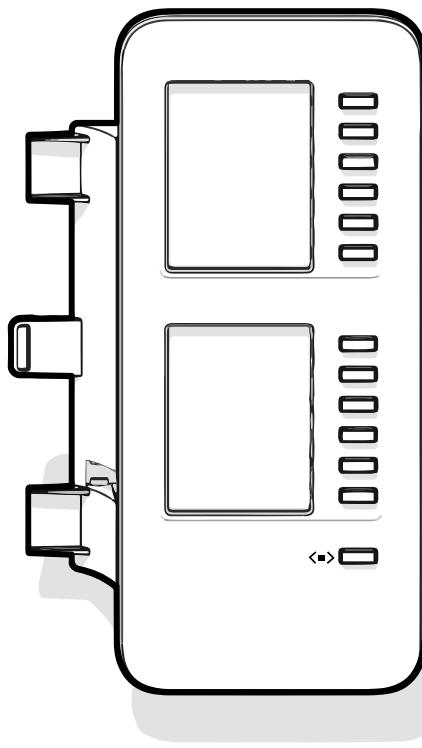

The KM710 is an optional key module attached and connected to the right side of the phone that provides an additional 12 illuminated and programmable function keys at two levels, i.e. additional 24 functions (see "Programmable function keys" → page 64).

The key module has display lines, each of which is assigned to a key. The name of the function or a destination, an action icon, and a status icon are displayed.

The status of a function is also shown by the LED on the corresponding key.

 
Key module label brightness

If you have connected a key module KM710, you can adjust the label brightness to suit your ambient lighting.




Press the key to open the main menu.

Settings



Open "Settings".

 User settings




Open "User settings".




Enter and confirm the user password, if required.

 Phone




Select "Phone".


 
Display



Select "Display".

 

 Select "Key module brightness". The current setting is displayed.

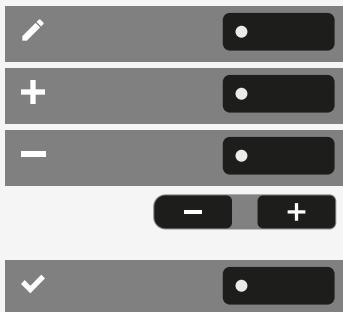

Select "Edit".

Use the function key to increase the value.

Use the function key to decrease the value.

- Optionally, use the keys on the dialpad.

Save the setting.

Updating the phone

The phone application ("software" or "firmware") is automatically updated by Zoom Phone. Zoom manages all firmware deployments to ensure security, stability, and feature compatibility with the Zoom Phone service.

No local administrator action is required.

When the phone connects to Zoom Phone (via Zero Touch Provisioning or assisted provisioning), it automatically downloads and installs the appropriate Zoom-approved SIP software. Future software updates are also delivered directly by the Zoom server.

During a software update, the phone must remain connected to power and to the network.

The update process is indicated on the phone display and by flashing LEDs.

The phone will automatically reboot after the update is completed.

Viewing system notifications

When there is an important change to the phone's system, the phone displays a notification message informing you about updates, alerts, certificate installations, and similar events.

Operating the OpenScape Desk Phone CP710

The following descriptions provide an overview of how to operate the phone.

Before operating, you should set up the user password to protect the phone against unauthorized use (see "Privacy and security" → page 152).

Conversations

A conversation represents a contact and your call history with this contact. If a contact has not been involved in a call, they have no call history.

New conversations are available for the following conversation types:

- Previously answered calls
- Outgoing calls
- Dialled calls
- Missed calls
- Exchange entries following automatic synchronization
- Entries from a corporate directory if a new number was used (LDAP)
- Received contact information via Bluetooth

 Conversations can also be imported as CSV via the WBM (see "Importing contacts via WBM" → page 205).

If the phone is configured for multiple line appearances, conversations are maintained for calls on all lines.

Missed calls on secondary shared lines may not appear, depending on the shared line configuration defined in the Zoom web portal.

A conversation is updated whenever the phone is involved in a call with a contact.

If the administrator has enabled access to the corporate directory (LDAP), the contact details may be automatically updated to match the directory entry.

04:22 PM	⚙️ 🔍 🔁 ⏺	Fri, 22 Oct 2021	SiB-4989700123456
📞 My Line	ONLY MLPP ...811	👤 History: Laura Davis	◀
👤 FPK option-2	⌚ 30.10.21 – 03:39 AM	🕒 5 mins	▲
👤 FPK option-3	⌚ 09.10.21 – 19:13	🕒 1 mins	◀ C
👤 Charlie Miller	⌚ 08.09.21 – 12:15	🕒 104 mins	◀ C
👤 FPK option-5	✖️ 01.09.21 – 10:19	🕒	◀
👤 RECEPTION N...	⌚ 21.08.21 – 03:00 PM	🕒 54 mins	◀ C

The status of a conversation is displayed with an icon and text.

The list is ordered chronologically based on the last event. The latest entry appears at the top of the list. Active calls are displayed before the historical conversations.


For the meaning of the various icons displayed on the screen, refer to "Icon overview" → page 36.

OPENING DETAILS OF A CONVERSATION OR CONDUCTING A CALL

You can open a selected conversation by one of the following methods:



- Using a navigation key
- Using the corresponding function key
- Using the navigation key for a selected conversation

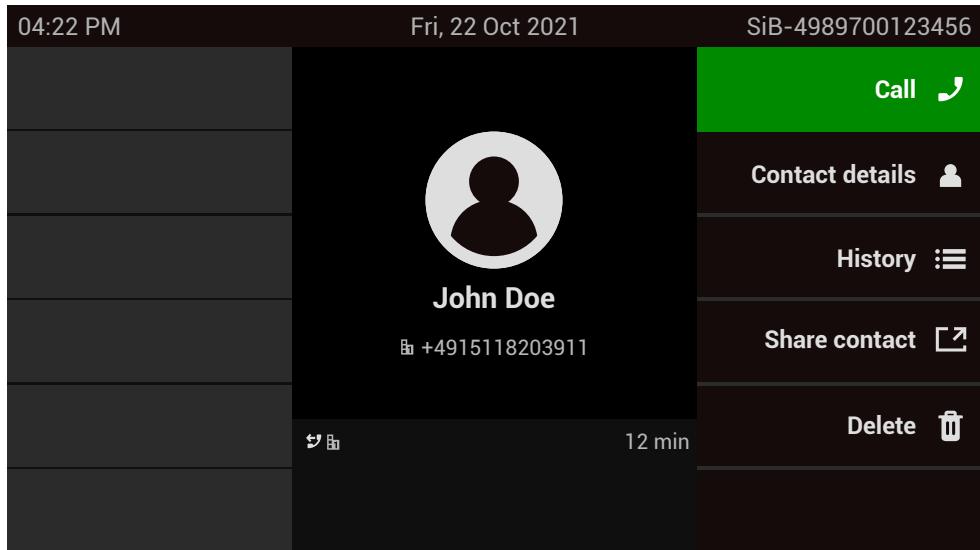

Contact details



Select "Contact details". This displays the contact details for a conversation.


CREATING OR EDITING CONVERSATIONS

Conversations are created based on dialled or received calls. New contacts are synchronized with the phone when connected to the Microsoft® Exchange server.

When the LDAP has found a contact and you call that contact, this contact is transferred to conversations.

Example

You receive a call from a contact for whom a conversation does not yet exist in the list. When you have hung up again, this contact appears in your conversation list with the phone number only unless it was matched to an entry in the LDAP directory.

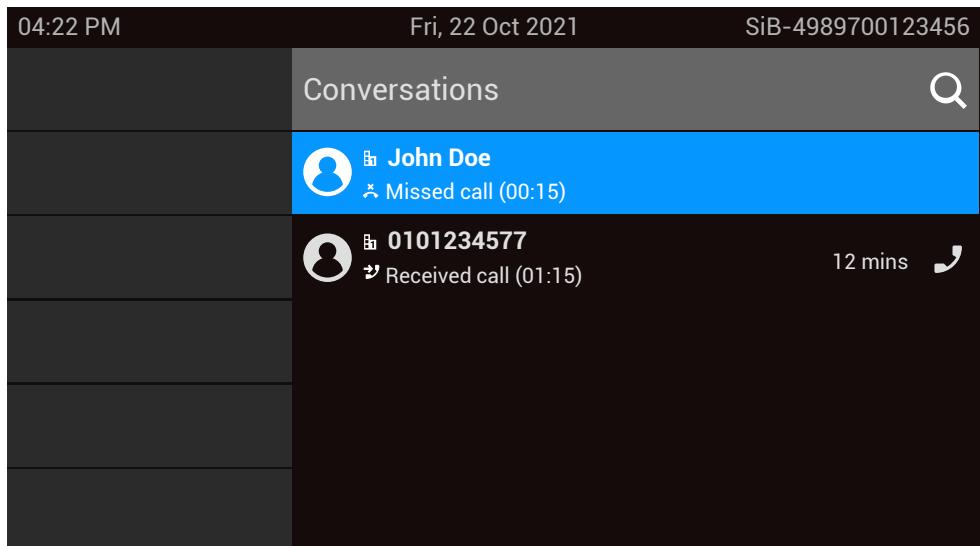



Open the details of the conversation using the navigation key.

Contact details



Select "Contact details".



Select the corresponding icon to open the edit mode. You can complete the following fields for a contact:

- Last name: Last name of the contact
- First name: First name of the contact
- Work x: Work phone number. Additional work phone numbers are displayed below the first entry.
- Mobile: Mobile phone number
- Home: Home phone number
- Company: The company the contact is working at
- Address x: 1: First address where the contact can be reached. Additional work addresses are displayed below the first entry.
- Role: Job title of the contact
- Email: Email address of the contact
- Avatar: Image of the contact

The avatar image must have been imported to the phone, either by an LDAP lookup or via WBM. The avatar field requires the name of the avatar file to be entered as text (see "[Managing avatar images](#)" → page 173).



Press the function key next to the input field to complete input.



Press the navigator key.




Save the setting.

You can add missing fields values also at a later time. The information is shown on the display the next time you call this contact.

Create a new contact from the conversation list

You can create a new contact from the conversation list with no previous history.

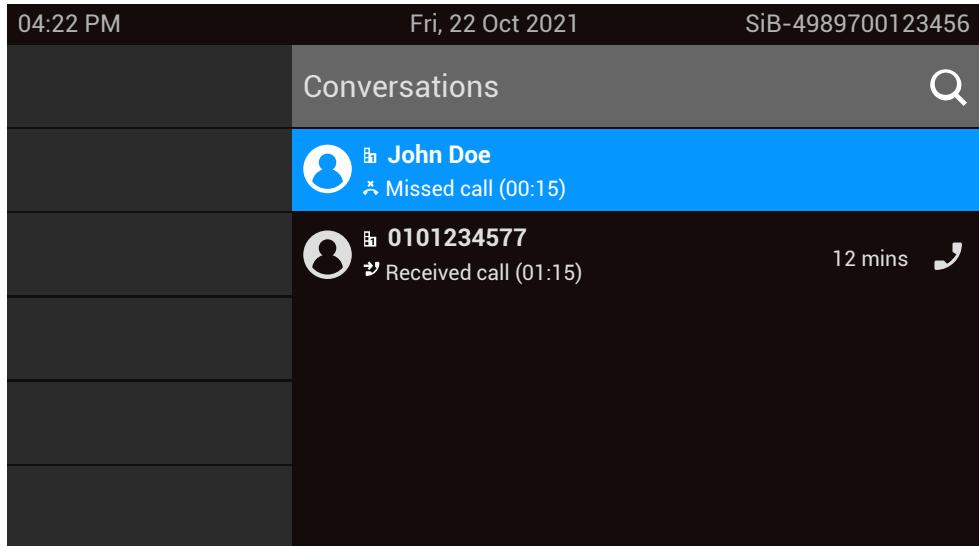

Scroll to the header row of the list "Conversations" using the navigation key.



Press the navigation key to access the list of conversation options.



In the "List options" select the option displayed. The new contact can be now created (refer to "Creating or editing conversations" → page 54).



Save the setting.

SEARCHING FOR CONVERSATIONS

You have a multiple options available for initiating a search for conversations. To call the contact for the conversation immediately and if you know the phone number you can do one of the following steps:



Lift the handset.



- Optionally, press the speaker key.



- Optionally, press the headset key.



To search in the conversations list, open an numeric input field by pressing the function key.



Enter the first digits of the phone number to see all phone numbers starting with the digits in the search box.

Use the key to switch from numeric to alphanumeric input.

Press the function key next to a search result to call the contact.

Search for names (alphanumeric search string)

Searching for text strings (alphanumeric search) works the same way in the local conversation list regardless of whether LDAP is configured or not.

When a user enters a search string (for example “**Am**”), the phone scans all entries stored locally and displays every match where the string appears anywhere in the first name or last name. For example, both “**Ampere**” and “**Samara**” would match.

If LDAP is configured, a separate search is also performed in the LDAP directory.

By default, this search matches entries where the search string appears at the beginning of the last name.

Example with search string “**Am**”:

- Matches: **Ampere**, **Ambos**
- Does NOT match: Samara

LDAP matches appear below the local results and are sorted by first name, just like the local list

Advanced LDAP search (From V2.R0.18.0 and onwards)

On CPX10 phones running software V2.R0.18.0 or later, advanced LDAP search is supported. The phone now performs substring searches in multiple fields:


- Lastname, Firstname, Phone Number, Extension Number.

The LDAP search uses a wildcard format (*<pattern>*), meaning entries with ‘Am’ anywhere in the field will appear (e.g. ‘Samara’).

Zoom LDAP does not support double quotes (" ") for exact matches.

Advanced LDAP search from the Corporate menu

When the phone is connected to Zoom, the **Corporate** menu option is displayed directly on the main screen:

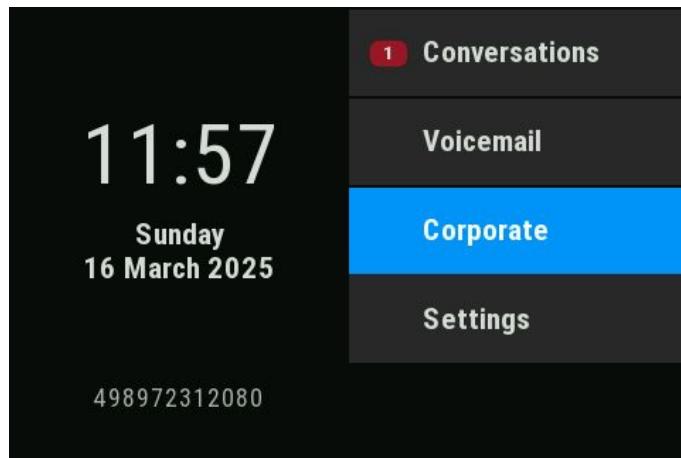


The **Corporate** menu allows you to look up contacts in the LDAP directory.

To display these options, select **Corporate** and click **OK**.

To display the **List options** menu, click the right arrow next to **Corporate**.

When accessing the **List Options** menu, you can look up contacts in the LDAP directory by choosing one of two main options: **Find** and **Qualifier**.

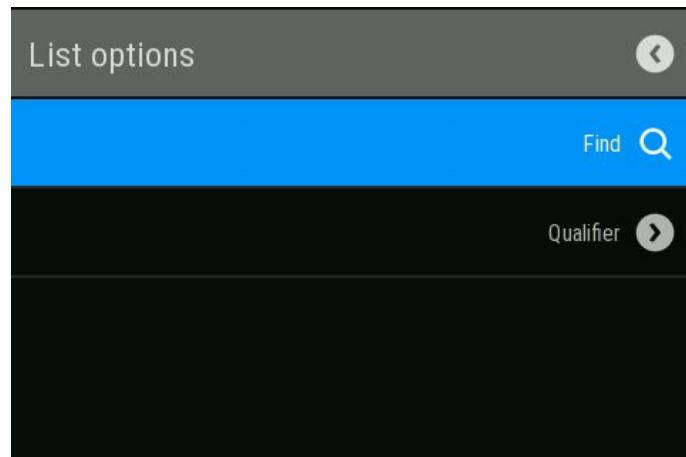

- The **Find** list option allows you to search for a LDAP entry using its attributes.
- The **Qualifier** option enables you to refine search queries by applying qualifiers such as:
 - No qualifier
 - Job function
 - Address
 - Email

Qualifier options depend on which fields are filled in the LDAP template. The example mentions **Job function**, **Address**, and **Email**, but additional options may be available if other LDAP template fields are specified.

Order of conversations

When entering search criteria, the local conversations are listed on top and ordered by their time stamp, the most recent ones are displayed on top.

The LDAP results are listed behind local conversations and are ordered alphabetically A to Z according to their conversation name.

"Alphabetical order" means A-Z ordering based on the first character in the name / names / topic of the conversation or contact. In the case of persons' names, the order is based on the first character of the first name or last name as displayed in the conversation list.

FILTERING CONVERSATIONS

When you want to filter conversations, it is possible to do so from the screen "List options".



Press the function key. Initially, a specific filter is not applied, so all conversation list entries of any call type are displayed.

Pressing the function key displays a list with the following filter options:

- All - all conversation list entries of any call type
- Missed - list of all missed calls
- Received - list of all received and forwarded calls
- Dialled - list of all dialled calls
- Contacts - contacts with no associated call records
- Other calls - active call, voice mails and ignored pick-up


Keep pressing the function key to cycle through the options and stop pressing to select a filter.



To clear the filter press the navigation key.

DISPLAYING THE HISTORY OF A CONVERSATION

The latest call of a conversation is shown directly in the conversation list. The history of other calls can be viewed during a call in the details or also directly within the history option.

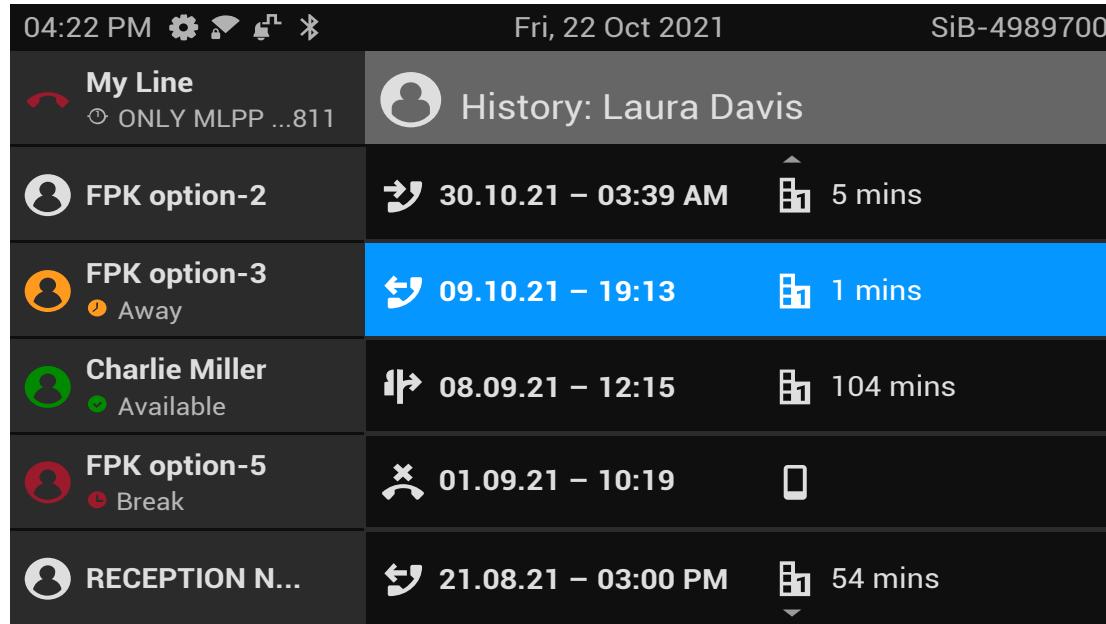

04:22 PM	⚙️	📶	📞	*	Fri, 22 Oct 2021	SiB-4989700
	My Line	ONLY MLPP ...811		History: Laura Davis		
	FPK option-2			30.10.21 – 03:39 AM		5 mins
	FPK option-3	⌚ Away		09.10.21 – 19:13		1 mins
	Charlie Miller	⌚ Available		08.09.21 – 12:15		104 mins
	FPK option-5	⌚ Break		01.09.21 – 10:19		
	RECEPTION N...			21.08.21 – 03:00 PM		54 mins



Select the conversation by scrolling through the list using the navigation keys.



Open the details of the conversation using the navigation key.

The most recent entries are shown below the name and number of the contact.



Press the function key to view a list of the last ten conversations.



A history entry may have additional information. To toggle between the normal and the additional information, press the adjacent function key.

DELETING CONVERSATIONS

Deleting a single conversation

If you misdialed or cancelled dialling prematurely, an entry will still be created in the conversations list. You can delete this entry. Entries for incoming calls that you no longer need can also be removed from the list.



Open the entry you want to delete using the navigation key.

 Delete

Press "Delete" to delete the entry.

The entry is deleted immediately.

Deleting all conversations

You can delete conversations from your phone to start fresh. There are two options:

- **Delete all conversations:** Removes all call logs and contacts stored only in conversation history.
- **Delete conversations but keep private contacts:** Removes call history while retaining saved contacts. After the deletion, all contacts remain in the list, but without any call history.

Phone contacts include:

- Manually created contacts using the "New contact" option.
- Contacts edited and saved via the "Contact details" menu in the Conversation screen.
- Contacts edited and saved via the "Contact details" menu in the Conversation screen

The deletion process may take some time based on the number of conversations.

Avatars associated with contacts remain intact.

With user password



Select the header row of the Conversation list, and then the Navigator key to access the Conversation list options.

 Delete all conversations

Click "Delete all conversations".

If set, you will be prompted to enter the user password to confirm deletion.

 Keep private contacts

To keep private contacts while deleting call history, enable the "Keep private contacts" toggle before submitting the password.

The toggle is **off** by default, so you must manually activate it to retain private contacts.

Without user password

If there is no user password, you will be taken directly to the **Delete all conversations** screen.

 Delete list

To delete all conversation entries, click "Delete list".



To delete call history while retaining saved contacts, click "Keep private contacts".

MARKING ALL CONVERSATIONS AS READ


You are able to mark all new missed calls in the conversation list as read in a single action.

By this, all conversations with new missed call events will change to show normal missed call events and the missed call counter is reset to zero.



Select "Conversations".

Press the navigation key to enter the list options.

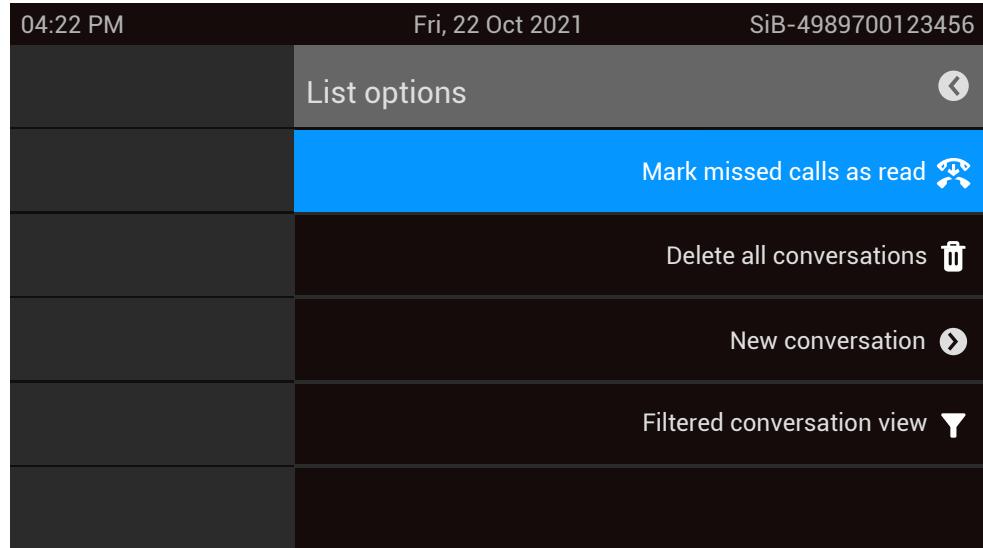


Select the option "Mark missed calls as read". All missed calls are now marked as read.

Telephony interface


TELEPHONY VIEW

Incoming call

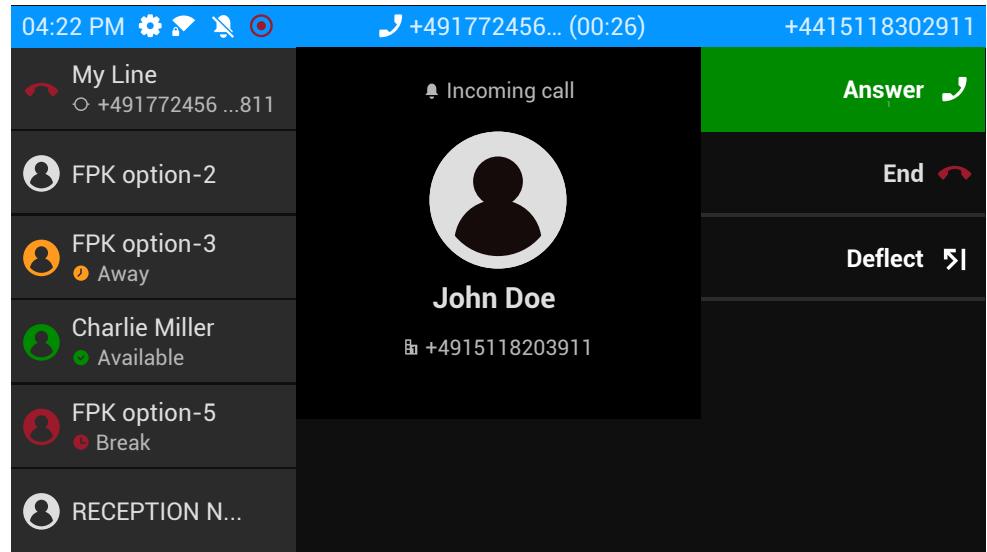

Your phone rings and the notification LED flashes. In addition to the common phone functions such as "Accept", additional information and functions may be displayed.

When conducting a call

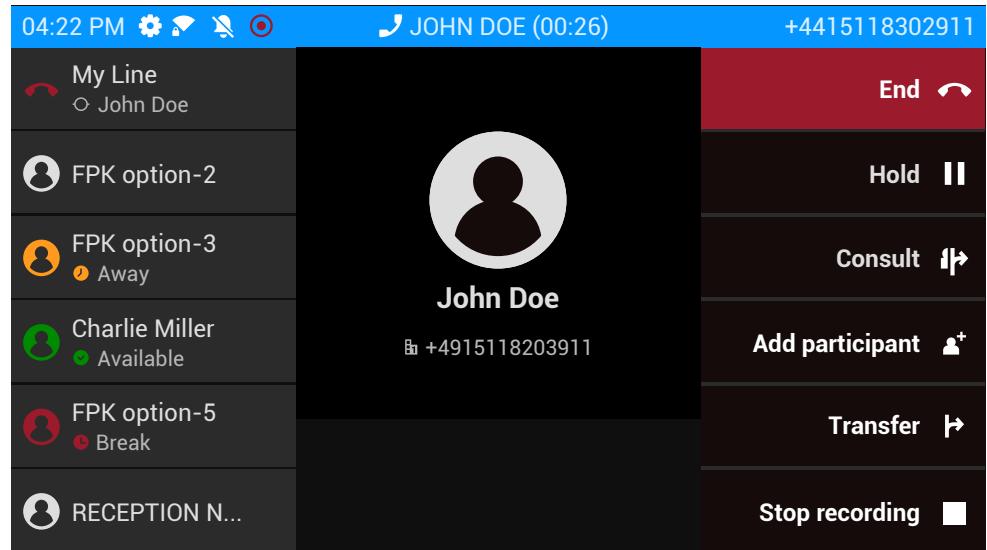

During a call, select any function key to perform the corresponding action such transferring the call.

Switching to a different menu during a call

- Use the key while on a call to switch to "Conversations".

Programmable function keys

Programmable function keys are situated on the left of the display and in the "Favourites" or on an optionally connected key module (see "Programmable keys on the key module" → page 65).

PROGRAMMABLE KEYS IN THE MENU "FAVOURITES"

The Favourites menu displays the phone's programmable keys. Depending on the CPx10 model, a set number of programmable keys is available and can be assigned to functions such as speed dials, contacts, or feature actions.

All configuration of line keys and feature keys is centrally managed by Zoom.

When the phone is provisioned by Zoom Phone:

- Programmable keys are configured according to the administrator's settings in the Zoom web portal.
- Not all keys are visible at all times. Some keys appear directly on the main screen, while others are displayed when the Favourites screen is opened.
- Zoom controls the available functions for each key. Local programming on the device is limited and may be disabled depending on administrative settings.
- CPx10 phones may support two-layer key functions, but Zoom Phone uses only the primary layer, and secondary layers are not available.

Programming a function key on the first level

Settings	•
User settings	•
Phone	•

Open the "Settings" using the corresponding function key.

Open the "User settings" using the corresponding function key.

Select "Phone" using the corresponding function key.

 
Program keys

Select "Program keys" using the corresponding function key.

The function keys are numbered 1 to 6 starting from the top of the left panel and 7 to 12 starting at the top of the right panel in the Favourites screen.



Select the key you want to program by pressing the adjacent function key.




Select the entry.




Use the navigation key to select an available function, e.g. "Call waiting".



 Confirm the selection.

Label

 
To change the label displayed on the screen, select "Label" and change the name using alphanumeric input with the dialpad.




Save the setting.

Programming a function key on the second level

 A key must be programmed as a "Shifted" function (or the keys of a key module may have been configured by the administrator to affect the keys on the phone).

Shifted

 Select "Shifted" using the adjacent function key. Proceed by assigning a function and a label identical to configuring the keys on the first level (see "["Programming a function key on the first level"](#) → page 64).



Save the setting.



Exit by pressing the navigation key. The function is now configured and can be used by pressing the function key next to the label.

PROGRAMMABLE KEYS ON THE KEY MODULE

When the CPx10 phone is provisioned by Zoom Phone, the key module (such as the KM710) uses only the primary layer of each key.

All programmable key assignments on the key module are centrally managed by Zoom Phone provisioning.

LED indicators on the key module reflect Zoom Phone call states and do not change based on key levels.

You can increase the number of programmable function or selected dialling keys by connecting an additional key module.

Depending on the Zoom Phone provisioning template, key module keys may be configured as:

- Line keys or shared line keys
- Busy Lamp Fields
- Delegation or call queue keys
- Feature keys (e.g., Do Not Disturb, Call Park)

Answering machine ("Voicemail")

If configured, the option "Voicemail" in the main menu allows you to connect to your mailbox system. The **MWI key**  also provides access to the mailbox system.

Depending on the type and configuration of the communications platform, messages from configured services are displayed.

If new messages are available, they will be displayed at the top position in the list of conversations and highlighted. The **MWI key** will be flashing .

Settings menu



Use the function key to open the main menu and then switch to the settings.

The menu comprises a configuration area both for user settings and for administrator settings.

Entering a user password

By default, a user password is not set and is not required to access the user settings on the phone. However, a user password is required to access the web interface (WBM) or lock the phone (see "Privacy and security" → page 152).

USER SETTINGS

Menu

You can adjust local settings for the phone using the menu "User settings".

The menu structure consists of several levels.

 For more information on configuring settings via the web interface, see "Web interface (WBM)" → page 204.

Control switches

The menus may contain switches ( / ) for deactivating / activating functions.

 
Example



Press the function key "Allow call waiting" to enable the function. The "switch"  is moved to the right.



- Alternatively, use the navigation keys to select the option and confirm with .




Save the setting.

Parameters

You can set values in some submenus.



 Press the function key to open the parameter setting.



Press the function key for the desired parameter value. The setting is changed and you return to the previous menu.



Save the setting.

Adjusting a level

You can use menus with levels to adjust the volume or brightness, for example. An example of display brightness is given here.

Example for setting the display brightness level



Press the key to open the main menu.



Open "Settings".



Open "User settings".



Enter and confirm the user password, if required.



 
Select "Phone".



Select "Display".



Select "Brightness".



Select "Edit".



Use the function key to increase the value.



Use the function key to decrease the value.



- Optionally, use the keys on the dialpad.



Save the setting.

ADMINISTRATOR SETTINGS

Refer to the administration manual for your phone for more information on this topic.

Configuring the phone default settings

Adjusting the display brightness

You can adjust the brightness of the display to suit the ambient lighting.

 For more information on configuring settings via the web interface, see "["Web interface \(WBM\)"](#) → page 204.



Press the key to open the main menu.



Open "Settings".



Open "User settings".



Enter and confirm the user password, if required.



 
Select "Phone".



Select "Display".



Select "Brightness".



Select "Edit".



Use the function key to increase the value.



Use the function key to decrease the value.

- Optionally, use the keys on the dialpad.



Save the setting.

Adjusting the default volumes

You can configure different default volumes for the following audio output:

- Loudspeaker
- Ringer
- Handset

- Headset
- Handsfree
- Rollover
- Alert beep
- Call waiting tone



Press the key to open the main menu.



Open "Settings".



Open "User settings".



Enter and confirm the user password, if required.



Select "Audio".



 
Select "Volumes". The settings for the various volumes are displayed.



Select the audio setting.



Use the navigation keys to scroll, if required.



Select "Edit".



Use the function key to increase the value.



Use the function key to decrease the value.



- Optionally, use the keys on the dialpad.



Save the setting.

Adjusting the key clicking sound

You can select here whether a tone should be heard when a key is pressed. You can also decide whether this should apply for all keys or only those on the keypad. In addition, you can adjust the tone volume or disable the tone.



For more information on configuring settings via the web interface, see "Web interface (WBM)" → page 204.



Press the key to open the main menu.



Open "Settings".



Open "User settings".



Enter and confirm the user password, if required.

Phone

Select "Phone".


Key click

Select "Key click".

Adjusting the volume

Volume

Select "Volume".

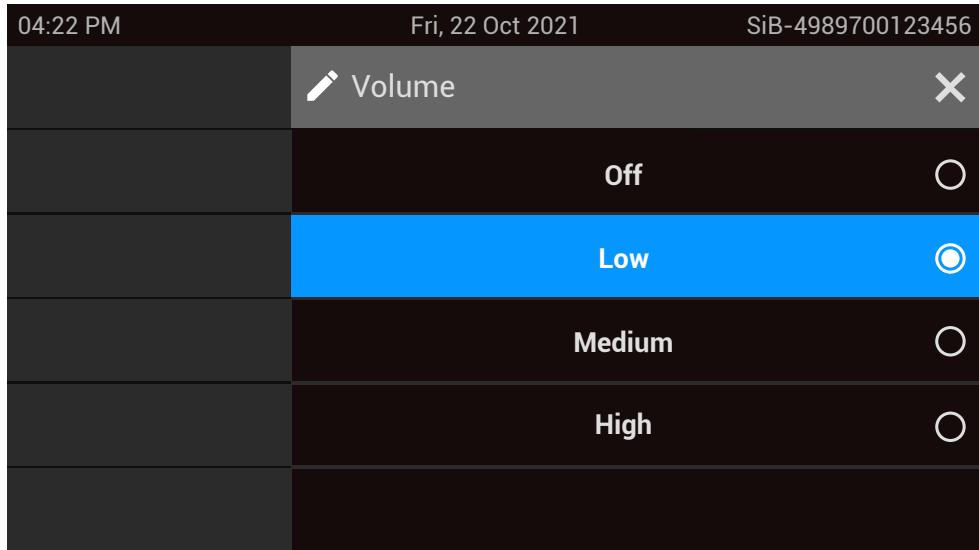

Select the default setting using the adjacent function key. You can choose between the following options:


- Off (no clicking sound)
- Low
- Medium
- High

Save the setting.

Setting the key click scope

Active for:

Select "Active for:".

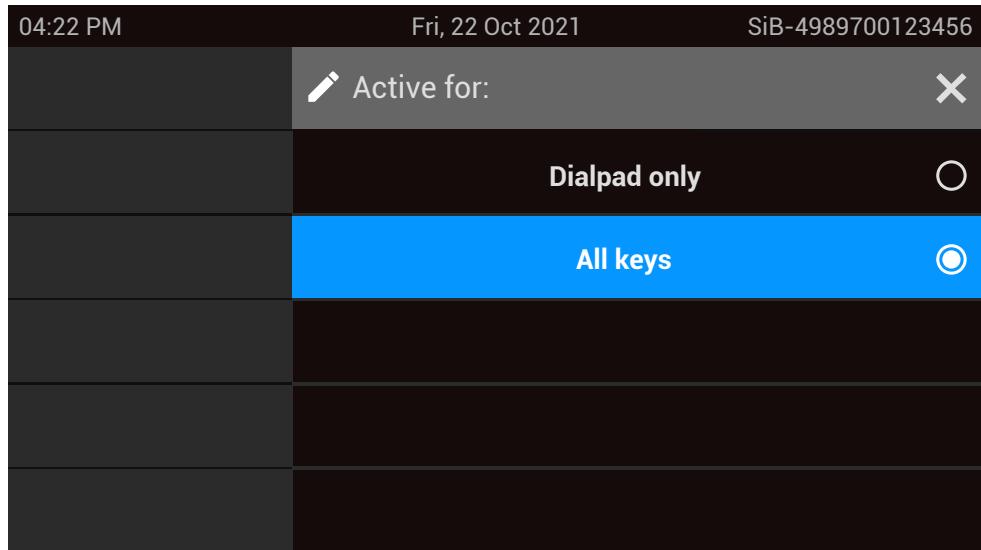

Select the scope for the key clicking sound:

- Dialpad only
- All keys



Save the setting.

Making calls


Incoming calls

When your CP phone receives a call:

- The phone rings (if the ringtone is active) and the notification LED flashes.
- The caller information (name and/or phone number) is displayed in the status bar and in the main display.

If multiple calls are active on the same line, the call is assigned to an idle line appearance. Only one call can be active at a time; other calls appear on the remaining idle line keys.

For shared lines, the display also shows the current status of the call and the line, helping you decide whether to join or interact with the call.

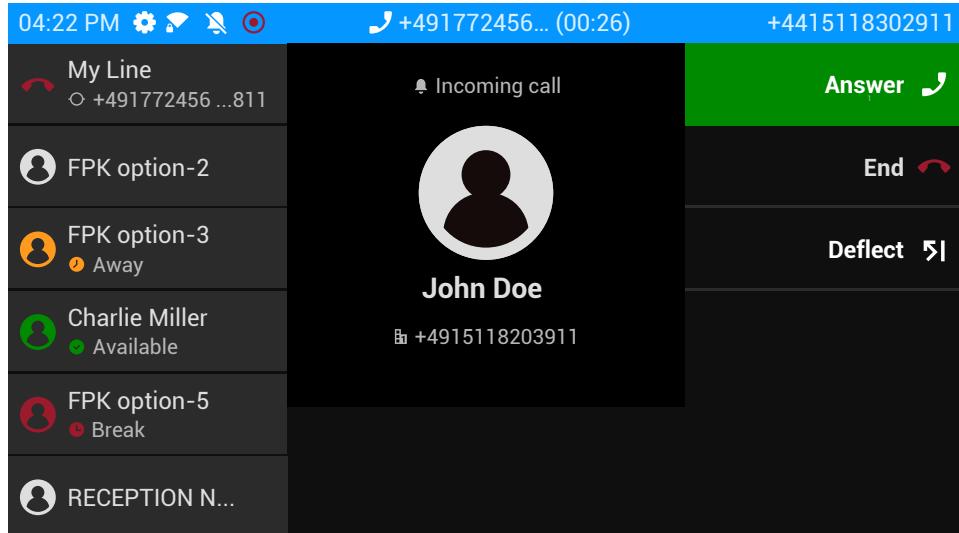

Any settings currently made on the phone are interrupted by an incoming call.



Use the key "Settings" at any time to return to the point in the menu structure where you were interrupted, unless the time interval for the password has expired.

ANSWERING A CALL VIA THE HANDSET

The phone rings. The caller is displayed. The notification LED flashes.



Lift the handset.



Adjust the call volume, if necessary (see "Volume" → page 30).

ANSWERING A CALL VIA THE LOUDSPEAKER (SPEAKERPHONE MODE)

The phone rings. The caller is displayed. The notification LED flashes.



- Select "Answer".



- Optionally, select the key shown.

The key lights up . The speakerphone function is activated.



Adjust the call volume, if necessary (see "Volume" → page 30).

Suggestions for using the speakerphone mode

Adjust the call volume while speakerphone mode is active.

The ideal distance between the user and the phone in speakerphone mode is 50 cm.

ANSWERING A CALL VIA THE HEADSET

Prerequisite: A headset is connected and set up correctly (see "Setting the headset port use" → page 162).

Answering calls via the headset key

The phone rings. The caller is displayed. The LED on the key



flashes. Press the key shown. The key lights up.



Adjust the call volume, if necessary (see "Volume" → page 30).

Answering calls automatically via the headset

Prerequisite: The administrator has additionally configured a function key with the function "AICS ZIP tone" (see "Programming the function keys" → page 127).



- Press the function key to activate automatic call answering mode. The key LED and the headset key illuminate.



- Optionally, press "Settings".



Select "Favourites".



Use the navigation keys to scroll, if required.



Select “Auto Headset” to activate automatic call answering mode. The key LED and the headset key illuminate.

When there is an incoming call a short acoustic signal is heard on the headset for a call and the connection is established.



To deactivate the automatic headset answering function, press “Auto Headset”. The LEDs of the function and the headset keys are off.

ANSWERING A VIDEO CALL

The phone does not support a video camera and is restricted to video reception. Incoming video calls appear as incoming calls. You can accept, reject or deflect a video call. If the incoming call includes video that can be displayed (i.e. SIP video), the incoming ringing call icon is replaced by an incoming video ringing icon  .

There are two types of video calls:

- A SIP video call where the video is part of the call.
- A direct video call where the calling party has a camera configured for streaming video.

The incoming video call behaves similarly to a normal incoming call, only that video media is added.

For a call from a door opener with associated camera the phone can be configured to automatically connect to the camera and show video (Direct video) while the call from the door opener is still ringing.

Enabling video calls

Prerequisite: The administrator has enabled the configuration to accept video media.



Press the key to open the main menu.



Open “Settings”.



Open “User settings”.



Enter and confirm the user password, if required.



Select “Configuration”.



Select “Video call”.



Enable or disable “Video call”.

For SIP calls with video media an icon in the status bar indicates that the call can display video, displayed before the call is answered and when it is connected.

For a direct video call there is also an option to show the video screen for the incoming call (also available in the main menu screen during an incoming video call). The incoming video call behaves similarly to incoming audio calls, only video media is added.

Video screen with door opener call

Door opener

The phone supports up to four independent door openers that may use different control methods each.

The feature "Door opener" can support several ways to control a door opener:

- Via phone call to door opener
- Via HTTP/S request to door opener

Direct video stream

A door opener may also be associated with up to four cameras that can send video streams of the doors as direct video (for configuration, see "[Configuring direct video](#)" → page 164). When the feature "Camera control" is enabled, the video stream is operated in the following ways:

- When configured, the video is toggled on or off by pressing the associated function key.


When configured, the direct video stream from a camera can be shown before (or without) a call from its associated door opener microphone.

- As an option in the call menu: When phone detects a call from a door opener with a camera, the phone starts video stream and displays the video.

Answering an incoming call when video screen is active

Incoming call not associated with the video screen

If a call is not from the door opener associated with the camera whose direct video is being shown, then the video screen is hidden and incoming call screen is displayed.

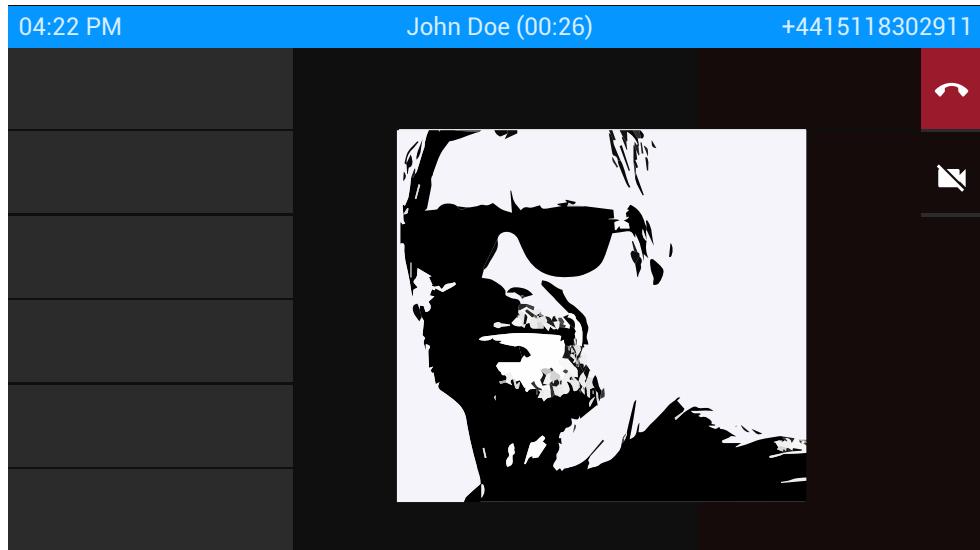

If the call has associated video, the call screen with video media is displayed after accepting a call.

If a call is from associated door opener, screen behaviour is dependent on the Automatic door video configuration.

Answering an incoming call with automatic door video enabled

Prerequisite: The administrator has enabled "Automatic door video".

- If automatic door video is enabled, the video screen shows the video from the associated camera and is updated with call and door opener related options. Audible ringing is played for the incoming call, and alert bar, speaker and headset key (if appropriate). LEDs indicate the incoming call and allow it to be answered.
- When automatic door video is enabled, the camera is connected and video is shown when the door opener call starts ringing.
- When call is ended, the video screen is hidden, and the video stream is stopped. If the video screen is dismissed, the door opener call remains in its current state.

Answering an incoming call with automatic door video disabled

 

- If Automatic Door video is disabled, the video screen is hidden, the video stream is stopped and the incoming call screen is displayed (like any other incoming audio call, except for the option to show the associated video).
- When the call is answered, the connected call screen for door opener call is shown with the option to manually start video, if there is an associated camera.
- When call is ended, if **Automatic Door Video** is disabled, Video screen stays active. If the video screen is dismissed, door opener call stays in current state.

Hide video during a video call



After accepting the video call, select the crossed out camera icon.

When you hide video using the function key, the following screen is displayed.

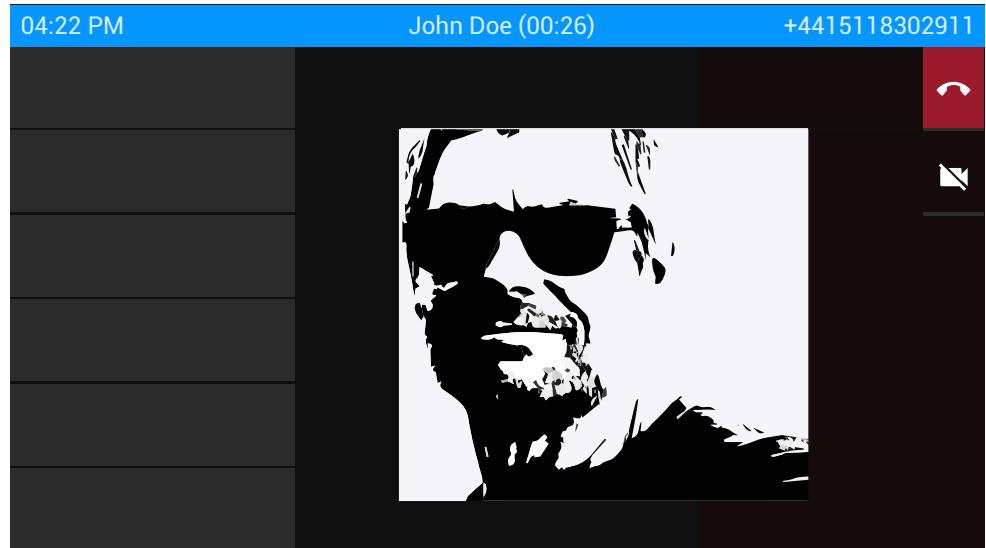

Select the camera icon to display the video.

- To hide the video, select the icon.



Ending a video call

 


- When the video is hidden, press "End".



- When the video is displayed, press the function key.

REJECTING A CALL



You can reject an incoming call.

Prerequisite: An incoming call is displayed or signalled. The function is approved by the administrator.



Press the function key. The caller hears a busy signal or the server redirects the call to voice mail.

The rejected call is saved in the conversations list as a missed call. You can call this party back at a later time.

DEFLECTING A CALL

Prerequisite: An incoming call is displayed or signalled. The function is approved by the administrator.

Deflect



Select "Deflect". The conversations view is displayed. If a destination phone number is configured, it will appear as the top entry in the list (see "Permitting call deflection" → page 185).

▷



Press the function key to dial the number.

If you did not Save a phone number when configuring call deflection, or if you want to use a different destination, you are asked to enter a destination phone number.



Enter the phone number.



Confirm with the function key. The call is deflected.

Outgoing calls

If the option "Busy when dialling" is enabled, you will not be interrupted by an incoming call (see "Allowing "Busy when dialling" for outgoing calls" → page 189). In this case, the caller hears the busy signal or is redirected to voice mail.

You make a call by entering the phone number of the relevant party using the dialpad or by searching for this party in the list "Conversations". The list includes:

- Dialled and received calls
- Subscribers from Exchange
- Subscribers from a "Corporate directory"
- Imported contacts

If you cannot find received or dialled calls in the list, check if the call log is activated.

OFF-HOOK DIALLING



Lift the handset.

123

 


The input field is displayed.



Enter the phone number. The phone numbers starting with the entered digits are displayed.

OK



- Press "OK" to confirm that the phone number is complete or wait until the autodial delay expires (see "Using autodial delay" → page 84).
- Optionally, select a matching previous conversation that is displayed.

DIAL WITH THE HANDSET ON HOOK

The connection is set up with on-hook dialling via a connected headset or via the loudspeaker (speakerphone mode). The line is seized before dialling.

123




Enter phone number via the dialpad without lifting the handset and confirm when finished.



Press the key if a headset is connected.



- Optionally, press the speakerphone key.

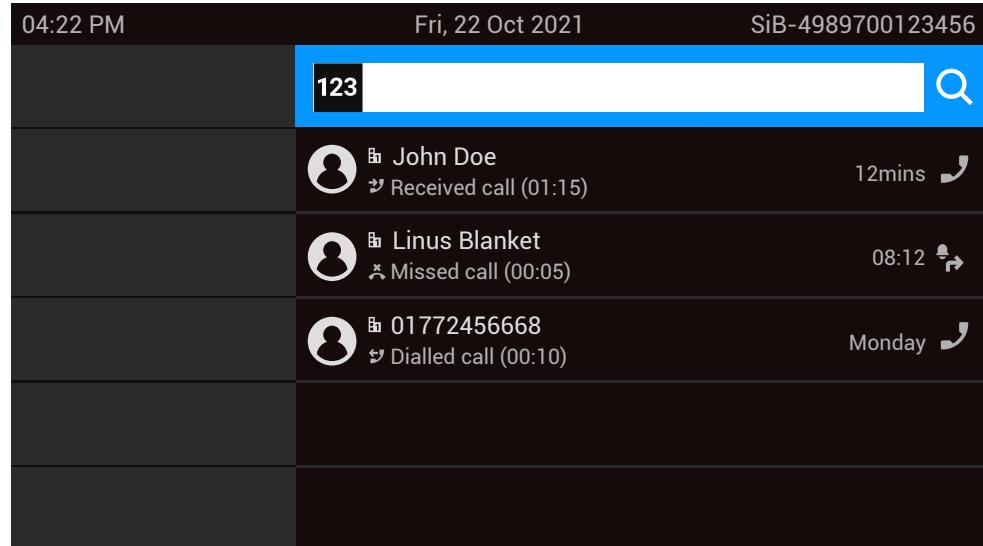

The input field in "Conversations" is opened in numeric mode.

- Internal: Enter the phone number.
- External: Enter external code and phone number.

OK



Confirm when the complete number has been entered.

- Optionally, select a contact from the list of previous calls and press the corresponding function key.

Participant answers over loudspeaker



Select speakerphone mode.



 
- Optionally, lift the handset.

Participant does not answer or is busy



Press key. LED goes out.

Callback



Select "Callback".

Entering the phone number first

123

X



Enter the phone number. The loudspeaker or headset key illuminates when you enter the first digits. If necessary, correct the input using the navigation keys.

OK

- Press "OK" to confirm that the phone number is complete or wait until the autodial delay expires (see "Using autodial delay" → page 84).
- Optionally, select a matching previous conversation that is displayed.

DIALLING WITH THE SELECTED DIALLING KEY

Calling a permanently displayed contact

When you press a selected dialling key, the associated contact or phone number is displayed and the connection is set up.

Name



 
Press the function key of the associated phone number or contact name. The connection is set up.

Calling via a connected key module

When you press a selected dialling key, the associated contact or phone number is displayed and the connection is set up.


You can program frequently used phone numbers on programmable keys (see "Programming the function keys" → page 127).

Call ...



Press the function key for a saved phone number. The connection is set up.

Calling via “Favourites”

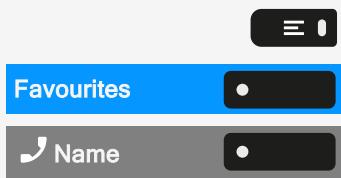

Press the key to open the main menu.

Select “Favourites”.


Press the function key for a saved phone number. The connection is set up.

DIALLING FROM CONVERSATIONS


Depending on the configuration, the conversation list can contain data from the following directories:

- Caller list
- Subscriber data from Microsoft® Exchange
- Subscriber data from the LDAP directory
- Imported contacts

If you can find neither redials nor received nor dialled calls in the list, check if the call journal is activated.

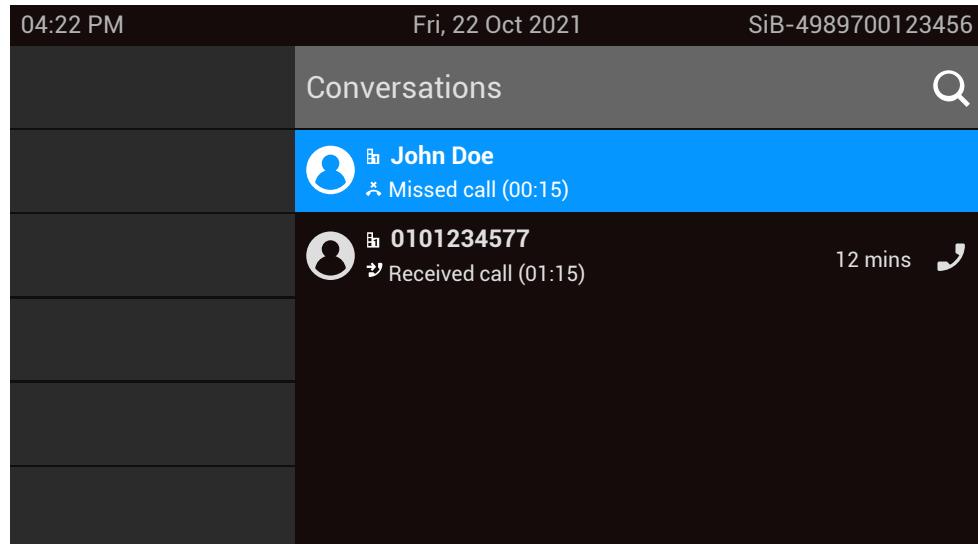

 The conversations list is displayed on the screen. If the contact you want is not visible, then select by scrolling with the navigation keys.



Optionally, search by entering the phone number or name.



Confirm the selected contact or phone number with the function key. The phone number is used for calling the contact.

REDIALLING

No history is created for contacts if the call log or Microsoft® Exchange is deactivated. Conversations that have been dialled manually or searched for via LDAP are also not created. Previous entries are deleted.

Prerequisite: A programmable key has been configured with the redial function.

From the conversation list

You can use conversation list to call your last connected party via the history of a previous conversation or you can call via the contact details (see "Opening details of a conversation or conducting a call" → page 53).

Redialling with a key in the left panel

 


Select "Redial".



Redialling from a connected key module

If "Redial" is not displayed on the key module, press the key to change the level.



Select "Redial".



Redialling via "Favourites"

Press the key to open the main menu.



Select "Favourites".




Select "Redial".

CALLING BACK A MISSED CALL

When a call is missed the LED on the phone lights up (if configured by the administrator). In addition to the menu name, i.e. the number of missed calls is displayed on the landing screen with a red background in the tab "Conversations" (see "When set, the conversation list is displayed on the landing screen and is a collection of contact details and data from the call log." → page 44).




Select "Conversations".

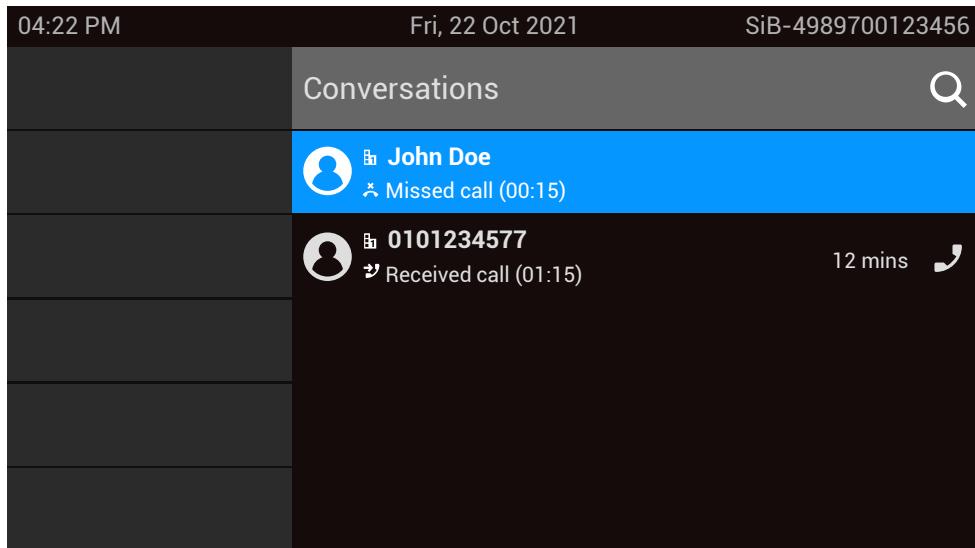

Calls you have missed are indicated with .

 John Doe



Select the contact and confirm. The call is set up with the number displayed.

USING AUTODIAL DELAY

A number is automatically dialled after a set delay starting from the entry of the number's last digit. The autodial delay can be used in the following situations:

- When dialling in idle mode
- When deflecting an incoming call
- During a consultation
- When transferring an answered call

The delay interval can be reduced by performing one of the following activities:

OK



- Press the key.
- Optionally, lift the handset. This only works if the phone number was entered when the phone was idle or if it was entered for a consultation call when the handset was off the hook.

If an emergency number is configured by the administrator, the autodial delay for this phone number is reduced to one second.

During a call

ACTIVATING OR DEACTIVATING THE MICROPHONE

You can temporarily switch off the handset microphone to prevent the other party from listening in while you consult with someone in your office for example.

Prerequisite: You are conducting a call.

Deactivating the microphone



Press the key shown.

Activating the microphone



Press the key shown.

CHANGING THE VOLUME

You can change the volume of the handset or the loudspeaker during the call.



You are conducting a call.



Adjust the volume using the toggle key.

SWITCHING FROM HANDSET TO SPEAKERPHONE MODE

Note that there are two different modes (US and Standard) and you can activate your preferred setting as appropriate.

Prerequisite: You are conducting a call via the handset.

The microphone and loudspeaker functions are activated by the administrator.

Listening in standard mode



To open listening in standard mode, hold down the key.



Hang up the handset.



Release the key and proceed with your call.

Listening in US mode



To open listening in US mode, press the key.



Hang up the handset.

Proceed with your call.

SWITCHING FROM SPEAKERPHONE MODE TO THE HANDSET

Prerequisite: You are conducting a call in speakerphone mode.



Lift the handset. The key is no longer illuminated.

SWITCHING FROM HEADSET TO SPEAKERPHONE MODE

Switching in standard mode



Press and hold the key (open listening is activated).

Hang up the handset.

Switching in US mode



Press the key.

Hang up the handset.

OPEN LISTENING TO THE ROOM

You can let other people in the room join in on the call. Let the other party know that you have turned on the loudspeaker.

Prerequisite: You are conducting a call via the handset.

Activating open listening



To activate open listening, press the key shown.

Deactivating open listening



To deactivate open listening, press the illuminated key.

DISPLAYING DTMF DIGITS

The phones are able to send DTMF tones when dialpad buttons are pressed during an active call.

You can control if you want the DTMF digits to be shown on your display.

 For more information on configuring settings via the web interface, see "["Web interface \(WBM\)" → page 204.](#)

When you press any of the dialpad keys during an active call, the key(s) pressed will be presented on the call screen.



Press the key to open the main menu.

Settings



Open "Settings".

User settings



Open "User settings".



Enter and confirm the user password, if required.

Configuration



Select "Configuration".

Connected calls



Select "Connected calls".

Display DTMF digits



Select "Display DTMF digits" and confirm with the function key.



Save the setting.

USING PRE-CONFIGURED DTMF CODES

When calling, you can use menu options that can be pre-configured with different DTMF digit sequences to perform specific actions (e.g. parking a call, recording, or cancel a callback).

The DTMF-based functions can only be sent when a call is active and can also be configured locally on the device, on the web interface, or via the Zoom server.

Prerequisite: You are conducting a call.



While on the screen "Active call", press the DTMF sequence of the dialpad keys that is configured to a specific action, e.g.

#7275

- Park call

***9**

- Record call

When the call is on hold, the DTMF related options will disappear, since DTMF options are only available during an active call. The options will be displayed again when the call is reconnected.

CONSULTING A SECOND PARTY

You can call a second party while a call is in progress. The connection to the first party is placed on hold. Optionally, you can start a conference that includes all parties on the line.

Prerequisite: You are conducting a call.

Consult?



Confirm the option shown.

Conversations



Enter and confirm the second party's phone number.

- Optionally, search for the contact in "Conversations" and confirm.

Starting a conference call

Add participant



Select "Add participant".

- Optionally, enter and confirm the second party's phone number.

Start conference



Select "Start conference".

- You can also use the key shown.

Ending a consultation call

You end the consultation

End & reconnect



Select "End & reconnect". The consultation call is disconnected. The call with the first party is resumed.

The second party hangs up

If the second party hangs up, you will be prompted to retrieve the first call again if "Hold and hang-up" is disabled (see "Enabling or disabling "Hold and hang-up"" → page 183). Otherwise, the first call will remain on hold until you receive this prompt after a defined time interval.

Retrieve held call



Select "Retrieve held call" to be reconnected with the first party.

Ending the consultation with an active headset

The administrator has additionally configured a key with the function "Auto headset" function (AICS ZIP tone) on a key module, in the left panel or in the menu "Favourites" (see "Programming the function keys" → page 127).

Auto Headset



Press the function key to activate automatic call answering. This key and the headset key illuminate.



You are conducting a consultation call and the second party hangs up. You are automatically reconnected with the waiting first party. "Retrieve held call" is not

displayed.

SWITCHING TO THE HELD PARTY (ALTERNATING)

Prerequisite: You are conducting a consultation call or have accepted a second call (see "Consulting a second party" → page 88 or "Answering a second call" → page 96).

Alternate

Select and confirm the option shown.

You can switch back and forth between two contacts by repeatedly selecting and confirming "Alternate".

Ending an Alternate operation

End & reconnect



Select and confirm the option shown.

The active call is disconnected and the held call is restored.

"CONFERENCE" CALLS

There are two types of conference depending on the settings configured by the administrator. By default, a Zoom-connected CP Phone uses the Zoom server-based conference.

- **Server-based (Zoom Multi-Party Conference):**

- This is the default setting for a Zoom-connected CP Phone. A Zoom media server hosts the conference. All participants connect to the server with a single call each. This type supports more participants (up to 10 total: 1 moderator and 9 participants) and provides a consistent Zoom conferencing experience.

- **A local (3-party) conference:**

- The phone hosts a local conference call. Up to three participants can join, and all calls remain directly connected to your phone.
 - The CP Phone uses a local 3-party conference only if your administrator has changed the default server-based conference setting.

If the Zoom phone already has an ongoing call, pressing the **Conference** key will initiate a conference according to the configured type (local or server-based).

Zoom MultiParty Conference (MPC)

Zoom Phone supports server-based multi-party conferences, called Zoom MultiParty Conference (MPC). If MPC is not configured, the Conference key does not function when the phone is idle.

By default, a Zoom-connected CP Phone uses the Zoom server-based conference. If server-based conferencing is deconfigured by your administrator, a local (3-party) conference can be created.

Prerequisite

1. Your administrator has allowed the phone to use the **Zoom Multi Party Conference** (MPC).

The **Zoom Conference**:

- Does not require two active calls on the phone to start a conference.
- If the host leaves the conference, the entire call is terminated and all participants are disconnected.
- Only the conference host can remove other participants.
- Maximum participants: 10 (1 moderator and 9 participants).

Creating a conference

You can start a Zoom conference while on an existing call, even if a conference session already exists, or when the phone is idle.

Starting from an active call (No existing conference)



Select "Start conference".

or



Select "Conference".

 
The phone will start a new call. Enter the number for the second participant and dial.

When the second participant answers, you'll be in a one-on-one call with them while the first participant is placed on hold.



Select "Conference".

or



Press the **Merge** or **Join** soft key to start the multi-party conference.

All participants will hear a notification sound when the conference begins. The participant roster will appear, displaying all members of the conference.

Starting from a call when a conference exists**Add conference**

Select "Add conference".

or

Conference

Select "Conference".

The existing call will be added to the conference.

Starting from idle state

When the phone is idle and you want to start a conference:

Conference

Select "Conference".

The phone will create a new conference session.

Note

If the Conference FPK is pressed while a conference call already exists but no other calls are active on the phone, the button press is ignored. However, if another call is connected (e.g., on hold), it is automatically added to the existing conference.

Managing conference participants

As the conference moderator, you can add or remove participants and view their information. Non-host participants can only remove themselves. When someone joins or leaves the conference, all members hear a notification sound.

Adding a participant (as moderator or participant)

You can add one or more participants to an active Zoom conference.

Add participant

Select "Add participant".

or

Conference


Select "Conference".

or

Invite

Select "Invite".

The total participant count is displayed on screen. If you try to add too many participants, a warning message "Too many participants" will appear.

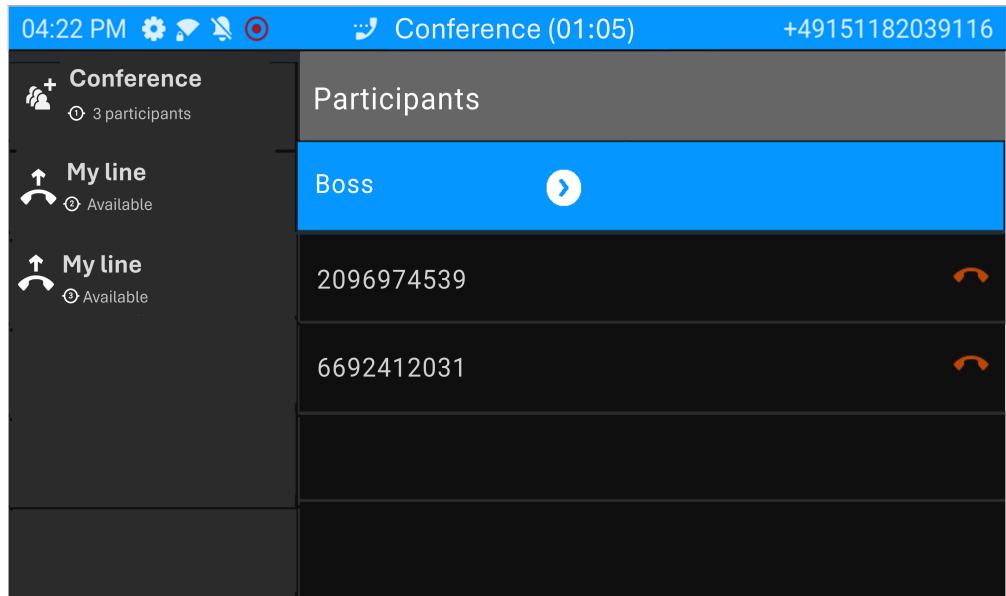


Viewing participants (as moderator or participant)

To view a list of participants, press the **Participants** option on the Call screen.

The moderator of the conference appears as the first entry in the list, while the current user appears as the last.

Use the right arrow key to view details for any highlighted participant.

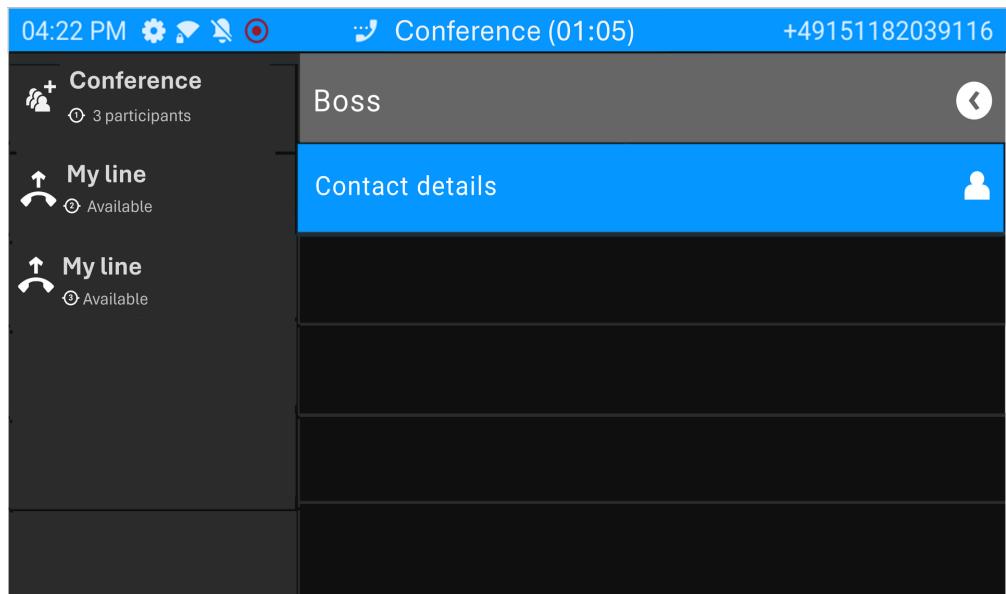

Removing a participant (as moderator)

Note

Only the moderator can remove other participants. Non-host participants can only remove themselves from the conference.

1. Access the participant roster.
2. Use the navigation key to scroll through the participants.
3. Select the participant you want to remove and press the **Remove** soft key or select **Disconnect**.

Note

The moderator cannot remove themselves using the **Remove** soft key. When the moderator is highlighted, the **Remove** soft key will not appear.

Ending a conference

As a moderator, you can end the conference for all participants. As a participant, you can leave the conference without ending it for others.

To end a conference as moderator:

End conference



Select "End conference".

The entire conference will be terminated and all participants will be disconnected.

Establishing a local conference

The CP Phone uses a local 3-party conference only if your administrator has changed the default server-based Zoom MPC setting.

You can initiate a conference with the function "Conference" in the context menu of either the active or the held call. You can optionally press the fixed key "Conference" or a configured conference key.

If you are already involved in a connection with a party when you initiate the consultation call, the original party is placed on hold.

The new consultation connection can be either secure or not secure. However, the first connection remains secure even if all three parties are joined together in a local conference.

The entire conference is not secure if the connection to at least one of the parties is not secure.

The padlock icon for secure call () or non-secure call () is displayed.

Start conference



 
Select "Start conference". You are connected to both parties at once.

- Optionally, press the key.
- Optionally, select "Conference".


Conference

Querying information on contacts

Participants



 Select "Participants" to display the contacts.



Select the contact.



Open the contact information.

Ending the local conference

Allowing call partners to continue a conference after you exit

Prerequisite: The function "Allow joining in a local conference" was activated (see ("Allow joining in a conference" → page 191)).

Exit conf.



Select "Exit conf.".



- Optionally, hang up.

 


- Optionally, press the loudspeaker key, if you are in speakerphone mode.

Both call partners remain connected. You are disconnected from the conference call.

Disconnecting a party

End conf.



Select "End conf.". Both connections are closed.

Ending the server hosted conference

Allowing call partners to continue a conference after you exit

Exit conf.



Select "Exit conf.".

PUTTING ON HOLD AND RETRIEVING ALTERNATELY OR SIMULTANEOUSLY

 
Prerequisite: You are conducting a consultation call or have accepted a second call. You are in the call connection menu.

Putting an active call on hold



Press the key.

Hold



- Optionally, select "Hold". The consultation or second call is created and the first call are put on hold.

Retrieving the first call

 


Press the key to switch to "Conversations".



Select the first caller in the list.

Reconnect



Select "Reconnect". You are connected with the selected party. The consultation or second call remains on hold.

Retrieving the second call

 


Press the key to switch to "Conversations".



Select the second caller in the list.

Reconnect




Select "Reconnect". You are connected with the selected party. The first call remains on hold.

CONNECTING PARTIES

You can connect the first party with the party you consulted, clearing down your connection to both parties in the process.

Prerequisite: You are conducting a consultation call and call joining is allowed.

 Complete transfer



Select and confirm the option shown. The active and held calls are joined. you can hang up the phone.

Connecting by hanging up



 
Hang up the handset or, if you are in speakerphone mode, press the loudspeaker key. The other two parties are now connected to one another.

PLACING A CALL ON HOLD

You can use this function to place an ongoing call on hold, e.g. to prevent the another party hearing a conversation with a colleague in the same room.

Prerequisite: You are conducting a call.

Hold



Select and confirm the option shown.



- Optionally, press the key shown. The key illuminates.

If you do not retrieve the held call after a defined time interval, a reminder beep sounds three times and a prompt to retrieve the call or disconnect appears on the display.

Retrieving a held call

Reconnect



Select and confirm the option shown.



- Optionally, press the illuminated key.

Disconnecting a held call

End



Select "End" to disconnect the held call.

CALL WAITING (SECOND CALL)

Every registered line on a CP phone is represented as three virtual line appearances. Each appearance can handle one active or held call. When multiple calls are received, Zoom automatically assigns incoming calls to the next available line appearance.

When a second call comes in:

- If you are already on a call, you will hear a call-waiting tone. The incoming call is shown on the display on a free line appearance, including the caller's name or number.
- You can **ignore** or **accept** the second call.

If you accept the call:

 
- The phone automatically places the current active call on hold.
- The new call becomes active.

If call waiting is disabled by your administrator, additional incoming calls will not be offered. You can block the second call (see "Configuring Associated Lines" → page 138).

Answering a second call

Prerequisite: You are conducting a call and call waiting is allowed ("Allowing call waiting" → page 186).

Answer



Select and confirm the option shown.

You can talk to the second party. The connection to the first party is on hold.

During the call with the second party, additional functions are available for selection:

- Alternate (see "Switching to the held party (alternating)" → page 89)
- Complete transfer (see "Connecting parties" → page 95),
- Conference (see "Zoom MultiParty Conference (MPC)" → page 90),
- Blind transfer (see "Transferring a call" → page 98),
- Hold (see "Placing a call on hold" → page 95).

- Put on hold and retrieve second and first call successively (see "Putting on hold and retrieving Alternately or simultaneously" → page 94).

Consultation call from second call

If the second call is active, you can start a consultation call by selecting an idle line appearance.

Your administrator must allow consultation for the second call.

From a consultation call in the second call you can select one of the following options:

- Initiate a conference
- Toggle between the second call and a consultation call
- Place a call on hold and retrieve it by selecting its line key.
- Transfer a call
- Disconnect the calls again

The first call (the call that was active before the second call arrived) remains on its own separate line appearance in Hold state.

Disconnecting the second call

End & reconnect



Select and confirm the option shown. The call to the current contact is disconnected and the last call is reconnected.

Ending the second call by hanging up

If you or the second call partner hangs up, you will be prompted to retrieve the first call again if "Hold and hang-up" is disabled (see "Enabling or disabling "Hold and hang-up"" → page 183). Otherwise, the first call will remain on hold until you receive this message after a defined interval.

Rejecting a second call

Prerequisite: You are conducting a call and call waiting is allowed (see "Allowing call waiting" → page 186).

Reject



Select and confirm the option shown.

The second call is rejected. The caller hears the busy signal. The caller's phone number is added to the missed calls list in "Conversations".

Deflecting a second call

Prerequisite: You are conducting a call and call waiting is allowed (see "Allowing call waiting" → page 186).

Deflect



Select and confirm the option shown.

Deflecting

If a destination phone number is stored, you can select and confirm it (see). The call is deflected.

If you did not set a phone number when programming call deflection, you are prompted to enter a destination phone number for call deflection.



Enter and confirm the destination phone number.

The second call is deflected to the destination specified. You are reconnected with the first party.

Connecting parties

Complete transfer



Select and confirm the option shown. The other two parties are now connected to one another. You can now hang up or dial another number.

Connecting by hanging up

Connecting by hanging up is activated (consult the administrator) and "Toggle associate" must be enabled ("Connecting contacts by hanging up" → page 187).



Hang up the handset or, if you are in speakerphone mode, press the loudspeaker key. The other two parties are now connected to one another.

TRANSFERRING A CALL

You can transfer your current call to another party with or without consultation.

Prerequisite: You are conducting a call. The options "Allow call transfer" and "Transfer on ring" are allowed (see "Allowing call transfer" → page 187).

Blind transfer



Press the key shown.

Transfer



- Optionally, press the function key.



Enter and confirm the phone number of the second party to whom you want to transfer the call. You can also select and call the contact from conversations at this point.

The list of conversations is displayed after the transfer action has been selected.

Transferring with consultation

You can announce a call to a recipient before transferring it.

Consult



Select "Consult".



Enter and confirm the phone number of the second party to whom you want to transfer the call. You can also select and call the contact from conversations at this point.

Announce the call you want to transfer.

Complete transfer

Select "Complete transfer".

If the party does not answer

You do not have to wait for the second party to answer before you can transfer the call.

Complete transfer

Select "Complete transfer".

- Optionally, hang up the handset or, if speakerphone mode is active, press the illuminated key to transfer the call.

If the party does not answer, you will be called back by the first party after a defined time.

Transferring with selected dialling key

Prerequisite: The dialling key is configured to one of the available programmable keys.

The administrator must have configured the option "Selected Dial Action on Calls" to be either "Consult" or "Transfer". If it is set to "No action", nothing will happen.

Dialling via "Favourites" or from a key module



Press the key to open the main menu.

Favourites

Select "Favourites".



Select the function key. The configured action will be triggered. The call will be placed on hold and either a consultation call or a blind transfer will take place.



Dialling via a function key in the left panel

Select the function key. The configured action will be triggered. The call will be placed on hold and either a consultation call or a blind transfer will take place.

Transferring a call using the dialling keys is also possible for mobile users who are logged on the phone and if a Bluetooth headset is used.

ENDING A CALL



Hang up.

End

- Optionally, select "End".
- Optionally, press the key shown. The LED goes out.
- Optionally, press the key shown. The LED goes out.



After the call has ended (either by you or the remote party), end of call notification with duration of the call will be shown on the phone screen.

Configuring local call forwarding

Call forwarding and Do Not Disturb (DND) settings apply to all calls on your phone, regardless of whether the call is on a shared line or a private line appearance. This means that when you enable call forwarding, incoming calls on any line or line appearance will be forwarded according to your configuration.

You can also configure the call forwarding settings via "Presence" (see "Activating immediate call forwarding" → page 176).

For more information on configuring settings via the web interface, see "Web interface (WBM)" → page 204.

Press the key to open the main menu.

Settings

Open "Settings".

User settings

Open "User settings".



Enter and confirm the user password, if required.

Configuration

Select "Configuration".

Incoming calls

Select "Incoming calls".

Forwarding

Select "Forwarding". For a description of the settings and call forwarding types, see "Programming the function keys" → page 127.

 
CONFIGURING "CALL FORWARDING" CONTROLS

Settings

Select "Settings". For a description of the settings, see "Programming call forwarding" → page 175.

SETTING ALERTS

You can activate and deactivate visual and audible alerts for calls that have been forwarded to you. You can also configure for how long you want to see the call forwarding toast message on the screen. On Zoom-connected CP Phones, call forwarding alerts apply to all lines.

	Press the key to open the main menu.
	Open "Settings".
	Open "User settings".
	Enter and confirm the user password, if required.
	Select "Configuration".
	Select "Incoming calls".
	Select "Forwarding".
	Select "Alerts".
	Enable or disable visual alerts, i.e. messages on the screen.
	Enable or disable audible alerts, i.e. alert sounds.
	Select the party for forwarding the call. The following options are available: <ul style="list-style-type: none">• Display first• Display last
	Select "Visual alert time (secs)". This controls the alert when a call to you has been forwarded. Set the time for the visual alert to remain displayed on the screen. If you set the value to zero, the call forwarding message will not be shown.
	Use the corresponding function key to select the time.
	Save the setting.

Using Microsoft® Exchange

If configured, the phone imports contacts from Microsoft® Exchange and keeps them updated by the Microsoft® Exchange services.

Microsoft® Exchange is not included in a search but imported contacts are part of a conversations search.

Setting up Microsoft® Exchange access

 For more information on configuring settings via the web interface, see "["Web interface \(WBM\)" → page 204.](#)



Press the key to open the main menu.



Open "Settings".



Open "User settings".



Enter and confirm the user password, if required.



Select "Configuration".



Use the navigation keys to scroll, if required.



Select "Microsoft® Exchange".

Edit the settings for the Microsoft® Exchange server by entering the following information:

- IP address of the server
- Username
- User password
- Folder (optional) for the source data



Save the setting.

Searching for contacts via conversations

For a description of how to perform searches, refer to "["Searching for conversations" → page 56.](#)



Select "Conversations".

 


Enter the search term, e.g. phone number. The search entry is displayed.

123

X

Only contacts whose phone number contains the entered digits are shown in the results. You can also search by name by if the input mode is set to alphabetic (which is the default mode).



Select the contact. You can now:

- Call the contact (see "Dialling an entry" → page 103)
- View the contact details (see "Viewing details" → page 103)

Dialling an entry




Select the contact with the corresponding function key. The phone number is dialled.

Viewing details



Use the navigation key to open the contact details.

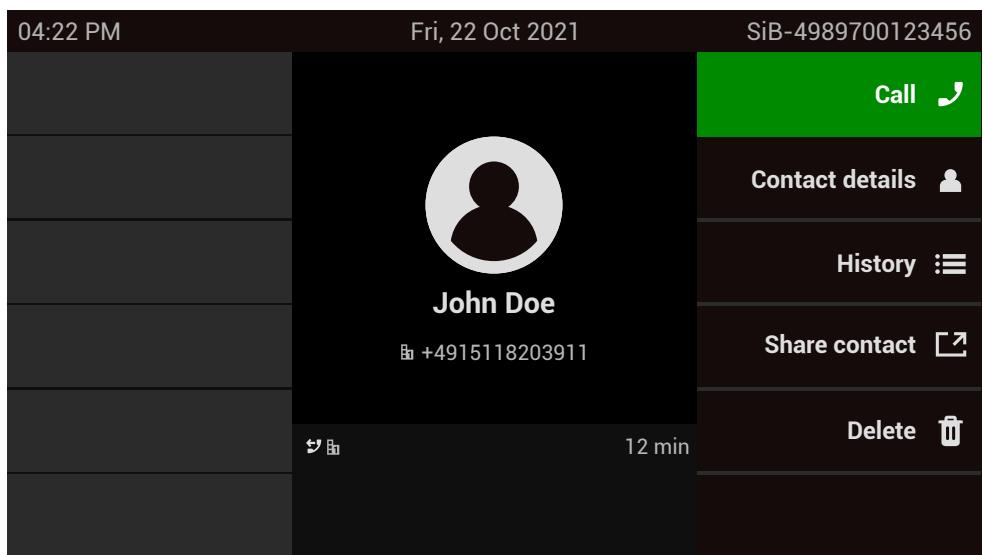

Contact details

Select "Contact details" to display the details of the contact.

History

Select "History" to view the call history.

Share contact

Select "Share contact" to share the contact details to the paired devices such as mobile phones.

Delete

Select "Delete" to remove the contact from the contact entries. The contact details and the history is removed.


Listening to voice mail

Prerequisites

1. The Administrator must configure the number of the voicemail (VM) server on the communication platform.

Once the VM server is set, users can access their voicemail by calling the configured VM number or by long-pressing the 1 key on the keypad (this key is assigned to voicemail and marked with a dedicated icon).

Alternatively, you need to have a voice mailbox set up on your communication platform for voice mails (see "Answering machine ("Voicemail")" → page 66).

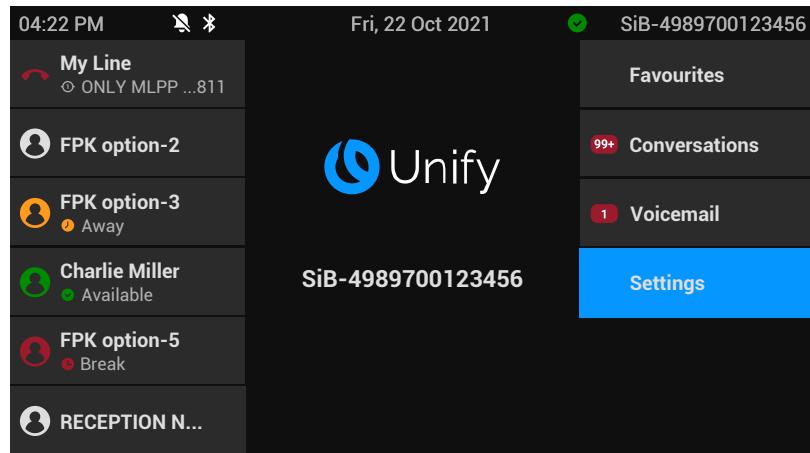

The notification LED lights up to signal new messages. It only extinguishes when all messages have been picked up. The number of messages is displayed on the screen.

Picking up messages



Press the **MWI key** or long press the 1 key.

Select "Voicemail". The answering machine is called and the voice mails are controlled by the voice mail server.

Using Bluetooth

Bluetooth is an open standard for high-performance technology and wireless communication, e.g. between PCs and tablets or mobile telephones and headsets.

In contrast to infra-red connections, Bluetooth can be used over distances of up to 10 meters even without direct visibility of the communicating devices.

To exchange data between Bluetooth enabled devices, the devices need to undergo a one-off discovery procedure.

Discoverability

When first enabling a connection to a Bluetooth device, this function must be switched on (see "Pairing Bluetooth devices" → page 106).

The OpenScape Desk Phone CP710 is recognizable by default for other Bluetooth devices once pairing is enabled.

The Bluetooth discoverability feature is disabled on exiting the pairing menu to prevent misuse.

A connection is established for devices that are already connected even if the function "Discoverable" is deactivated.

Pairing and connecting

Pairing is the process used by two Bluetooth enabled devices to "see" one another and to "recognize" that they can exchange data. It is therefore used for checking the access authorization of a Bluetooth device in a Bluetooth network. To do this, a 128-bit link key is created for subsequent identification.

If the Bluetooth device has a NFC reader (Near Field Communication), it can be automatically paired with the phone.

Pairing is only required for the first contact between a Bluetooth device and the phone. Once the Bluetooth device is successfully paired, no further access authorization checks are required. Instead, each subsequent check uses the previously created link key.

Connecting stores the pairing information and identification key of the device on the phone. To pair the device with another phone, it must be disconnected, i.e. the key must be removed.

PAIRING BLUETOOTH DEVICES



Press the key to open the main menu.



Open "Settings".



Open "User settings".




Enter and confirm the user password, if required.



Select "Bluetooth".



Select "Paired devices".

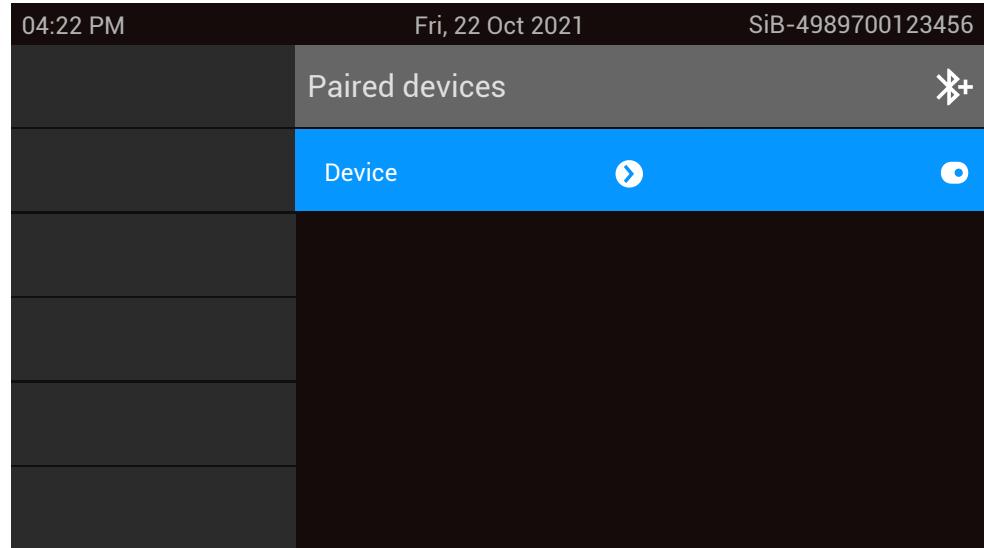


The paired devices are displayed.



Press the function key to start the scan for new devices. Start or set the paging function on the device if appropriate.

 The located devices are displayed. Repeat the scan if the device is not displayed.



Select the Bluetooth device.



Select "Accept". The device is paired and added to the list.



If a pairing PIN is requested, enter the PIN and confirm with the function key. The device is paired and added to the list.

The phone is now paired with the Bluetooth device, but not yet connected (see "Disconnecting a Bluetooth device" → page 119).

Pairing is only performed the first time a link is established between the Bluetooth device and the phone. If the Bluetooth device is successfully paired, no further access authorization checks are necessary. Instead, each subsequent check uses the previously created link key.

CONNECTING OR DISCONNECTING A BLUETOOTH DEVICE

After pairing, the device must be connected to the OpenScape Desk Phone CP710. To use the device at another location, it must first be disconnected from the current phone.



Press the key to open the main menu.

Settings

Open "Settings".

User settings

Open "User settings".



Enter and confirm the user password, if required.

Bluetooth

Select "Bluetooth".

Paired devices

Select "Paired devices". Select the device in the list of paired devices.

Confirm to connect. The connection is immediately established and the device is ready for use.

Disconnecting the device

Select the device in the list of paired devices.

Confirm to disconnect. You will receive a corresponding confirmation.

Transferring contacts

Bluetooth on the OpenScape Desk Phone CP710 allows you to transfer contacts in "vCard" format (file extension: *.vcf) from other Bluetooth devices and save them in the "Conversations". You can also send entries from "Conversations" to other Bluetooth enabled devices.

The instructions for data transfer via Bluetooth provided in the relevant manufacturer documentation should be observed.

RECEIVING A VCARD

Prerequisites: Bluetooth is enabled on the phone (see "Activating Bluetooth" → page 118).

A vCard file is stored on the Bluetooth enabled device (PC, tablet, mobile phone, etc.).

Start the data transfer on the device. If a vCard is transmitted, you are asked to accept the data transfer.

Example

Accept	
Store	

Select "Accept".

Store	
-------	--

Select "Store" to save the vCard(s) to the contact list. The transfer is confirmed.

SENDING A VCARD

Sending to a paired device

Prerequisite: The receiving device is included in the list of paired devices, Bluetooth is enabled on the device and can receive vCards.

Conversations	

Select "Conversations".

Select the required contact. The selected contact is highlighted.



Use the navigation keys to scroll, if required.



Open the contact details.

Share contact	

Select "Share contact".



 
Press the function key. The menu for paired devices is displayed. A search for devices is initiated.

Select and confirm the transfer on the paired device, e.g. a mobile phone. The vCard for the entry is sent. (You will receive confirmation.)

Save the vCard information on the remote device.

Sending to an unpaired device

Prerequisite: Bluetooth is activated on the device and the device can receive vCards.




Select the required contact in "Conversations". The selected contact is highlighted.



Open the contact details.

 Share contact	



Select "Share contact". A search for devices in the vicinity of the phone is initiated.



Wait until the device is displayed.



Select and confirm the transfer on the selected device, e.g. a laptop. The vCard for the entry is sent (you will receive confirmation).

Save the vCard information on the remote device.

After transmission, detected unpaired devices are deleted from the list.

Synchronize contacts with a paired device via Bluetooth

Bluetooth on the phone allows the synchronisation of contacts with a paired device whenever the two devices are connected.

Prerequisite: Bluetooth is enabled on the phone (see "Activating Bluetooth" → page 118).



Press the key to open the main menu.



Settings



Open "Settings".



User settings



Open "User settings".



Enter and confirm the user password, if required.



Bluetooth



Select "Bluetooth".



Paired devices



Select "Paired devices".




●



Select the device.

Synchronizing contacts

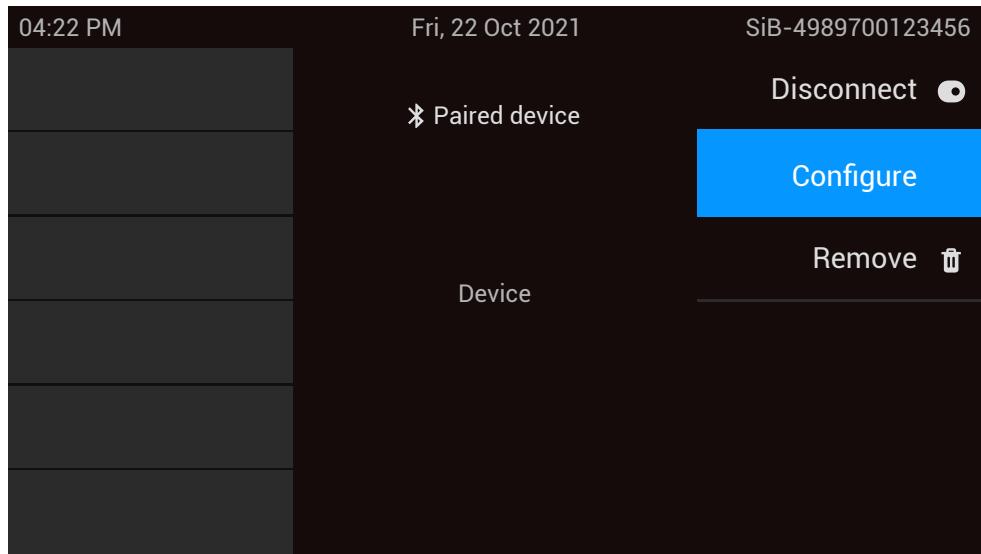

Configure



Select "Configure".

There are two options for synchronizing the contacts:

- **Synchronize contacts now:** by selecting this option, the transfer of contacts between the mobile phone and the OpenScape Desk Phone CP710 starts immediately.
- **Automatic synchronize contacts:** by enabling this option, the transfer of contacts between the device and the OpenScape Desk Phone CP710 starts automatically when the two devices are connected via Bluetooth.



Select either of the two options to synchronize your contacts. No confirmation is necessary, since the synchronization has been initiated by the phone.



Save the setting.

Using a Bluetooth headset

You can connect a Bluetooth enabled headset to the phone, if it is approved for use with the phone. Ask the administrator about approved headsets.

Prerequisite: Bluetooth is enabled on the phone (see "Activating Bluetooth" → page 118).

PAIRING AND CONNECTING A BLUETOOTH ENABLED HEADSET

Pairing and connecting a Bluetooth enabled headset requires the same pairing and connecting procedure for all Bluetooth devices:

- Enable Bluetooth pairing mode on the headset (see the user manual supplied with the device).
- Start pairing the device (see "Pairing Bluetooth devices" → page 106)
- After successfully pairing the device, connect it with the phone (see "Connecting or disconnecting a Bluetooth device" → page 107)

TESTING A BLUETOOTH HEADSET



Press the key on the dialpad. You should now hear the on-hook signal in the headset.

 123

Enter any phone number. The input field is opened.

 OK

Confirm that the phone number is complete or wait until the autodial delay expires.

The selected contact is shown in the list.



Confirm with the function key. The connection is set up.

Adjust the call volume on the headset.

Using a Bluetooth enabled conference phone

You can connect a Bluetooth enabled conference phone to the OpenScape Desk Phone CP710, if it is approved for use with the phone.

Ask the administrator about approved conference type phones.

PAIRING AND CONNECTING A BLUETOOTH ENABLED CONFERENCE PHONE

Below is an example of pairing, connecting, and testing the conference phone "Konftel 60W".

Prerequisite: Bluetooth is enabled on the phone (see "Activating Bluetooth" → page 118). The conference phone is ready for use but switched off.

Finding and pairing the conference phone

Hold down the **trim** key on the conference phone for two seconds until the blue display lights flash.

Pairing and connecting a Bluetooth enabled conference phone requires the same pairing and connecting procedure for all Bluetooth devices:

- Enable Bluetooth pairing mode on the conference phone (see the user manual supplied with the device).
- Start pairing the conference phone (see "Pairing Bluetooth devices" → page 106)
- After successfully pairing the conference phone, connect it with the OpenScape Desk Phone CP710 (see "Connecting or disconnecting a Bluetooth device" → page 107)

TESTING THE BLUETOOTH ENABLED CONFERENCE PHONE

Prerequisite: The conference phone is ready for use but switched off. The OpenScape Desk Phone CP710 is in idle mode.

Both the phone and the conference phone ring. The caller is displayed. To answer the call, you have the following options:



Answer



- Press the key shown.
- Select "Answer".
- Press the On-Off key on the conference phone.

You are connected with the other party. The conference phone is activated. You can initiate a consultation call or accept a second call to set up a conference.

Using a Bluetooth hands-free device

You can control calls on the HFAG (hands-free audio gateway, e.g. mobile device) from the phone via Bluetooth.

Once the mobile device is connected to phone via Bluetooth, you can see the mobile's battery level in the status bar of the main menu.

The icon "Telephony"  indicates that the paired device can be connected as hands-free Bluetooth device. When connected, the device provides remote telephony functions: calls received by the mobile network are displayed and can be controlled by the phone.

INCOMING HFAG CALL

 
The Bluetooth status bar indicates an HFAG call.

For more information about how to proceed during incoming call, see "[Incoming calls](#)" → page 73.

CONNECTED HFAG CALL


The status bar icon indicates an HFAG call.

End audio



Select "End audio" to transfer the HFAG call audio from the OpenScape Desk Phone CP710 to the HFAG.

 Pull audio



Select "Pull audio" to reroute the audio stream from HFAG back to the OpenScape Desk Phone CP710.

For more information about how to proceed during a call, see "[Activating or deactivating the microphone](#)" → page 85.

OUTGOING HFAG CALL

When the call is started on the HFAG device, the Bluetooth status bar icon indicates an HFAG call.

HFAG CALL STATES IN "CONVERSATIONS"

Connected HFAG calls are displayed in "Conversations". The HFAG call is distinguished from native calls by a special call state icon below the user name or phone number.

Using a Bluetooth keyboard

A Bluetooth keyboard can be paired with the phone. After successful pairing, the keyboard appears in the list of "Paired devices" and a "keyboard" icon  is displayed in status bar.

There can be only one keyboard device connected at the same time.

Pairing and connecting a Bluetooth keyboard

Pairing and connecting a Bluetooth enabled keyboard requires the same pairing and connecting procedure for all Bluetooth devices:

- Enable Bluetooth pairing mode on the keyboard (see the user manual supplied with the device).
- Start pairing the device (see "Pairing Bluetooth devices" → page 106)
- After successfully pairing the device, connect it with the phone (see "Connecting or disconnecting a Bluetooth device" → page 107)

After successfully connecting the keyboard, the icon  is displayed in the status bar.

The simultaneous usage of a Bluetooth keyboard and phone keypad is possible. The phone interface differentiates between events from the Bluetooth keyboard and the dialpad and shows the input box and its settings only for the dialpad.

Supported languages

The following languages for a Bluetooth keyboard are supported:

- German
- English
- French
- Italian
- Spanish

For other languages, the English keyboard layout will be used.

Navigation keys

The navigation keys on a Bluetooth keyboard substitute the following keys on the dialpad:

- Direction keys = direction keys (up / down, left / right, OK)
- Enter = OK
- Backspace = Back
- Esc = Go to landing screen
- Tab = Menu key
- Menu = Menu key
- "Volume" keys = Volume keys
- "Mute" key = Microphone mute
- "Find" = Go to "Conversations" and start searching
- The "Page down" key moves the highlighted item down by the number of screen lines.
- The "Page Up" key is equivalent to 5 navigation key presses upwards
- The "Home" key is equivalent to a long press of the navigation key upward
- The "End" key is equivalent to long press of the navigation key downward

Numerical keys

When the phone is in idle state, pressing numerical keys on keyboard initiate dialling in the same way as number keys on the dialpad do.

When the phone is in a call, pressing numerical keys on the keyboard sends DTMF tones in the same way as numerical keys on the dialpad do.

USING A BLUETOOTH "REMOTE BUTTON"

A Bluetooth device with a single button for triggering an action (e.g. emergency calls) can be paired with the phone (see "[Pairing and connecting](#)" → page 105). After successful pairing, the device is displayed with a keyboard profile in the paired devices. You can choose the following keys as "remote button":

- Function keys on the phone
- Function keys on the key module

Only a configured function key can be selected as a "Remote button".

The shifted level function of a function key cannot be selected.

Pairing and connecting a Bluetooth remote device

Pairing and connecting a Bluetooth enabled "Remote button" device requires the same pairing and connecting procedure for all Bluetooth devices:

- Enable Bluetooth pairing mode on the device (see the user manual supplied with the device).
- Start pairing the device (see "Pairing Bluetooth devices" → page 106)
- After successfully pairing the device, connect it with the phone (see "Connecting or disconnecting a Bluetooth device" → page 107)

After successfully connecting a Bluetooth "Remote button" device, the icon  is displayed in the status bar.

Enabling the "Remote button"



Press the key to open the main menu.



Open "Settings".



Open "User settings".



Enter and confirm the user password, if required.



Select "Bluetooth".



Select "Paired devices".



Select the connected Bluetooth keyboard and open the settings.



Select "Configure".



Select "Remote button".



Enable the remote button.



Select "Select key".



Select one of the options that have been assigned to a function key.

TRIGGER ON RECONNECT

When reconnecting (i.e. after starting from energy saving mode), the phone automatically reconnects and the remote button triggers the configured function key if enabled. You need to press the remote button only once.


If the option "Trigger on reconnect" is disabled, you must press the remote button twice. First time it will reconnect and second it will trigger the configured function key.

Enabling "Trigger on reconnect"

Navigate to the Bluetooth keyboard settings (see "Using a Bluetooth keyboard" → page 114).



Select the paired device and select "Configure".

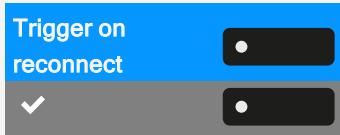

Enable "Trigger on reconnect".

Save the setting.

Using a Bluetooth temperature sensor

A Bluetooth temperature sensor can be connected to the OpenScape Desk Phone CP710 to detect temperature and humidity measurements and display them on the phone screen.

Ask the administrator about approved temperature sensors types or visit
<https://wiki.unify.com> for further information.

PAIRING AND CONNECTING A BLUETOOTH TEMPERATURE SENSOR

Prerequisite: Bluetooth is enabled on the OpenScape Desk Phone CP710 (see "Activating Bluetooth" → page 118).

Pairing and connecting a Bluetooth enabled temperature sensor requires the same pairing and connecting procedure for all Bluetooth devices:

- Enable Bluetooth pairing mode on the temperature sensor (see the user manual supplied with the device).
- Start pairing the device (see "Pairing Bluetooth devices" → page 106)
- After successfully pairing the device, connect it with the phone (see "Connecting or disconnecting a Bluetooth device" → page 107)

TEMPERATURE AND HUMIDITY MEASUREMENTS

If a temperature sensor is connected, the temperature and the percentage of the humidity are displayed on the main menu screen. The measurements are updated automatically every 30 seconds.

The temperature and humidity measurements are also displayed in the status bar when the phone is idle, interchanging with the current date.

The country settings of the phone determine whether the temperature is displayed either in Celsius or in Fahrenheit according to the local standard (see "Country-specific setting" → page 164).

DEACTIVATING THE TEMPERATURE SENSOR

To deactivate the temperature sensor, it must be removed from the list of the "Paired devices" (see "Managing Bluetooth devices" → page 119).

Bluetooth settings

ACTIVATING BLUETOOTH

The Bluetooth function must be enabled by the administrator.

 For more information on configuring settings via the web interface, see "Web interface (WBM)" → page 204.



Press the key to open the main menu.



Open "Settings".



Open "User settings".



Enter and confirm the user password, if required.



Select "Bluetooth".



Activate with the function key.

Bluetooth is now available and the icon  is displayed in the status bar.

CHANGING THE BLUETOOTH NAME OF THE PHONE

Here you can determine the name of the phone that is used when registering at other Bluetooth devices.

 For more information on configuring settings via the web interface, see "Web interface (WBM)" → page 204.

By default, the Bluetooth name is "OpenScape Desk Phone CP710".



Press the key to open the main menu.



Open "Settings".



Open "User settings".



Enter and confirm the user password, if required.



Select "Bluetooth".



Select "Configuration".



Select "Phone name".



Edit the phone name using the dialpad.



Save the setting.

MANAGING BLUETOOTH DEVICES

The following functions are available in the Bluetooth pairing manager:

- Adding a Bluetooth device (see "Pairing and connecting" → page 105)
- Deleting a Bluetooth device list
- Connecting or disconnecting paired Bluetooth devices
- Removing single Bluetooth devices from the list
- Renaming Bluetooth devices in the list

The OpenScape Desk Phone CP710 is visible for other Bluetooth devices in the vicinity when this menu is open.

DISCONNECTING A BLUETOOTH DEVICE

Prerequisite: At least one Bluetooth device is listed.



Press the key to open the main menu.



Open "Settings".



Open "User settings".



Enter and confirm the user password, if required.



Select "Bluetooth".



Select "Paired devices". All paired devices are displayed.

A message is displayed that the phone is now visible for other Bluetooth devices while you are in this menu.



Select the device.



Confirm with the function key to disconnect. You will receive a corresponding confirmation. The connection is closed automatically if you switch off the device.

DISCONNECTING A BLUETOOTH ENABLED DEVICE AUTOMATICALLY

If the device is proximity-system enabled, proximity monitoring is activated by default. As soon as the paired device comes into the vicinity of the phone, the connection is established automatically. If the device is moved out of reach for the Bluetooth proximity sensor, the connection is dropped.

Proximity Monitoring is enabled by default.



Press the key to open the main menu.

Settings

Open "Settings".

User settings

Open "User settings".



Enter and confirm the user password, if required.

Bluetooth

Select "Bluetooth".

Paired devices

Select "Paired devices".



Open the device settings.

Configure

Select "Configure".

Proximity Monitoring

Select "Proximity Monitoring" to disable it. When disabled (), the device will no longer disconnect automatically once it leaves the vicinity of the phone.

SETTING THE PROXIMITY THRESHOLD

You can set the proximity threshold for each paired device individually. This increases or decreases the sensitivity for the Bluetooth signal of the device and prevents multiple Bluetooth enabled devices from interfering.



Press the key to open the main menu.

Settings

Open "Settings".

User settings

Open "User settings".



Enter and confirm the user password, if required.

Bluetooth

Select "Bluetooth".

Paired devices

Select "Paired devices".



 
Open the device settings.

Configure

Select "Configure".

Proximity Threshold 

Select "Proximity Threshold".



Select "Edit".

Use the function key to increase the value.

Use the function key to decrease the value.

- Optionally, use the keys on the dialpad.

Save the setting.

Proximity Indicator

Checking the proximity sensor

Check different positions of your Bluetooth device at which the connection can still be maintained by moving the device closer and further away from the phone.

DEACTIVATING AUDIO

If no audio function is provided for the Bluetooth enabled device, you should disable audio in your device's settings.

 The function is always activated by default.

 Press the key to open the main menu.

Settings 

Open "Settings".

User settings 

Open "User settings".



Enter and confirm the user password, if required.

Bluetooth 

Select "Bluetooth".

Paired devices 

Select "Paired devices".



Open the device settings.

Configure 

Select "Configure".

Audio 

Select "Audio". This option is only displayed when the device provides audio.

Deactivate "Audio". The icon  next to the device name is removed.

Save the setting.

REMOVING A BLUETOOTH DEVICE FROM THE LIST

You can remove a single Bluetooth device from the list.

-  Press the key to open the main menu.
-  Open "Settings".
-  Open "User settings".
-  Enter and confirm the user password, if required.
-  Select "Bluetooth".
-  Select "Paired devices".
-  Open the device settings.
-  Select "Remove".
-  Confirm removal.

RENAMING A BLUETOOTH DEVICE IN THE LIST

By default, a Bluetooth device is entered in the list with the name set in the device, mostly the device type or the device key. You can change the name for convenience.

-  Press the key to open the main menu.
-  Open "Settings".
-  Open "User settings".
-  Enter and confirm the user password, if required.
-  Select "Bluetooth".
-  Select "Paired devices".
-  Open the device settings.
-  Select "Configure".
-  Select "Name". The current name is displayed.
 abc 
 Edit the name using the dialpad.
-  Press the corresponding function key to confirm.



Save the setting.

Blacklist for Bluetooth devices

The blacklist contains the Bluetooth devices for which a connection set-up attempt is rejected by the OpenScape Desk Phone CP710. The connection will only be allowed if the connection is triggered by the OpenScape Desk Phone CP710.

ADDING BLUETOOTH DEVICES TO THE BLACKLIST



Press the key to open the main menu.



Open "Settings".



Open "User settings".



Enter and confirm the user password, if required.



Select "Bluetooth".



Select "Blacklisted devices".



Press the function key to start the scan for devices.

 


Select the device to add it to the blacklist. The device is removed from the scan list.

REMOVING A BLUETOOTH DEVICE FROM THE BLACKLIST



Press the key to open the main menu.



Open "Settings".



Open "User settings".



Enter and confirm the user password, if required.



 
Select "Bluetooth".



Select "Blacklisted devices".



Select "Remove".



Confirm removal.

Beacon

The phone can make contact via Bluetooth with smartphones or tablets in the vicinity using beacons. Information can then be exchanged between the phone and, for example, the smartphone. There are two option available:

- “Eddystone” is an Open Source project from Google for beacon applications.
- “iBeacon” is a project for beacon applications from Apple.

The “Beacon” functions can only be activated for either of the applications simultaneously. The selection depends on the devices used for pairing.

ACTIVATING “IBEACON” OR “EDDYSTONE”

 For more information on configuring settings via the web interface, see "Web interface (WBM)" → page 204.



Press the key to open the main menu.



Open “Settings”.



Open “User settings”.



Enter and confirm the user password, if required.



Select “Bluetooth”.



Select “Beacon”.



Select “Mode”. The following modes are available:

- Disabled
- Eddystone
- iBeacon

Unavailable options are greyed out.



Select the mode.



Save the setting.

The devices operating with the selected mode can be paired and connected (see “Pairing and connecting” → page 105).

CONNECTING TO A SERVER FOR PHONE BEACONS

This setting is read-only and can only be changed by the administrator via the web interface.

SETTING THE UUID

The Universally unique identifier (UUID) is an alphanumerical “name” for each device by which the devices are recognized in any network.

Changing the UUID makes the device, i.e. the phone, unrecognizable to connected devices and leads to a connectivity loss within a network.



Press the key to open the main menu.



Open “Settings”.



Open “User settings”.



Enter and confirm the user password, if required.



Select “Bluetooth”.



Select “Beacon”.



Select “UUID”. A 32-digit sequence is already displayed, defining the UUID broadcast ID in the network.

abc



Edit the UUID using the dialpad.



Save the setting.

SETTING CLASSES FOR “MAJOR” AND “MINOR”

Whereas projects such as “Eddystone” or “iBeacon” are intended for pairing and connecting Bluetooth devices from the respective companies and associated licensees, devices outside the projects’ scope can be integrated by defining the classes.

 
Generally speaking, this information is hierarchical in nature with the major and minor fields allowing for subdivision of the major category into subcategories:

- Major, comprising categories such as computers, phones, LAN / Network Access Points Audio / Video devices (headsets, speakers, stereos, video displays, VCRs), Peripherals (mice, joysticks, keyboards), and wearables
- Minor, comprising subcategories such as cellular phones, cordless phone, payphones, modems




Press the key to open the main menu.

Settings



Open "Settings".

 User settings




Open "User settings".




Enter and confirm the user password, if required.

 Bluetooth




Select "Bluetooth".

 Beacon



 Select "Major" or "Minor". An input may already be entered. This is used by the Beacon application to identify the beacon.




Select "Edit".

123



 Enter the classes using the dialpad.



Save the setting.

Programming the function keys

The phone features a range of functions that can be attributed to the programmable function keys. The phone comes with programmable keys that can be programmed on two separate levels.

After programming a function key, a "label" must be assigned to each corresponding function.

For Zoom-connected phones: All function keys are centrally provisioned by the Zoom server. Local programming via the phone or WBM is limited to unassigned/free keys only. The "Shift" function can be assigned to one of these keys to switch between key levels, or the second-level function can be accessed by long pressing the assigned key for 5 seconds.

- The keys are preassigned in the as-delivered state (see "Programmable function keys on the phone" → page 28).
- The keys can also be programmed via the WBM interface (see "Web interface (WBM)" → page 204).

List of available functions

Unallocated	Conference
Selected dialling	Do not disturb
Redial	Group pickup
Call Park	Repertory dial
Forward all calls	Line
Forward no reply	Feature toggle ¹
Forward busy	Mobility
CF unconditional - any	Directed pickup
CF no reply - any ¹	Release
CF busy - any ¹	Callback ²
CF unconditional - ext. ¹	Cancel callbacks ²
CF unconditional - int. ¹	Consult
CF no reply - ext. ¹	DSS

CF no reply - int. ¹	Call waiting
CF busy - ext. ¹	Immediate ring ²
CF busy - int. ¹	Start recording ²
Ringer off	AICS ZIP tone
Hold	Server feature
Alternate	BLF
Blind transfer call	Send URL
Transfer call	2nd alert
Deflect	

1) The feature is not available on an OpenScape 4000 phone system.

2) This function may be available only if supported by the SIP server.

About programming a key

 
A programmable key (function key) can be programmed in the following ways:

- Directly via a long press on the respective function key. Permanent keys and key module keys are immediately available.
- Via the screen “Favourites” (if a key module is not attached).
- All function keys can also be programmed by Web Based Management (WBM).
- Optionally, the function keys are programmed via the “Settings”.


The selection of available functions depends on the configuration. Ask the administrator when you are missing a function.

PROGRAMMING A KEY

Via the function key



Hold down the function key in the left panel, in the menu “Favourites” or on a connected key module until the key programming menu is displayed.

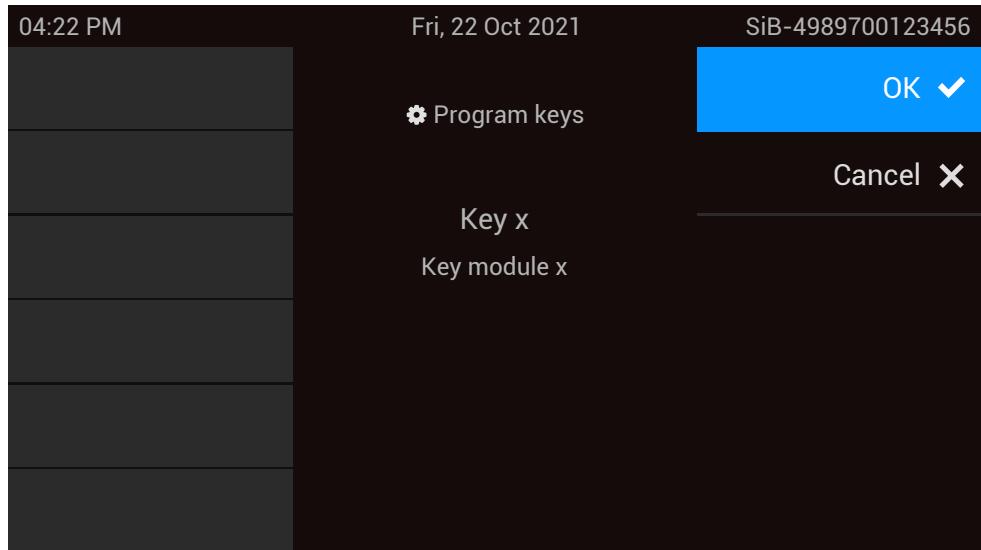

OK

Select "OK".

If the prompt is not displayed or a programmed function is not executed, you can launch key programming via the user menu (consult your administrator about the current setting).

Select the level and assign the options as well as the corresponding label (see "Labelling function keys" → page 130).

Select the function.

✓

Save the setting.

Via "Settings"



Press the key to open the main menu.

Settings

Open "Settings".

User settings

Open "User settings".



 
Enter and confirm the user password, if required.

Phone

Select "Phone".

Program keys

Select "Program keys".



- If a key module is connected, press the function key you want to program. The key LED on the key module lights up constantly.
- If no key module is connected, the screen "Favourites" is displayed.

OK

Select "OK".

Select the level and assign the options as well as the corresponding label (see "Labelling function keys" → page 130).



Select the function (see "List of available functions" → page 127).

A default label name is attached automatically. To change the label, see "Labelling function keys" → page 130.



Save the setting.

LABELLING FUNCTION KEYS

When programming a function key, the default label is used for the function, e.g. "Redial". This label is displayed on the screen next to the function key. However, the label can be changed according to your requirements at any time.



Press the key to open the main menu.



Open "Settings".



Open "User settings".



Enter and confirm the user password, if required.



Select "Phone".



Select "Program keys".



Press the function key you want to relabel. The key LED lights up constantly.



 
Select "OK".



Select "Label".



Enter the label text.



Press the function key to conclude input.



Save the setting.

PROGRAMMING ENHANCED FUNCTIONS

Some functions do not require additional information when used. In this case only the options "Normal", "Shifted", and "Label" are available.

 
Other enhanced functions present an additional option to edit the required additional information. The name of the option depends on the type of additional information required by the function:

- Dial number
- Destination
- Dial string
- Address
- Feature code
- Code
- Phone

Some functions can only be programmed by the administrator, but their label can still be edited.

Editing repertory dialling

Open the menu "Program keys" (see "Programming a key" → page 128).



Select the function key.



Select "Repertory dial".



Select "Dial ...".



Edit the label, if required.



Select "Dial string".



Edit the dial string, i.e. the contact phone number). You can enter special characters in the text string, such as:

- “‘”: Clear call
- “‘‘”: Pause
- “~”: Make consultation
- “a”: Make normal call



Save the setting.

Call forwarding depending on the forwarding type

Open the menu "Program keys" (see "Programming a key" → page 128).

Select one of the forwarding types to be programmed on the key:

 
- Forward all calls
- Forward no reply
- Forward busy

If a destination is configured, pressing the key will toggle forwarding to that destination for these conditions to be "on" or "off".


If the destination is empty, pressing the key will toggle all forwarding to the default destination for these conditions to be "on" or "off".



Confirm with the function key to set the call forwarding type.



 Enter the phone number of the destination.



Confirm the input.



 
Edit the label, if required (see "Labelling function keys" → page 130).

Save the setting.

USING CONTACT DATA FROM A CONVERSATION

You can assign phone numbers to selected function keys using the contact data from an existing conversation. It is also possible to copy the contact name and use it as a key label, but only with selected dialling keys.

Initiate the programming (see "Programming a key" → page 128).



Select the function key. The LED lights up .



Select "Normal".



Select "Selected dialling".



Select "Select conversation".

 


Select a conversation from the list or enter the first letters in the search field.




Select the search result.

Edit the function key label, if required (see "Labelling function keys" → page 130).




A conversation may have more than one phone numbers for its contact. To select a phone number other than the default, select the conversation and press .

 DELETING AN ASSIGNED FUNCTION FROM A KEY




Hold down the function key in the left panel, in the menu "Favourites" or on a connected key module until the key programming menu is displayed.

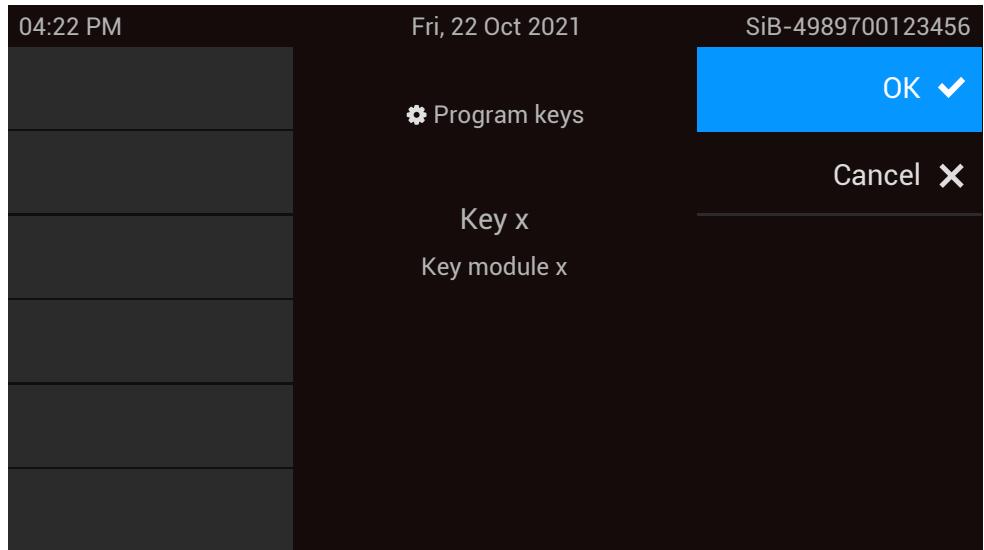


- OK** Select "OK".
- Normal** Select "Normal" (or select "Shifted" if the assigned function is on the second level).
- Unallocated** Select "Unallocated".
- ✓** Save the setting.


The function assigned to the key and the corresponding label are deleted.

 Setting up a selected dialling key



Hold down the function key in the left panel, in the menu "Favourites" or on a connected key module until the key programming menu is displayed.

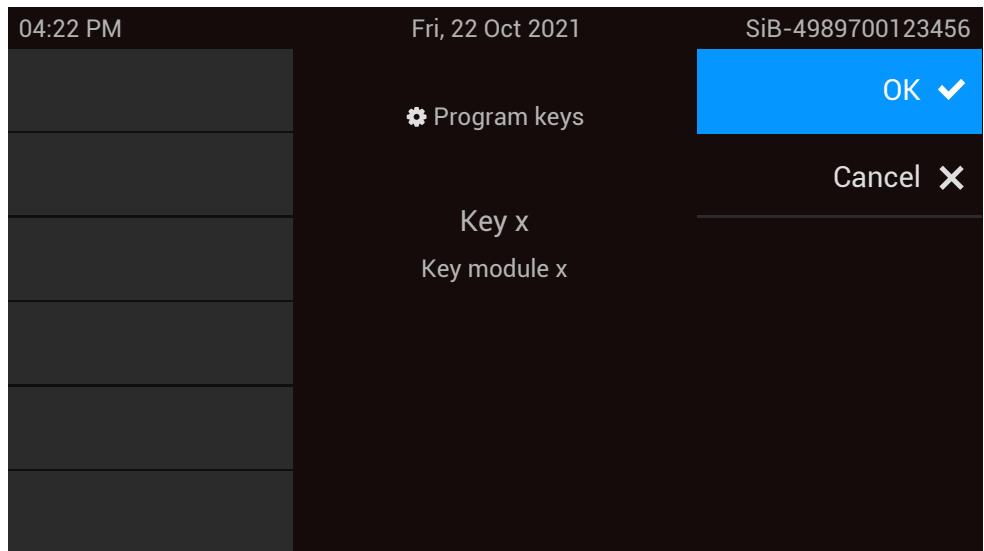

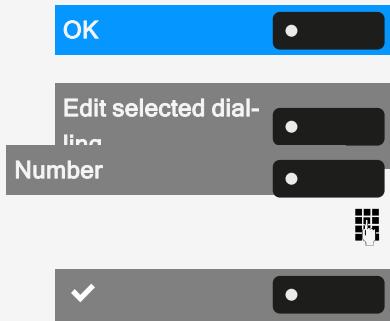

Select "OK".

Select "Edit selected dialling".

Number

Select "Number".



Enter the phone number and confirm.



Save the setting.

Resetting all assigned functions to keys

You can reset all keys you configured back to factory settings (see also "Resetting user data" → page 172).



Press the key to open the main menu.



Open "Settings".



Open "User settings".



 
Enter and confirm the user password, if required.



Select "Reset".



Activate or deactivate the setting for "Key programming" to be included in or excluded from the reset. If included, all function key settings are reset.



Select "Reset selected user data" to **immediately** reset all function keys (if enabled previously).

Keys that can only be configured by the administrator are not reset.



Select "Reset all user data" to reset all user settings.

Making calls in the team

Group call

Group Call Pickup and **Directed Pickup** allow a user to answer calls intended for other members of a group or for specific users. These features are fully managed on the Zoom Phone server, so no additional configuration on the phone is required, except for BLF keys if desired.

Prerequisites

- Your phone must be assigned to a pickup group on the Zoom server.
- BLF keys may be configured by the administrator with the appropriate pickup code (for example, *98).

Group pickup alerts are controlled by the Zoom Phone server. Alerts may be presented visually (flashing BLF key) or acoustically, depending on Zoom server configuration. The phone follows the alert type provided by Zoom and does not offer additional local configuration options.

GROUP CALL PICKUP VIA BLF KEY

Prerequisite:

- Your phone is assigned to a group on the Zoom server.
- BLF keys may be configured by the administrator with the appropriate group pickup code (e.g., *98 for group pickup).

A group call is ringing. The assigned BLF key flashes  .

Depending on the administrator settings, the group call may not appear on the phone's display. Only the flashing BLF key indicates it.

Call pickup



You can pick up the call by pressing the BLF key.

The group call is displayed with the following information:

- **Caller:** Name or number of the calling party
- **for :** Name of the party being called (Zoom uses "calling for" to indicate delegation or group pickup context)

Directed pickup works in the same way but targets a specific user. If configured by the administrator, the BLF key automatically performs the directed pickup.

PICKING UP A GROUP CALL IMMEDIATELY

Call Pickup



Select "Call Pickup" in the group call display.

- Optionally, select the function key "Call Pickup".
- Optionally, pick up the handset if is visual alert is not set to "Notification LED".
- Optionally, press the headset key.
- Optionally, press the speakerphone key.

IGNORING A GROUP CALL

Ignore



Select "Ignore". The phone stops alerting for the group call.

It can still be answered from the conversations list.

Making calls via multiple lines ("multi-line")

This section describes how to use a CPx10 phone configured as a multi-line phone and explains the available settings for managing multiple lines.

LINE OR TRUNK KEYS

Line or trunk keys can be configured by the administrator as line or function keys in the left panel or in the menu "Favourites", or on a connected key module.

These function keys cannot be changed or deleted by the user.

Each key programmed with the function "Line" is handled as a line.

A distinction is made here between primary, secondary and phantom lines. Each line type can be configured as private or shared depending on Zoom server settings.

Primary line

All multi-line telephones have a single primary line. This line is associated with your main Zoom Phone number. Incoming calls to your number are signalled on this line.

From V2.R0.18.0 onwards, Do Not Disturb (DND) and Call Forwarding settings apply to all lines (shared or private) on the phone, not just the primary line.

Secondary line

A secondary line on your phone may represent a shared line or a delegated line from another user in your Zoom environment. Your primary line, when configured on another phone, may function as a secondary line on your phone if you are part of a shared line or delegation setup.

Line utilization

- **Private line:** A line that is used by a single phone. This line cannot be used as a secondary line by another phone.
- **Shared line:** A line that is configured on multiple telephones. The Zoom server synchronizes the line status across all phones sharing the line.

Meaning of LEDs on line keys

LED	Meaning
	LED off: The phone is in idle mode.
	LED lights green: <ul style="list-style-type: none">• The line is in use on your phone.• Outgoing call on the line
	Flashing green: <ul style="list-style-type: none">• Incoming call on the line (see "Incoming calls" → page 73)• The incoming call was prioritized and selected in accordance with the option "Automatic line selection for incoming calls"
	LED lights red: The line is busy remotely.
	Flashing red: Call forwarding is activated.
	LED lights orange: The line is on hold.

LED	Meaning
	Flashing orange: The held call on the line has timed out on hold.

CONFIGURING ASSOCIATED LINES

When your phone is connected to the Zoom server, each line can manage up to three calls at the same time. To support this, your main phone line is shown on three line keys. Each of these keys represents the same line but handles one call at a time.

- Only one of the calls on your line can be active (off-hook) at any moment.
- To make a consultation call while you are already on a call, press an idle line key to start the new call. The first call will be automatically placed on hold.

These line keys are configured by the Zoom server. Each key shows the current call status and allows you to manage multiple calls more easily.

Making calls on Associated lines

When placing a call using an associated line:

- Select the associated line.
- The phone places the call using the shared identity — no additional confirmation is required.
- The call appears as coming from your phone, and uses the main phone line's shared number, unless an outgoing caller ID is configured for that line.

Viewing Call Details on Associated Lines

When you use a shared line, you can quickly see who is on a call and the current status of that call. This helps you decide whether to join or interact with the call.

To view the call details, long press the **Line** key.

- If the call is not locked, you will see:

- The other party on the call
- The current call state (Active, Held, or Idle)

The message will look like: "[Name/Number] [Call State] for [Other Party]".

Example: Alice active for Shyamal.

- If the call is locked, you will see:

- Who locked the call

The message will look like: "Locked by [Name of the party that is sharing the line]".

Example: Locked by Alice.

Note If there are multiple calls on the shared line, the information shown will match the call on the associated line key you pressed.

INCOMING CALLS

Answering a call via the main line

When the phone rings, the caller identity and the line label are displayed on the main screen, and the notification LED flashes. The user will also see an Alert prompt for the incoming call.

The flashing line key can still be used to answer the call, and the call identity is shown together with the line label in the function key display.



Select the flashing key for the main line in "Favourites", in the left panel or on the key module.

If a key module is not attached and "Favourites" is not displayed, an inline notification announces the line as ringing (primary or secondary)



Select speakerphone mode. The key icon switches between and .

Answer



- Optionally, select "Answer".
- Optionally, lift the handset.

The label (e.g. "My line") is displayed in the call screen.

Answering a call via a Bluetooth headset

Prerequisite: A Bluetooth headset is connected and enabled (see "Pairing and connecting a Bluetooth enabled headset" → page 111).

The phone rings. The caller and the line label are displayed. The notification LED flashes.



- Press the flashing headset key.
- Optionally, press the answer key on the headset.


If "AICS ZIP tone" (Auto-headset) is enabled, the call is answered immediately via the headset.

Answering calls for a secondary line

Prerequisite: Secondary/shared line is configured on the Zoom server.

When a call arrives on the secondary line:

- The phone rings, and the caller and the relevant line are displayed. The caller name is shown as usual (e.g. "Acme Corp.").
- If provided by the Zoom server, an additional line displays the text **calling for** followed by the name of the called party (e.g. "calling for Hans"), as shown in the example below:

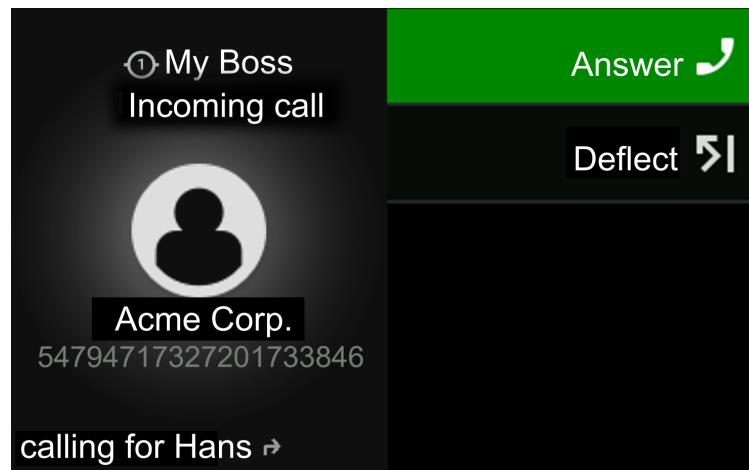

- The notification LED flashes.

Using the handset




Lift the handset.

The line is automatically selected.

If calls are ringing on multiple lines, the phone may connect you to the line that has been ringing the longest, depending on administrator configuration.

Using the line key in "Favourites", in the left panel or on a key module

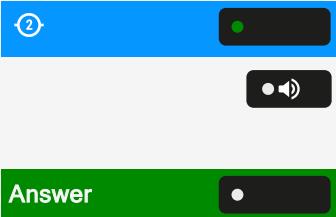

Select the flashing key for the secondary line.

- Optionally, select speakerphone mode (the key icon switches between ① and ②).
- Optionally, select "Answer".

Using the line keys when a key module is not connected

If lines are configured in the menu "Favourites", calls are only signalled via the display and the notification LED when "Favourites" is displayed. When not displayed, the "Favourites" can be displayed by pressing the function key adjacent to the inline notification at the bottom of the screen.

The phone rings. The caller and the relevant line are displayed. The notification LED flashes.

Answer the call as described in section "Incoming calls" → page 139.

CALL MONITORING

Call monitoring allows you to listen to or interact with another person's call on a shared line.

If you long-press a shared line key, a pop-up appears showing the call status and the parties involved. This helps you identify who is using the shared line before deciding whether to interact with the call. Depending on the configuration set by your administrator, you may be able to select one of the following interaction modes:

- **Monitor**

Silently listen to the call audio via your phone.

For example, using the code *336, you can monitor a call on the shared line.

- **Whisper**

Speak to the user of the shared line device without the remote party hearing you.

For example, using the code *339, you can "whisper" to the local user during a call.

- **Barge-in**

Join the call and create a three-party interaction.

For example, using the code *332, the user can barge into a call on the shared line.

- **Takeover**


Take over the call from the user of the shared line device.

For example, using the code *338, you can replace the local user in an active call.

After a shared line key or a monitor mode icon is pressed, the phone displays the available interaction modes for that call as context key options, presented in a pre-defined priority order.

Monitor mode icon behavior: The phone automatically shows the icon for the top monitor action allowed before the key is pressed.

The default mode is indicated by the icon on the FPK (Fixed Programmable Key).

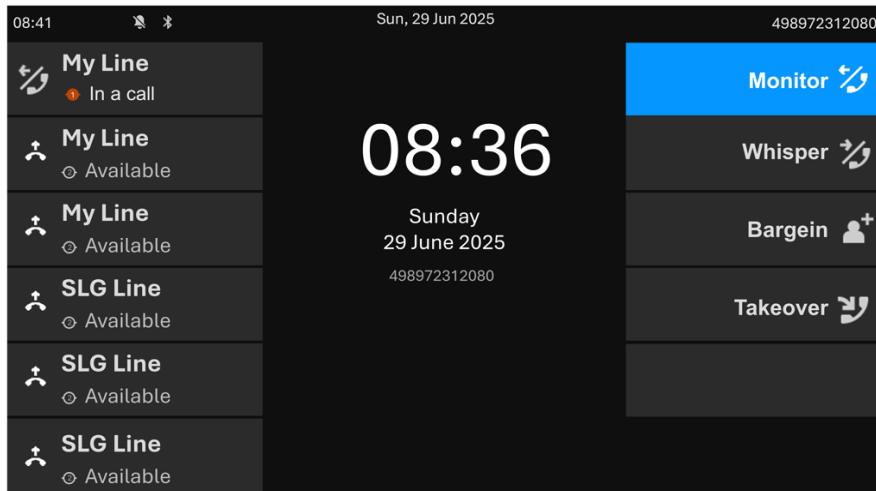

Select a mode to begin interacting with the call.


When you select a mode different from the default, the action icon on the FPK is updated to reflect the selected mode.

If you decide not to proceed, press **Back** to clear the mode options and return to the previous screen without initiating any interaction.

Note The user on the shared line is not visually notified when an interaction mode is active—except in the case of **Takeover**.

While using the **Barge-in**, **Monitor**, or **Whisper** modes:

- The line key continues to show the line as remotely busy.
- An icon representing the active mode is displayed.
- The **Call screen** also shows a reminder of the active mode, in case the line key label is not visible.

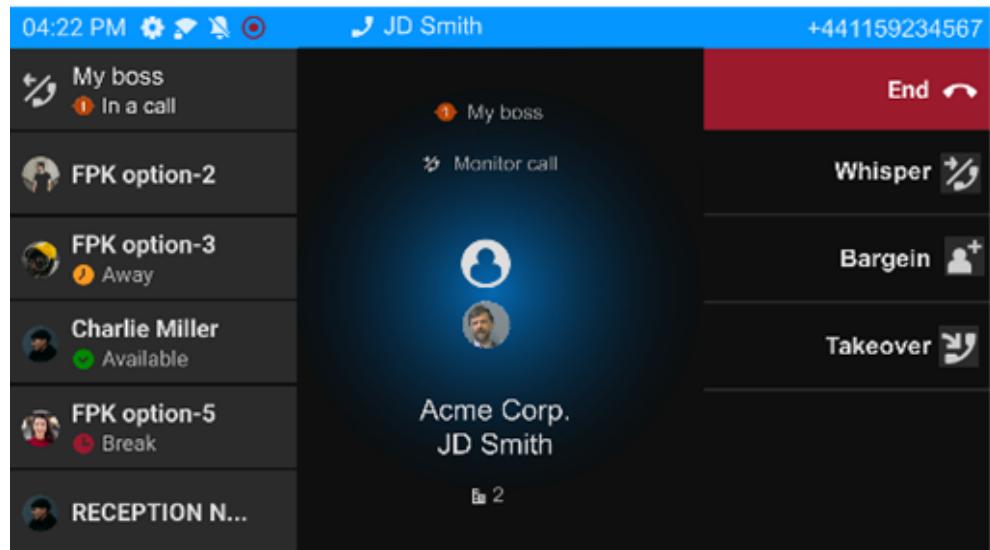

The call screen is modeled as a conference, allowing you to see both parties in the call. However, **Monitor**, **Whisper** and **Barge-in** do not create an actual conference.

CALL PARKING

Prerequisite: The phone is connected to Zoom Phone by your administrator.

Zoom supports three types of call park: **Public**, **Private**, and **AIM** (Agent-In-Monitoring). Each type determines how calls are parked and retrieved, who can see or retrieve them, and what level of visibility they have. For more information, see the Zoom support page: [Using call park](#).

- **Public**

- The park location is allocated automatically by the Zoom server and provided to the parking user via a voice announcement through the call's audio. The parking user verbally informs other users that the call has been parked and communicates the location that can be used to retrieve the parked call. There is no limit on who can retrieve the call.
- Typically used for general-purpose parking where users that may retrieve the call are within voice range.

- **Private**

- The park location is predefined or assigned manually (via a key or code).
- In the Zoom context, the set of users that can retrieve the call is restricted by the Zoom server.
- Call details are not visible to other users or devices unless they have explicit access.

- **AIM**

- The park location is explicitly specified in the signaling by the device parking the call.
- Call park and retrieval are handled via configured keys or Feature Access Codes (FACs).
- A call parked using AIM behaves like a BLF-monitored extension, where:
 - The Zoom server determines which devices are associated with that park location via its portal data.
 - The BLF key configured as a Park key targets the park location, not a user (unlike regular BLF keys).


CP600 models and CP410 do not have body keys that can be configured to use this function. The key function can still be accessed via one of the following:

- A Key Module connected to the phone (a KM710 is suggested for the CP410).
- The Favourites screen.

Parking a call


Prerequisites:

1. The phone is in an active call.
2. The function key was programmed on a FPK (on a connected key module).

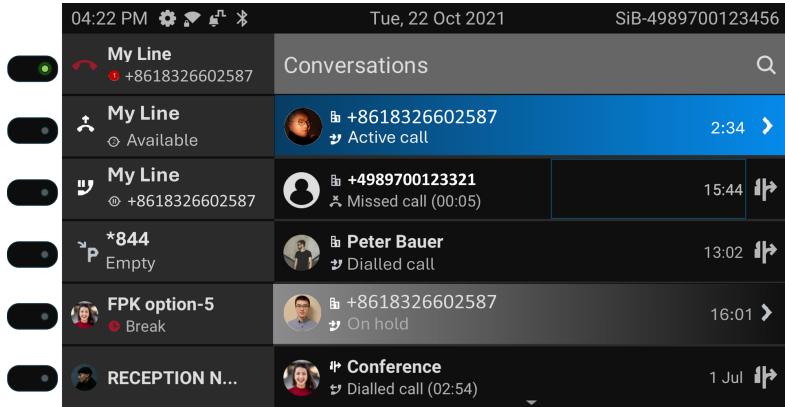

The Park key shows that the location is empty.

To park the call, briefly press the Park key.

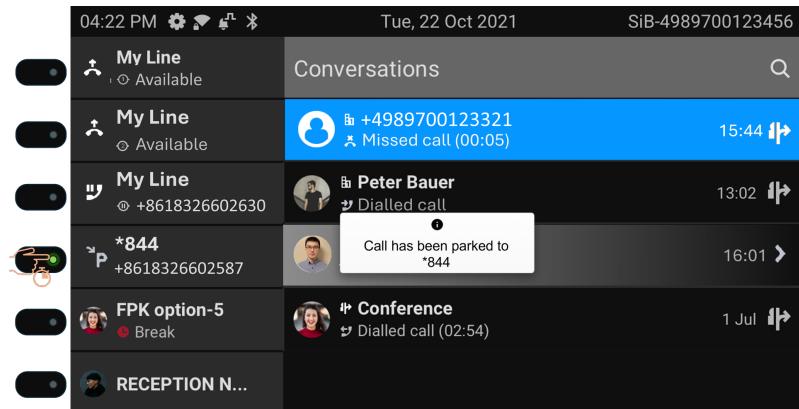

The Park key parks the active call and indicates that the location now contains a parked call. The line-key LED is solid green.


The call is visible on any device that has a Park key assigned to the same location.

To view call details in a toast message, long press the Park key on any device.

Retrieving a parked call

Prerequisite: A call must already be parked.

To retrieve a parked call, briefly press the Park key.

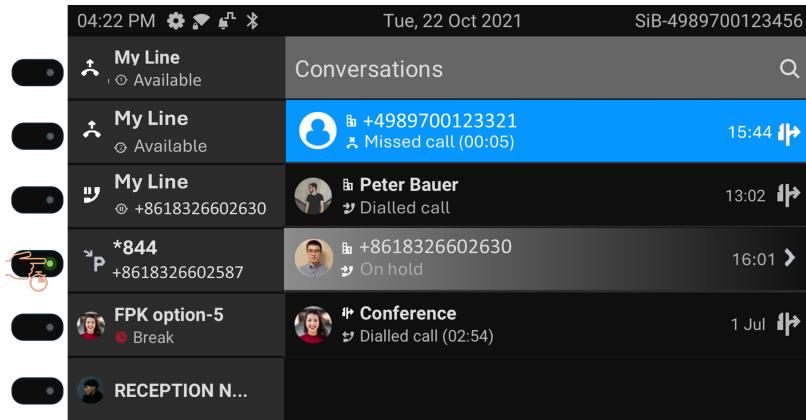

The parked call is retrieved and becomes active on the phone where the Park key was pressed.

Monitoring a parked call

Prerequisite: A call must already be parked.

A key configured for a park location can be used to monitor that location. To monitor an AIM park location and retrieve a call parked there, use the Park key.

When a call is parked, the key monitoring the location receives a notification.

If the notification state is confirmed, the line-key LED is solid green. For any other state, the LED remains unlit.

DURING A CALL

Making and receiving calls on a single line

If you only use one line on your multi-line phone to make calls, and you receive calls on the same line, the phone operates in the same way as a single-line phone:

- Redial
- Consultation, see "Consulting a second party" → page 88
- Toggle/Connect, see "Switching to the held party (alternating)" → page 89
- Callback, see "Requesting callback" → page 1
- Call waiting (second call), see "Call waiting (second call)" → page 96
- Transfer call, see "Transferring a call" → page 98
- Conference, see "Conference calls" → page 89

Note From V2.R0.18.0 onwards, the Do Not Disturb (DND) and Call forwarding functions apply to all lines (shared or private) on a Zoom-connected CP phone.

Note Depending on your settings, you will be notified of incoming calls (see "Rollover for a line" → page 151).

Making and receiving calls on multiple lines

Accepting a waiting call

Prerequisites

- Support for "Allow call waiting" is configured. Depending on the settings for "Rollover", you will be notified of incoming calls (see "Rollover for a line" → page 151).
- You are conducting a call. At the same time, a call is incoming on another line.

Line 1 

Conduct call on line 1.

Line 2 

Press line key for line 2 to answer the incoming call.

The call on line 1 is placed on "Hold". The key label Alternates between the line label and the held party name at short intervals.

All multi-line contacts who share the line on which the call is being held can now pick up the held call (see "Line utilization" → page 137).

Line 2 

Conduct call on line 2.

End 

Press the function key to end the call on line 2.

Line 1 

Press line key for line 1. Optionally, select the option "Hold" or the function key. The call on line 1 is retrieved. The key label switches at short intervals.

Note You can answer calls on a line. The phone will alert for the incoming call on an associated line (by ringing or Call waiting).

Putting a line on hold

On a multi-line phone you can use the line keys to place calls on hold.

A short press of the Associated line key or pressing the Hold function or a function key will place the active call on hold.


When a call is placed on hold on an Associated line, the Zoom server sends notifications to all members of the owning line, and the Associated line key indicates the held status.

Members of the Associated line can pick up calls held by any other member on that shared line, ensuring collaborative call handling across the group. To pick up a call held on the Associated line, simply press the Associated line key or Hold.

The phone automatically manages held calls according to Zoom Phone rules. No special key configuration is required.

Prerequisite: You are conducting a call.

 Line 1



Press the function key for line 1. The call on line 1 is placed on "Hold".

- The LED displays the hold status on all multi-line phones to which the line is connected.
- On phones connected to the line, a user can press the relevant line key and accept the held call.

The LED display indicates that the call is on hold to other multi-line telephones where this is configured (see "Meaning of LEDs on line keys" → page 137). These phones can then pick up the call.

Call Flip ([Zoom Call Switch](#))

The **Call Flip** feature allows you to place your current Zoom Phone call on hold and answer it on another device (Zoom desktop app, Zoom mobile app, or provisioned desk phone).

If **Call Flip** is configured:

- A user may register multiple devices with the same unique identifier (for example: CP phone, Mitel 6900 phone, Poly phone, Zoom client).
- Unless the call is locked, each call appearance can be separately held and picked up by another device sharing the line.

Note

The CP410 phone does not have body keys that can be configured to use the **Call flip** or **Lock call** function. The key functions can still be accessed via a Key Module connected to the phone (a KM710 is suggested for the CP410), or the Favourites screen.

Limitations

- Consultation and conference are not possible on the same call appearance.
- Call Flip is unavailable when Call Privacy is enabled. For further information on call locking on a shared line, refer to "Locking or unlocking a call" → page 157.

Lines with hot or warm line function

The administrator has configured a hot or warm line for the primary line or for a secondary line.

The function is activated in the following situations:

- The primary line you lift the phone's handset or press the line or loudspeaker key
- The secondary line you press the line key.

A number specified by you is dialled immediately with a hot line and after a specific time with a warm line.

Examples

- The phone in the elevator immediately dials the reception number.
- The phone at a patient's bed dials the ward number after one minute, for example, if no other number is dialled.

SETTINGS FOR MULTILINE (KEYSET)

The details for each keyset line contain supplementary information for the user. The following non-editable fields are displayed:

- Address: Displays the phone number for the line
- Ringer on / off: Shows whether the ringer is activated for this line
- Selection order: Displays the priority of each line seizure when the handset is lifted or the loudspeaker key for this line is pressed

You can influence the following options:

- Ring delay: The length of time before a held call is signalled on a line.
- Hot/warm dest.: The phone number to be dialled if the hotline or warm line function is activated.

Setting the time for a delayed ringer

 
Specify the length of time before a held call should be signaled on a line.

 For more information on configuring settings via the web interface, see "Web interface (WBM)" → page 204.



Press the key to open the main menu.

Settings



Open "Settings".

User settings



Open "User settings".



Enter and confirm the user password, if required.

Configuration 

Select "Configuration".

Keyset 

Select "Keyset".

Lines 

Select "Lines".

Primary line 

Select the required line.

Ring delay 

Select "Ring delay".

123 



Enter a value (between 0 and 3600 seconds) and confirm using the function key.

Save the setting.

You can activate and deactivate the set delay time for all line keys using a function key.

Entering a number for the hot and warm line function

Specify which number should be dialled when the hot or warm line function is activated.

 For more information on configuring settings via the web interface, see "Web interface (WBM)" → page 204.



Press the key to open the main menu.

Settings 

Open "Settings".

User settings 

Open "User settings".



Enter and confirm the user password, if required.

Configuration 

Select "Configuration".

Keyset 

Select "Keyset".

Lines 

Select "Lines".

Primary line 

Select the required line (e.g. primary line) and open using the function key.

Hot/warm dest. 

Select "Hot/warm dest.".

123 



Enter or change the destination phone number and confirm.

Save the setting.

The destination phone number is displayed.

ROLLOVER FOR A LINE

With rollover, calls made to you when lines on your phone are busy are rolled over to the next free available line on your phone.

The administrator can determine how rollover calls are to be signalled.

Line 

- Only the relevant line key flashes .
- You hear a **special advisory tone** and the corresponding line key flashes.
- The **ringer melody set sounds briefly** (approx. 3 seconds) via the loudspeaker and the corresponding line key flashes.
- You hear a short **notification tone**.

The ringer melody is not played in speakerphone mode.

Line 

The phone rings. The corresponding line key flashes  and the available information is shown on the display.

Privacy and security

“Do not disturb”

If “Do not disturb” is activated, the phone will not ring. The caller hears the busy tone or an announcement that the called party cannot accept any calls at present. “Do not disturb” can be activated or deactivated using a programmable function key on the key module or from the menu “Presence” (see “Presence” → page 1).

On multi-line telephones you can only activate “Do not disturb” for the primary line. From V2.R0.18.0 onwards, the Do Not Disturb (DND) and Call forwarding functions apply to all lines on the phone.

ENABLING DO NOT DISTURB VIA “PRESENCE”



Press the key shown.

Do not disturb



Select “Do not disturb”.

ENABLING DO NOT DISTURB VIA A KEY

Prerequisites:

- To activate “Do not disturb”, a key has to be assigned the function (see “Programming the function keys” → page 127).
- “Do not disturb” has to be allowed (see “Allowing “Do not disturb”” → page 152).

Do not disturb



Select “Do not disturb”. The function key lights up.

Do not disturb



Press the function key again to deactivate the function.

ALLOWING “DO NOT DISTURB”

 


For more information on configuring settings via the web interface, see “Web interface (WBM)” → page 204.



Press the key to open the main menu.

Settings



Open “Settings”.

User settings

Open "User settings".

Configuration

Select "Configuration".

Incoming calls

Select "Incoming calls".

Handling

Select "Handling".

Allow DND

Select "Allow DND".



Save the setting.

Note

For multi-line phones, DND applies to all lines when using Zoom SIP Server, unlike other SIP server types where it only applies to the primary line.

Security

SETTING THE USER PASSWORD

The user password protects the individual configurations, including language settings. You can also use the user password to lock your phone (see "Locking the phone" → page 156 or for mobility "Mobility function" → page 1).

The following settings may apply:

- The password is deactivated: You do not have the option of configuring user settings. The message "Password is disabled" is displayed.
- The password is temporarily locked: You do not have the option of configuring user settings at this time. The message "Password is suspended" is displayed.
 - After initially logging on to a user area, you may have to replace the default password with a new password.
- A password can have a predefined period of validity: You will have to create a new password when the period ends. The message "Change password (x days left)" will alert you at the appropriate time. The message "Password has expired" appears when the validity period is over.
 - Confirm "Change password" and change the password as described in this section.
- If you repeatedly enter the wrong password (2 to 5 times), additional attempts are blocked. You can make another attempt after a predefined time.
- It is possible that you will not be able to re-use a previously used password for a period of time, which means you have to create another "new password".

- The administrator can tell you about the rules for the characters and digits that must be used in the password.

The preset password "000000" corresponds to an empty password. The phone cannot be locked, access to WBM is not allowed and the user menu is **not** password protected (see also "Deactivating the password prompt" → page 155).

 
 For more information on configuring settings via the web interface, see "["Web interface \(WBM\)" → page 204](#).

Setting a new password




Press the key to open the main menu.

Settings



Open "Settings".

 User settings




Open "User settings".




Enter and confirm the user password, if required.

 Security




Select "Security".

 Change user password



Select "Change user password".

 Current password



Select "Current password".

123



Enter the current password and conclude your input with the function key.

New password



 
Select "New password".

123



Enter the new password and conclude your input with the function key.

Confirm password




Select "Confirm password".

123



 Repeat the new password and conclude your input with the function key.



Save the setting.

The new password is now valid.

Deactivating the password input

To deactivate the user password, follow the procedure described above and set the new password to the default setting "000000".

DEACTIVATING THE PASSWORD PROMPT

You can deactivate the phone's password prompt if a password has already been configured.

The deactivation of the password prompt does not affect the web interface or CTI applications that use a password prompt.

- As long as the password prompt is deactivated, you do not have access to the web interface via the user settings.
- If you deactivate the password prompt, you can **no longer** lock the phone and the user menu is **not** password protected.



Press the key to open the main menu.



Open "Settings".



Open "User settings".



Enter and confirm the user password, if required.



Select "Security".



Select "Change user password".



Select "Current password".



Enter the current password.



Select "New password".



Enter six zeros ("000000") to deactivate the password prompt.



Select "Confirm password".

Enter six zeros ("000000") once again.



Save the setting.

LOCKING THE PHONE

To protect the phone against unauthorized access, you can lock the phone so that nobody can make calls or change settings without knowing the user password.

Predefined numbers from the dial plan can still be dialled when the phone is locked. For more information, contact your administrator.

You can only lock the phone if you set a user password (see "Setting the user password" → page 153). The password must **not** be the default setting "000000". Check if the phone lock function has been activated by the administrator.

Activating the phone lock



Hold down the key until "Lock phone" is displayed.

Lock



Select "Lock".



Locking via the menu "Presence"

Optionally, press the key to open the menu "Presence".

Lock phone



Select "Lock phone".



Press the key to exit the menu.

Dialling emergency numbers

If an emergency number is entered on the phone by the administrator, "Emergency call" is displayed when you have activated the lock. You can also enter an emergency number via the dialpad.

Emergency call



Select "Emergency call". The pre-set emergency number is dialled.

The number is dialled automatically without pressing **OK**, and an empty option is displayed. Therefore if you accidentally press **OK**, the call will not be cancelled.

Note

When the phone is connected to Zoom phone, if configured by your administrator, your phone can provide location information for any emergency calls (e.g., 911).

Unlocking the phone

If the phone is locked, selected function keys cannot be used. This also applies even with the emergency number assigned to this key.

Phone locked 

The information "Phone locked" is displayed.

Unlock phone 

Select "Unlock phone".



Enter and confirm the user password. The phone is unlocked if the password is correct.

Admin unlock 

- Optionally, select "Admin unlock".



Enter and confirm the administrator password, if the user password is not known. The phone is unlocked if the password is correct.

If the phone is locked, an emergency number entered by the administrator can be dialled using the dialpad or the option "Emergency call".

Locking or unlocking a call

Account owners and admins can enable a privacy feature for shared line groups or shared line appearance (call delegation). This allows shared line group and shared line appearance members to lock the call, which prevents others from picking up a held call, listening, whispering, barging, or taking over the call. For more information, see the Zoom support page: [Enabling or disabling shared lines privacy mode](#).

Prerequisites:

1. Privacy mode must be configured for a specific line on which the call is made or received, using the "**Line-based Privacy Mode**" option in Admin > System > Features > Permanent Favorites. Otherwise, the locking menu option is not visible for calls on that line.
2. You are on a connected call (active or held).

You can 'lock' a call on a shared line so that it is not accessible to other devices sharing the line. This means, for example, that another device cannot barge in to the call, listen in to it, or retrieve the call if it is put onto hold.

Note

This feature cannot be used with **Call Flip** → 147 lines. The CP410 phone does not have body keys that can be configured to use the Call flip or Lock call function. The key functions can still be accessed via a Key Module connected to the phone (a KM710 is suggested for the CP410), or the Favourites screen.

Lock call 

Select "Lock call".

Both parties receive a notification that the call is locked.

If the remote party does not accept the request to activate privacy (lock the call):

- The Lock call option remains available on the call screen.
- A message is briefly displayed to inform you that the lock request was refused.

You can still continue the call normally, but privacy (locking) is not activated for this call.

If the phone received a call while locked, it continues to show the shared line as only remotely busy until the call terminates, or privacy mode is disabled for the line.

Unlock call



To unlock the call, select Unlock call.

Both parties receive a notification that the call is unlocked.

Other settings and functions

Audio settings

RINGER TYPE

Select your preferred ringer from the available audio files. If no individual audio files are available, the ring tone "Pattern" is set.

File transfer from the User settings in WBM may be not be permitted by the administrator. To upload your own files in a "*.mp3" or "*.wav" format, use the web interface or consult the administrator.

 For more information on configuring settings via the web interface, see "["Web interface \(WBM\)" → page 204](#).



Press the key to open the main menu.



Open "Settings".



Open "User settings".



Enter and confirm the user password, if required.



Select "Audio".



Select "Settings".



Select "Ringer". The following default options are available:

- Pattern
- Harmonize
- Ringer 1...6 (available ringer files with the file extension *.mp3)



Select the ring tone. You will immediately hear the associated ringer melody.



Save the setting.

SWITCHING TO A RINGER BEEP

You can turn the ringer off and select a short alert tone instead.



Hold down the key for three seconds until the notification and icon for "Ringer beep" is displayed.

PATTERN MELODY

 For more information on configuring settings via the web interface, see "Web interface (WBM)" → page 204.

Prerequisite: You have selected the ringer "Pattern".



Press the key to open the main menu.

Settings 

 
Open "Settings".

User settings 


Open "User settings".




Enter and confirm the user password, if required.

Audio 

 
Select "Audio".

Settings 

 
Select "Settings".

Pattern melody 

 Select "Pattern melody". The current melody is displayed.

○ 

 Select a pattern melody. You will immediately hear the associated melody.

✓ 

Save the setting.

 
PATTERN SEQUENCE

 For more information on configuring settings via the web interface, see "Web interface (WBM)" → page 204.


Prerequisite: You have selected the ringer "Pattern".



Press the key to open the main menu.

Settings 

 
Open "Settings".

User settings 

Open "User settings".



 
Enter and confirm the user password, if required.

Audio 


Select "Audio".

Settings 

 
Select "Settings".

Pattern sequence 

 Select "Pattern sequence". The current pattern sequence is displayed.

○ 

 Select a pattern sequence. You will immediately hear the associated melody and sequence.

✓ 

Save the setting.

ROOM CHARACTER

To ensure that the other party can hear you properly in speakerphone mode, you can adjust the phone to the room acoustics.

 For more information on configuring settings via the web interface, see "["Web interface \(WBM\)" → page 204](#).



Press the key to open the main menu.



Open "Settings".



Open "User settings".



Enter and confirm the user password, if required.



Select "Audio".



Select "Settings".



Select "Room character" and select one of the following options:

- Normal
- Echoing
- Muffled



Save the setting.

OPEN LISTENING MODE

Select the mode that you prefer for open listening (see "["Switching from handset to speakerphone mode" → page 85](#)).

 For more information on configuring settings via the web interface, see "["Web interface \(WBM\)" → page 204](#).



Press the key to open the main menu.



Open "Settings".



Open "User settings".



Enter and confirm the user password, if required.



Select "Audio".



Select "Settings".



Select "Open listening". The following options are available:

- Standard mode
- US mode



Select the open listening mode. The current mode is displayed.

Save the setting.

SETTING THE HEADSET PORT USE

This setting defines if a headset or a conference unit is activated when pressing the headset key  .

 
 For more information on configuring settings via the web interface, see "["Web interface \(WBM\)" → page 204.](#)



Press the key to open the main menu.



Open "Settings".



Open "User settings".



Enter and confirm the user password, if required.



Select "Audio".

Select "Settings".

Select "Headset socket". The following options are available:

- Wired headset
- Cordless headset
- Conference unit



Select an option.

Save the setting.

Settings for other headsets

Multiple headsets of different types (Bluetooth, USB or ION) can be connected to the phone at the same time. You can control the priority order by which the phone selects a headset type for use.

Prerequisite: You have entered the audio settings.



Select "USB Headset" (or any other headset option). The following options are available:

- Option No. 1, first configured option, e.g. a conference unit
- Option No. 2, second configured option, e.g. a USB headset

- Option No. 3, third configured option, e.g. a remote conference unit
- Disabled
- Active



Select the required priority.



Save the setting.

SPECIAL RINGERS

You can assign an individual ringer to incoming calls or events for identification of the type of call.

 The administrator has activated the special ringers. Consult the administrator regarding the use of these ringers.

 The user cannot change the ringer sound, pattern melody and pattern sequence for the emergency call type. This can be set only by an administrator. Emergency ringer is always played at maximum volume, regardless of ringer settings.

 For more information on configuring settings via the web interface, see "["Web interface \(WBM\)" → page 204](#).



Press the key to open the main menu.



Open "Settings".



Open "User settings".



Enter and confirm the user password, if required.



Select "Audio".



Select "Special ringers". The following options are available:

- Internal
- External
- Recall (Callback)
- Special 1
- Special 2
- Special 3



Select an option, e.g. "Internal".



Enable the selected option and configure the ringer, melody, and sequence for the selected option (see "["Audio settings" → page 159](#)).



Save the setting.

ACTIVATING OR DEACTIVATING THE RINGER

You can see if the function is activated or deactivated from the corresponding icon  in the status bar.



Hold down the key shown.

- A long press of this key will toggle the ringer on or off (a status bar icon is shown when the ringer is off).
- An extended long press (>2 sec.) can set the ring to be a beep instead of a continuous ring tone (a status bar icon is shown when the ringer is set to beep).

An information message pops up to indicate a change of the ringer.

Configuring direct video

When configured, the OpenScape Desk Phone CP710 can display a video stream via the network that is connected to a door camera for visual access control. The phone screen can also display video streams from a video call.

 This function must be configured by the administrator.

Country-specific setting

Adapt your phone settings to suit the country-specific conditions (for example, transmission parameters).

 For more information on configuring settings via the web interface, see "Web interface (WBM)" → page 204.



Press the key to open the main menu.



Open "Settings".



Open "User settings".



Enter and confirm the user password, if required.



Select "Locality". The current country setting is displayed.



Select "Country".



Select the country setting.



Save the setting.

Display language

 For more information on configuring settings via the web interface, see "Web interface (WBM)" → page 204.



Press the key to open the main menu.



Open "Settings".



Open "User settings".



Enter and confirm the user password, if required.



Select "Locality". The current display language is displayed.



Select "Language".



Select the language.



Save the setting.

The display language is changed.

When you change the phone's language, the programmable key default labels provided by the phone during configuration will also change to the selected language. The key labels that have been modified (no longer default) will not be changed to the current phone's language.

Available languages

 
- Bahasa Indonesia
- Bahasa Malaysia
- Brasileiro
- Català
- Čeština
- Cymraeg
- Dansk
- Deutsch
- English(GB)
- English(US)
- Español
- Français
- Hrvatski
- Italiano
- Latviešu Valoda
- Lietuvių Kalba
- Magyar
- Nederlands
- Norsk
- Polski
- Português
- Română
- Slovenski Jezik
- Slovenčina
- Srpski Jezik
- Suomi
- Svenska
- Türkçe
- Ελληνικά
- Български
- Македонски Јазик
- Український
- Русский
- Српски Језик
- 한국인
- 日本語
- 中文

Date display format


 For more information on configuring settings via the web interface, see "Web interface (WBM)" → page 204.



Press the key to open the main menu.

 **Settings** 

 
Open "Settings".

 **User settings** 


Open "User settings".



 Enter and confirm the user password, if required.


 **Locality** 

 Select "Locality".


 **Date format** 

Select "Date format". The current setting is displayed. The following options are available:

 - dd.mm.yy
- mm/dd/yy
- dd/mm/yy

Select the date format.

 
Save the setting.

Time display format


 For more information on configuring settings via the web interface, see "Web interface (WBM)" → page 204.



 Press the key to open the main menu.

 **Settings** 

 
Open "Settings".

 **User settings** 


Open "User settings".



 Enter and confirm the user password, if required.


 **Locality** 

 Select "Locality".

 **Time format** 

Select "Time format". The current time format is displayed. The following options are available:

 - 24 hour
- 12 Hour (AM/PM)

Select the time format.



Save the setting.

Screen saver

Activate a screen saver for the phone's idle state.

 The administrator can set a time of between two and eight hours defining how long the phone should be idle before the display backlight is deactivated.

 For more information on configuring settings via the web interface, see "Web interface (WBM)" → page 204.

ACTIVATING THE SCREEN SAVER

Prerequisite: The administrator has uploaded images to the phone or you have uploaded your own images.



Press the key to open the main menu.

Settings



Open "Settings".

User settings



Open "User settings".



Enter and confirm the user password, if required.

Phone



Select "Phone".

Inactivity



Select "Inactivity".

Screen type



Select "Screen type". The current setting is displayed. The following options are available:

- Menu screen: This option displays the default main menu screen after an idle period.
- Slideshow: This option displays the uploaded images as a continuous slide show. This is the default option.
- Current time: This option displays a blank screen only displaying the current date and time of the phone.



Select the type of screen saver.



Save the setting.

SETTING THE SCREEN SAVER ACTIVATION INTERVAL

Set how long the screen should be idle before the screen saver activates automatically.

 For more information on configuring settings via the web interface, see "["Web interface \(WBM\)" → page 204](#).



Press the key to open the main menu.



Open "Settings".



Open "User settings".



Enter and confirm the user password, if required.

 


Select "Phone".



Select "Inactivity".

Setting the idle time



Select "Idle time (mins)". The current idle time is displayed.



Select an idle time interval. The following options are available (in minutes):

- 0 (i.e. deactivated)
- 1 (default)
- 5
- 10
- 20
- 30
- 60
- 120

Setting the slide time for the option "Slideshow"



Select "Slide time (secs)". The current interval for each slide is displayed.



Select a slide time interval.

This option is only available when the screen saver has been set to "Slideshow" (see "["Activating the screen saver" → page 167](#)).

The following options are available (in seconds):

- 5
- 10
- 20

- 30
- 60



Save the setting.

UPLOADING IMAGES FOR THE SCREEN SAVER

To install your own images for the screen saver, you have to transfer the images using the web interface (see "[Web interface \(WBM\)](#)" → page 204).

Note that file transfer from the User settings in WBM may be not be permitted by the administrator. If file transfer is disabled, contact your administrator.

1. Open the WEB interface and select "Slideshow images > Choose the image file you wish".
2. Search for suitable images on your computer or in the network and save your search results. You can upload several images in succession.

Your new images are displayed the next time you start the screen saver.

Energy saving mode

Set how long the phone screen can remain idle before the background lighting automatically switches off and the screen turns dark.

The shorter the time for the screen to dim the less energy is consumed.

For more information on configuring settings via the web interface, see "[Web interface \(WBM\)](#)" → page 204.



Press the key to open the main menu.

Settings



Open "Settings".

User settings



Open "User settings".



Enter and confirm the user password, if required.

Phone



Select "Phone".

Energy saving



Select "Energy saving".

Activate after



Select "Activate after". The current values are displayed.

- The first value displays the idle time for the screen to reduce brightness.
- The second value displays the idle time for the screen to switch off.

The following options are available:

- 1 min / 5 mins
- 5 mins / 20 mins
- 30 mins / 2 hrs
- 45 mins / 4 hrs
- 60 mins / 8 hrs



Select the activation time.

Save the setting.

Setting daylight saving time

 For more information on configuring settings via the web interface, see "Web interface (WBM)" → page 204.

Prerequisite: The option "Auto DST" is deactivated (see "Enabling automatic daylight saving time" → page 171).



Press the key to open the main menu.



Open "Settings".

Open "User settings".



Enter and confirm the user password, if required.



Select "Date".

Select "Daylight saving".



Save the setting.

SETTING THE DIFFERENCE BETWEEN DAYLIGHT SAVING AND STANDARD TIME

 For more information on configuring settings via the web interface, see "Web interface (WBM)" → page 204.

Prerequisite: Daylight saving mode is activated.

Enter the difference to be used for daylight saving time.



Press the key to open the main menu.



Open "Settings".

Open "User settings".



Enter and confirm the user password, if required.

Date

Select "Date".

Difference (mins)

Select "Difference (mins)".

123



Enter the time difference between UTC and the local time (in minutes).

Save the setting.

ENABLING AUTOMATIC DAYLIGHT SAVING TIME

For more information on configuring settings via the web interface, see "Web interface (WBM)" → page 204.

Press the key to open the main menu.

Settings

Open "Settings".

User settings

Open "User settings".



Enter and confirm the user password, if required.

Date

Select "Date".

Auto DST

Enable or disable "Auto DST".

Save the setting.

Displaying the date and time settings

This setting is read-only and cannot be changed by the user.

Press the key to open the main menu.

Settings

Open "Settings".

User settings

Open "User settings".



Enter and confirm the user password, if required.

Date

Select "Date". The current date and time setting of the phone is displayed, provided that the administrator has configured the phone to acquire the current date and time

from the network.

Displaying network information

This overview displays information about the IP address or name of the phone, and the HTML address of the web interface. It also provides real-time data about the network activity of the phone.



Press the key to open the main menu.



Open "Settings".



Open "User settings".



Enter and confirm the user password, if required.



Select "Network information". The following information is displayed:

- **DNS name:** Name or number of phone.
- **URL:** HTTP address of the web interface. This address is specified in the address line of the Internet browser and is used to call up the web interface of the phone in the browser.
- **IPv4 address:** Displays the IP address or name that was assigned to the phone in the network.
- **IPv6 Global Addr.:** Displays the global IPv6 address.
- **IPv6 Linklocal Addr.:** Displays the local IPv6 address.
- **LAN RX / PC RX:** The network or PC interface data packets received are illustrated dynamically in graphical form.
- **LAN TX / PC TX:** The network or PC interface data packets sent are illustrated dynamically in graphical form.
- **LAN autonegotiation:** Displays whether the network data transfer rate is set to automatic ("Yes") or manual ("No").
- **LAN information:** Data transfer rate of the network. If an interface is not in use, the information "Link down" is displayed.
- **PC autonegotiation:** Displays whether the PC interface data transfer rate is set to automatic ("Yes") or manual ("No").
- **PC information:** Data transfer rate of the PC interface. If an interface is not in use, the information "Link down" is displayed.

Resetting user data

The following user-specific settings can be reset to factory settings.

The user data is reset **without** a warning.

- Display settings
- Language setting
- Screensaver (Some images for the screen saver will be deleted or deleted default images will be restored.)
- Audio settings
 - Volumes
 - Settings (Some ringer files will be deleted or deleted default ringer files will be restored.)
- Bluetooth
 - Configuration and lists
- Keys
 - All personalized programming is deleted (see "Resetting all assigned functions to keys" → page 134).

Initiating the reset



Press the key to open the main menu.



Open "Settings".



Open "User settings".



Enter and confirm the user password, if required.



Select "Reset".

The user data is reset to factory settings.

Managing avatar images

You can download new avatar images to the phone and use them to change a contact's picture, unless file transfer from the User settings in WBM is restricted by the administrator. If file transfer is disabled, please contact your administrator.




For more information on configuring settings via the web interface, see "Web interface (WBM)" → page 204.

Uploading an image to the phone

1. Open a browser on a PC that is in the same network as the phone.
2. Enter the URL of the phone (see "Displaying network information" → page 172) to access the WBM page of the phone.

3. Open the tab “User settings” and go to “File transfer > Avatar images”.

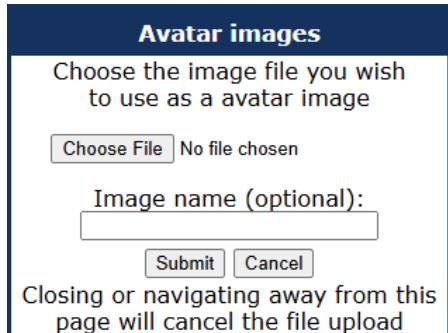


4. Select “Choose File” and select an image file from the file system. **The file type must be PNG, JPG, or BMP and the image file cannot be larger than 100 kB.**
 5. Optionally, name the image for better recognition.
 6. Click “Save & exit” to upload the image to the phone.

After the original image has been successfully uploaded, it will be downscaled to 64x64 pixels.

Deleting an image file from the phone

1. On the PC, open the URL of the WBM page of the phone and navigate to “File transfer > Avatar images”.

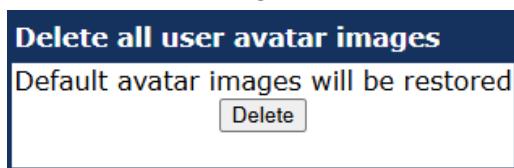


2. Select the image and click “Delete”.


ASSIGNING A CONTACT AVATAR

When transfer process is successful, the image is available on the phone and can be attached to a contact.

 
Conversations



Select “Conversations”.

 

 To search for a contact, enter the first letters or the phone number in the search field.



Press the right key to open the conversation screen and then select contact details. Scroll down the contact details to the Avatar option.

Avatar:

Select an avatar image from the list of available images. You can also use the default avatar.

The image is displayed as the avatar for the contact in the conversation list or on a call screen.

Programming call forwarding

You can forward calls for your phone to another phone. You can also change, activate and deactivate all forwarding during a call.

"Forwarding" must be approved by the administrator.

On multi-line phones you can only configure call forwarding for the primary line. However, From V2.R0.18.0 onwards, if the phone is connected to Zoom phone, call forwarding applies to all lines on the phone.

The following forwarding conditions can be programmed:

- Unconditional: forwarding to a defined phone number without conditions
- Busy: forwarding to a defined phone number when the phone is busy
- No reply: forwarding to a defined phone number when the phone does not reply

Because of its direct impact, "Unconditional" call forwarding has the highest priority, followed by "No reply" and "Busy".

Active call forwarding for "Unconditional" is displayed in the main menu.

A phone number may already be assigned to each call forwarding type.

Call forwarding cannot be activated if the phone number is not registered.

- Call forwarding (CF) can be set up in "Settings" or "Presence", but programmable function keys can also be configured with CF information.
- If the CF information on a key matches the current CF setting of the phone the key LED is illuminated.
- Pressing a key which has been programmed with CF information will apply that information to the CF settings of the phone. Multiple keys may be programmed with the same call forwarding type but each with different destinations.
- For phones connected to Zoom phone, CF settings apply to all lines on the phone, meaning changes via keys will affect all lines.

USING CALL FORWARDING

The following functions are available for activating and deactivating call forwarding and configuring it in accordance with your requirements:

- "Activating immediate call forwarding" → page 176
- "Saving destination phone numbers for call forwarding" → page 176
- "Copying and pasting destination phone numbers" → page 178
- "Activating or deactivating call forwarding" → page 178
- "Defining the ring duration before call forwarding is activated" → page 179

ACTIVATING IMMEDIATE CALL FORWARDING

All calls are forwarded regardless of other settings. The prerequisite for forwarding is that a forwarding destination has been entered.

If no destination has been entered, you are prompted to enter a destination when you attempt to activate forwarding.



Open "Presence".

Activating call forwarding for all calls to one destination

Forward all calls



Enable "Forward all calls". All calls are unconditionally forwarded.

SAVING DESTINATION PHONE NUMBERS FOR CALL FORWARDING

You can enter the call forwarding settings via the user menu (see "Configuring local call forwarding" → page 100)

Optionally, you can enter the call forwarding settings using the web interface (see "Web interface (WBM)" → page 204). If a number was entered first, it can no longer be deleted via the local phone settings, it can only be overwritten.

Entering a destination for forwarding all calls



Open "Presence".

Forward all calls



Select "Forward all calls".

Destination



Select "Destination".

123





Enter the destination phone number.



Save the setting.

MANAGING CALL FORWARDING



Open "Presence".



Select "Forward all calls".



Select "Forwarding controls". The following call options of call forwarding are available:

- All calls
- Busy
- No reply (after xs)
- Privacy mode

The 'x' in 'xs' denotes the delay value in seconds.

Editing the forwarding destination

The administrator can also allow additional conditions for each condition type based on the call direction:

- All calls (unconditional)
- External calls
- Internal calls

Each option may be activated separately and have their own destination.

You can check if a call forwarding type is already activated by selecting the forwarding type.



Select the forwarding type. e.g. "All calls". The same procedure applies to all call forwarding options.



Select "Destination".

123



Enter the destination phone number.



Save the setting.


Active forwarding (unconditional) is indicated by the icon  in the status bar.

COPYING AND PASTING DESTINATION PHONE NUMBERS

The current destination phone number for a call forwarding type is copied. For example, the current destination phone number for "All calls" should also become the destination phone number for "No reply".



Open "Presence".

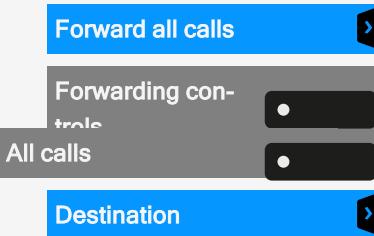

Select "Forward all calls" using the navigator key.

 
Select "Forwarding controls".

Select the forwarding type, e.g. "All calls".

Select "Destination" using the navigator key. The input field is displayed.




Select "Copy" and return to call forwarding.



Select the forwarding type, e.g. "Busy".

 Select "Destination" using the navigator key. The input field is displayed.



Select "Paste".




Save the setting.

ACTIVATING OR DEACTIVATING CALL FORWARDING

Prerequisite: A destination has to be entered first in order to activate the forwarding type.



Open "Presence".

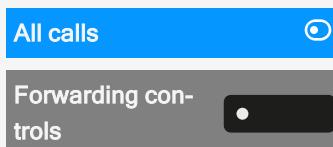

Disable the forwarding type "All calls" if you want to use the call type "Busy".

Select "Forwarding controls".

The following types of call forwarding are available:

- Unconditional
- Busy
- No reply



Enable or disable the selected option.

DEFINING THE RING DURATION BEFORE CALL FORWARDING IS ACTIVATED

You can define how long the phone should ring before call forwarding activates on "No reply".

This setting is only available if the "Server features" function was deactivated by the administrator.



Open "Presence".



Select "All calls".



Select "Forwarding controls".



Select the forwarding type "No reply".



Select "Set delay (seconds)".



Enter the required time in seconds (maximum 60).



Conclude your input.



Save the setting.

The new time is displayed.

CALL FORWARDING CHAIN

Sometimes calls to a contact are forwarded to another contact who also has call forwarding or DND ("Do not disturb") activated. This can create a call forwarding chain consisting of several telephones where the last member of the chain is your phone.

The following forwarding information is shown on your phone's display:

- Who is calling
- Who forwarded first or last

The reason for the forwarding is displayed by an icon.

You can set whether the contact who forwarded first or last is displayed (see "Setting alerts" → page 101).

ENHANCED CALL FORWARDING

Enhanced call forwarding allows you to configure call forwarding for all call types ("Unconditional", "Busy", "No reply") based on the origin of the call ("Internal", "External", "All calls").

Prerequisites:

- The use of system-assisted functions has been enabled by the administrator.
- External / internal forwarding function is activated by the administrator.
- External / internal forwarding feature is enabled within the OpenScape Voice feature profile of the user.

Call forwarding by call type

Forwarding in this case is dependent on the forwarding type and additionally on the call type. The menu layout therefore deviates from that for standard forwarding (see "Programming call forwarding" → page 175). You can also change, activate and deactivate call forwarding during a call.

Forwarding menu

Forwarding for all call types can be configured via the Presence screen of the device.

The Forwarding menu is opened either using the configured via the user menu and contains the three forwarding types:

- Unconditional
- Busy
- No reply (after xs)

Forwarded calls can be logged in a call list (see "Conversations" → page 52). The three forwarding types are each assigned three call types in the Forwarding menu:

- Unconditional
 - All calls
 - External
 - Internal
- Busy
 - All calls
 - External
 - Internal

- No reply
 - All calls
 - External
 - Internal

CTI calls

BEEP ON AUTO-ANSWER

When you dial a number with a CTI application (e.g. Outlook™) and auto-answer is activated, the phone switches automatically to speakerphone mode. If auto-answer is deactivated, the phone first rings and you must press the loudspeaker key or lift the handset to set up the call.

This setting also defines whether or not incoming DSS, or other special calls, calls are automatically accepted. If the function is active, an alert beep sounds when a call is automatically accepted (also refer to "Call pick-up" → page 1).

Information on the operation of the configured CTI application can be found in the corresponding operating instructions.

 
 For more information on configuring settings via the web interface, see "[Web interface \(WBM\)](#)" → page 204.

 This option is programmed by the administrator.




Press the key to open the main menu.

Settings



Open "Settings".

 User settings




Open "User settings".




Enter and confirm the user password, if required.

 Configuration



Select "Configuration".

 Incoming calls




Select "Incoming calls".

CTI calls




Select "CTI calls".

 Forced feed



Enable "Forced feed".

 Beep on auto-answer



Enable "Beep on auto-answer".



Save the setting.

BEEP ON AUTO-RECONNECT

You can reconnect a held call both via the CTI application and via the phone. A beep sounds when you toggle between an active call and a held call via the CTI application.

 For more information on configuring settings via the web interface, see "Web interface (WBM)" → page 204.

 This option is programmed by the administrator.



Press the key to open the main menu.

Settings 

Open "Settings".

User settings 

Open "User settings".



Enter and confirm the user password, if required.

Configuration 

Select "Configuration".

Incoming calls 

Select "Incoming calls".

CTI calls 

Select "CTI calls".

AutoAnswer 

Enable "AutoAnswer".

Beep on auto-reconnect 

Enable "Beep on auto-reconnect".

Save the setting.

Enabling or disabling the hold reminder tone

 For more information on configuring settings via the web interface, see "Web interface (WBM)" → page 204.



Press the key to open the main menu.

Settings 

Open "Settings".

User settings 

Open "User settings".




Enter and confirm the user password, if required.

Configuration 

Select "Configuration".

Connected calls 

Select "Connected calls".

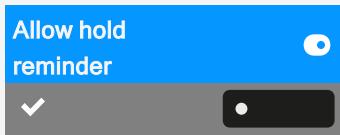

Enable or disable "Allow hold reminder".

Save the setting.

Setting the hold reminder time

Use "Hold reminder" to specify when you want to receive an automatic reminder about a held call. The minimum reminder time is 1 minute, the maximum time is 15 minutes.

 For more information on configuring settings via the web interface, see "["Web interface \(WBM\)" → page 204](#)".



Press the key to open the main menu.



Open "Settings".



Open "User settings".



 
Enter and confirm the user password, if required.



Select "Configuration".



Select "Connected calls".



Select "Hold reminder delay".

The current setting is displayed.



Select the hold reminder time.



Save the setting.

Enabling or disabling "Hold and hang-up"

This function works in the following call scenarios:

- You have placed a call on hold and hang up.
- You are conducting a consultation call and the second party hangs up.
- You have answered a second call and you or the second party hangs up.

 
You can use "Hold and hang-up" to determine whether you will be prompted immediately or after a defined time to retrieve the held call.

This function **cannot** be used on multi-line phones.


 For more information on configuring settings via the web interface, see "["Web interface \(WBM\)" → page 204](#).



Press the key to open the main menu.

Settings 

 Open "Settings".

User settings 

Open "User settings".



Enter and confirm the user password, if required.

Configuration 

 
Select "Configuration".

Connected calls 

Select "Connected calls".

Hold and hang-up 

Enable or disable "Hold and hang-up".

Save the setting.

Enabling or disabling "Music on hold"

If the Music on hold option is active, music is played back when you are placed on hold by another party.



 
For more information on configuring settings via the web interface, see "["Web interface \(WBM\)" → page 204](#).



Press the key to open the main menu.

Settings 


Open "Settings".

User settings 


Open "User settings".



 Enter and confirm the user password, if required.

Configuration 

 Select "Configuration".

Connected calls 

Select "Connected calls".

Music on hold 

Enable or disable "Music on hold".

Save the setting.

 
Allowing call joining

Call joining controls if a hang-up will cause two calls to be joined.


 For more information on configuring settings via the web interface, see "Web interface (WBM)" → page 204.



Press the key to open the main menu.

Settings 

 
Open "Settings".

User settings 


Open "User settings".



 Enter and confirm the user password, if required.

Configuration 

 Select "Configuration".

Connected calls 

Select "Connected calls".

Allow call joining 

Enable or disable "Allow call joining".

 
Save the setting.

Permitting call deflection


 For more information on configuring settings via the web interface, see "Web interface (WBM)" → page 204.



Press the key to open the main menu.

Settings 

 
Open "Settings".

User settings 


Open "User settings".



 Enter and confirm the user password, if required.

Configuration 

 Select "Configuration".

Incoming calls 

Select "Incoming calls".

Deflect 

Select "Deflect".

Allow deflection 

Enable "Allow deflection".

Default destination 

Select "Default destination".

123



Enter the destination phone number.

Entering a destination phone number is not mandatory when call deflection is active. To forward a call, you will be prompted in the case of the unsaved destination phone number to enter a destination number or select a corresponding contact from the conversations list.

DEFLECTING TO A PHONE NUMBER FROM AN EXISTING LOCAL CONVERSATION

Select conversation

Select "Select conversation".

123

X



Enter the contact's name for the desired conversation or locate it using the arrow keys.

•

Select the default phone number of a conversation. Conversations with the icon  indicate more than one available phone numbers.



To select a phone number other than the default use the arrow key.

✓

•

Confirm the selection.

DEFLECTING TO A DSS NUMBER

Deflect to DSS

•

This setting can only be configured by the administrator.

Allowing call waiting

 
 
 
 
If the call waiting (second call) function is deactivated, a caller hears the busy signal if you are already conducting a call.

The option was programmed by the administrator.

 For more information on configuring settings via the web interface, see "Web interface (WBM)" → page 204.

☰

Press the key to open the main menu.

Settings	
User settings	
Configuration	
Incoming calls	
Handling	
	
✓	

Open "Settings".

Open "User settings".

 Enter and confirm the user password, if required.

Select "Configuration".

Select "Incoming calls".

Select "Handling".

Enable "Allow call waiting".

 
 
 
 
Save the setting.

When "Call waiting" is activated, you can toggle a configured key to switch call waiting on or off.

Connecting contacts by hanging up

Enable "Toggle associate" if you want to transfer a first call to a second call waiting or a pickup call by hanging up.

 For more information on configuring settings via the web interface, see "[Web interface \(WBM\)](#)" → page 204.

	Press the key to open the main menu.
Settings	
User settings	
Configuration	
Connected calls	
	
✓	

Open "Settings".

Open "User settings".

 Enter and confirm the user password, if required.

Select "Configuration".

Select "Connected calls".

Enable "Toggle associate".

Save the setting.

Allowing call transfer

 For more information on configuring settings via the web interface, see "[Web interface \(WBM\)](#)" → page 204.



Press the key to open the main menu.

Settings

Open "Settings".

User settings

Open "User settings".



Enter and confirm the user password, if required.

Configuration

Select "Configuration".

Connected calls

Select "Connected calls".

Allow call transfer

Enable "Allow call transfer".

Save the setting.

If this feature is disabled, the transfer options are not displayed.

Settings for autodial delay

You can configure how long you have to add a subsequent digit to the dial string before dialling is triggered.

For more information on configuring settings via the web interface, see "["Web interface \(WBM\)" → page 204](#).

The setting does not affect automatic emergency number dialling.

If you select "Autodial delay (s)", you must either confirm or wait until the autodial delay expires to set up a call when dialling with the handset on hook.



Press the key to open the main menu.

Settings

Open "Settings".

User settings

Open "User settings".



Enter and confirm the user password, if required.

Configuration

Select "Configuration".

Outgoing calls

Select "Outgoing calls".

Autodial delay (s)

Edit "Autodial delay (s)". The current setting is displayed.

Select a new time.

 
Save the setting.

Automatic dial delay does not work if you are using a dial plan with numbers configured to be dialled immediately. The number is automatically dialled as soon as the digits entered matches an entry in the dial plan.

Allowing “Busy when dialling” for outgoing calls

If you activate this function, an incoming call is rejected while you are dialling. The caller then hears the busy signal.


 For more information on configuring settings via the web interface, see "Web interface (WBM)" → page 204.

-  Press the key to open the main menu.
-  Open “Settings”.
-  Open “User settings”.
-  Enter and confirm the user password, if required.
-  Select “Configuration”.
-  Select “Outgoing calls”.
-  Enable “Busy when dialling”.
-  Save the setting.

Allowing “Transfer on ring”

If this option is allowed, you can activate call transfer by replacing the handset even before the called party answers. If the call is not answered it is offered back to you.

  For more information on configuring settings via the web interface, see "Web interface (WBM)" → page 204.

-  Press the key to open the main menu.
-  Open “Settings”.
-  Open “User settings”.
-  Enter and confirm the user password, if required.
-  Select “Configuration”.

Outgoing calls 

Select "Outgoing calls".

Transfer on ring 

Enable "Transfer on ring".

Save the setting.

Enabling immediate dialling

"Immediate dialling" should only be activated if your administrator has configured and approved a dial plan.

- "Immediate dialling" is deactivated by default. Hence, after entering the number you must either confirm "Select" or wait until the dial delay expires to set up the connection.
- If "Immediate dialling" is configured, your call is automatically dialled as soon as the digits entered match an entry in the dial plan.

 For more information on configuring settings via the web interface, see "[Web interface \(WBM\)](#)" → page 204.

Press the key to open the main menu.

Settings 

Open "Settings".

User settings 

Open "User settings".



Enter and confirm the user password, if required.

Configuration 

Select "Configuration".

Outgoing calls 

Select "Outgoing calls".

Immediate dialling 

Enable "Immediate dialling".

Save the setting.

Allowing a conference

This option allows or blocks the function "Conference" and applies to local or server based conferences.

 For more information on configuring settings via the web interface, see "[Web interface \(WBM\)](#)" → page 204.

Press the key to open the main menu.

Settings 

Open "Settings".

User settings

Open "User settings".



Enter and confirm the user password, if required.

Configuration

Select "Configuration".

Connected calls

Select "Connected calls".

Allow conferences

Enable "Allow conferences".



Save the setting.

Allow joining in a conference

You can use this option to decide whether or not your call partners are joined together in a call after you exit a local (three-party) conference call.

 
 For more information on configuring settings via the web interface, see "["Web interface \(WBM\)" → page 204](#).



Press the key to open the main menu.

Settings

Open "Settings".

User settings

Open "User settings".



Enter and confirm the user password, if required.

Configuration

Select "Configuration".

Connected calls

Select "Connected calls".

Join in conferences

Enable "Join in conferences".



Save the setting.

Activating or deactivating the LED notification

If the phone has a new missed call and switches to power saving mode, the screen will be black but the notification LED remains red.

The new missed call notification will be also displayed in the "Conversations".

SELECTING THE VOICEMAIL MESSAGES LED NOTIFICATION

As a user, you can choose whether you want the notification LED to light up to signal that you have received a new voicemail. LED notification is activated by default.

 For more information on configuring settings via the web interface, see "["Web interface \(WBM\)" → page 204](#).



Press the key to open the main menu.



Open "Settings".



Open "User settings".



Enter and confirm the user password, if required.



Select "Configuration".



Select "Notification LED".



Edit "Voicemail messages". The current setting is displayed. The following options are available:

- Key
- Key and Notification LED
- Notification LED



Select the option.



Save the setting.

SELECTING THE LED NOTIFICATION FOR MISSED CALLS

As a user, you can choose whether you want the notification LED to light up to signal that you have missed calls.

LED notification is activated by default.

 For more information on configuring settings via the web interface, see "["Web interface \(WBM\)" → page 204](#).



Press the key to open the main menu.



Open "Settings".



Open "User settings".



Enter and confirm the user password, if required.

Configuration 

Select "Configuration".

Notification LED 

Select "Notification LED".

Missed calls 

Edit "Missed calls". The current setting is displayed. The following options are available:

- Key
- Key and Notification LED
- Notification LED
- No LED

Select the option.

Save the setting.

CLEAR LED NOTIFICATION FOR MISSED CALLS

When there is at least one missed call, the notification LED is lit steady red.

To turn off the notification LED, the option "Missed calls" must be configured (see "Selecting the LED notification for missed calls" → page 192).

 For more information on configuring settings via the web interface, see "Web interface (WBM)" → page 204.

Conversations 

Select "Conversations".

The notification LED is automatically cleared. However, the count of missed calls and the icon for each missed conversation entry is still displayed. To clear these you must access the conversation screen for each missed conversation entry.

To clear all missed calls, select the option "Mark all missed calls as read" in the list options of the screen "Conversations".

Call logging

DISABLE LOGGING

The function can be disabled in order to prevent unauthorized third parties gaining information on the other party involved in the call. No further calls or conversations will be logged in conversations. The function is enabled by default.

If the function is deactivated, all corresponding call log entries in conversations are deleted. LEDs and the notification LED are no longer lighting.

When you deactivate the call logging, the customary last number redial function will also be affected. You can no longer redial the last number dialled once the call journal is disabled (see "Allowing call joining" → page 184).

 For more information on configuring settings via the web interface, see "Web interface (WBM)" → page 204.



Press the key to open the main menu.

Settings 

Open "Settings".

User settings 

Open "User settings".



Enter and confirm the user password, if required.

Configuration 

 
Select "Configuration".

Call logging 


Select "Call logging".

General 

Select "General".

Logging 

 Enable "Logging".

Save the setting.

 
DISPLAYING THE MISSED CALL LOG

All missed calls intended for the primary line are logged and new missed calls are displayed. If "Include calls answered elsewhere" is disabled, missed calls for this line answered either by other contacts in the group or with "Directed pickup" are neither displayed nor logged (see also "Group call" → page 135).


Disabling is recommended if groups are set up.



Press the key to open the main menu.

Settings 

 Open "Settings".

User settings 

Open "User settings".



Enter and confirm the user password, if required.

Configuration 


Select "Configuration".

Call logging 

Select "Call logging".

Missed calls 

Select "Missed calls". The current setting is displayed.

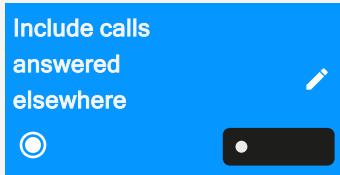

Edit "Include calls answered elsewhere".



Enable or disable the option.

- When enabled, missed calls that have been answered by other contacts are indicated with a check mark.
- When disabled, calls answered by other contacts are not displayed in the list.

Save the setting.

Call recording

For Zoom-connected CP phones, call recording is centrally managed by the Zoom server. The server records the entire voice flow of two or more participants if allowed by the account or line permissions.

You can configure a favourite key to trigger manual call recording (see "Programming the function keys" → page 127), but the actual recording is handled by Zoom's cloud infrastructure. Local configuration of recording storage or method is not available.

RECORDING MODES

The administrator can configure the following operating modes for call recording:

- Disabled
- All calls
- Manual
- Auto start
- One call

The following settings are available to audibly signal the recording:

- Repeat
- Single alert
- Off

Check with the administrator which settings apply to your phone.

Mode "All calls"

The phone starts and stops the recorder automatically so that all calls are recorded.

Mode "Manual"

You decide when the recorder is started, stopped, or paused.

- If the recorder is started, all calls will be recorded. You can turn on the recorder before a call so that all the subsequent calls are recorded.
- If you pause the recorder, nothing will be recorded.
- If there are no calls, the recorder likewise pauses.

Mode "Auto start"

The phone starts the recorder automatically. You can however stop or pause the recorder yourself and restart it.

- If a call has already been recorded, new incoming and outgoing calls will also be recorded.
- If you pause the recorder during a call, special calls such as consultation calls, call pick-ups, and second calls will not be recorded as long as the recorder is paused.
- If the phone reverts to idle status, the automatic start process is set up again for the next call.

Mode "One call"

You decide when the recorder is started and stopped, or paused.

- If the recorder is started, the current call will be recorded.
- If you pause the recorder, nothing will be recorded. The recorder will be turned off when the call has finished.

EXPLANATIONS OF RECORDING

The following features are not supported:

- Playing back recordings over the phone.
- Deleting recordings over the phone.
- Functions for editing recordings over the phone.

Recordable calls

A recordable call is any call that has a call connection status on the phone. This can be any incoming or outgoing call. It is immaterial here whether a call is set up directly via the phone or via an application.

- Outgoing calls
- Incoming calls
- Consultation

- Pickup
- Reconnect
- Second call
- Connected calls
- Conference (If a local conference is already in progress it cannot be recorded)
- Automatic call acceptance
- Secured or unsecured line

Non-recordable calls

Non-recordable calls are outgoing and incoming calls that have not yet reached full connection status, such as a ringing call only paused when you have held a call being recorded.

Enhanced functions

- A server based conference can be set up or cleared during recording.
- A consultation can be performed during recording.
- Call transfer is also available during recording. You cannot record a call that has been transferred away from the phone and is no longer connected to it.
- A second call can be accepted during recording.

Recording information

You will receive the following information while a call is recorded:

- The recording symbol  is flashing (red / grey).
- Beep sound is played repeatedly at intervals for you and your call partner (option)
- Beep sound is played once at the start of recording for you and your call partner (option)
- The audible advisory can also be switched off.

Multi-line

There is no difference between multi-line calls and single-line calls when it comes to recording calls. If recording has started, the call is recorded. The recording status of a line continues as long as calls are connected to this line and has not been put onto "Hold" (a held call on a line is treated as being not connected for recording).

Example

If line "A" is being recorded (initiated manually) and you switch to line "B" (or line "A" is placed on manual hold and you switch to line "B"), the recording is ended and a partial recording saved.

If you disable recording for the call on line "B" in manual or auto-start mode and switch back to line "A", the recording for line "A" is not started again.

The operating modes refer to the phone and are therefore the same for all lines.

RECORDING CALLS

Call recording with "Auto start"

Standby mode is activated in idle mode. The recording symbol  is displayed. You cannot switch off the recorder. If you have accepted a call or called a contact and the contact answers, the call is recorded automatically (to check which calls can be recorded, refer to "Recording information" → page 197).



Lift the handset and dial.



- Optionally, press the key shown.

The contact answers. You hear a beep, the recording symbol  starts flashing (red / grey) on the display. The call is now being recorded (see also "Recording information" → page 197).

You can pause the recording at any time and continue.



Hang up the handset.



- Optionally, press the key shown.

If you end the call, the "Auto start" process is set up again for the next call.

Controlling call recording

Starting call recording manually during a call

Prerequisites:

- Manual mode or "One call" is selected.
- You are conducting a call.
- Recording has not started.
- The recording symbol  is shown on the display.

Start recording

 


Select "Start recording". You hear a beep and the recording symbol  flashes (red / grey). The call is now being recorded (see also "Recording information" → page 197).

Stopping call recording manually during a call

Prerequisites:

- Manual mode, "Auto start" or "One call" is selected.
- You are making a call.
- Recording has started. The recording symbol  flashes (red / grey) on the display.

Stop recording

Select "Stop recording". You can start the recording again at any time, for example to continue recording the current call.

Ending call recording automatically

Prerequisites:

- You are making a call.
- Recording has started. The recording symbol  flashes (red / grey) on the display.



Hang up the phone.



- Optionally, press the key shown.

The recording is ended as soon as the call is terminated or if the call status changes so that the call is no longer being recorded, for example if a line is placed on manual hold and another line is seized (multi-line).

The recording symbol  stops flashing.

Consultation during call recording

Prerequisites:

- You are making a call.
- Recording has started. The recording symbol  flashes (red / grey).



You initiate a consultation.

The main call is placed on hold while the consultation is being performed.

If the consultation partner answers, the consultation call is recorded. You hear a beep and the recording symbol  is flashing (red / grey).

You can now terminate the consultation call or switch back to the first call party (Alternate) while the consultation call is placed on hold.

Answering a second call during call recording

Prerequisites:

- You are making a call.
- Recording has started. The recording symbol  flashes (red / grey).
- A second call party camps on, i.e. is received as a waiting call and is queued.

Answer

Select "Answer".

You are connected with the second party. You hear a beep and the recording symbol  flashes for the second call – this call is now being recorded.

The first party is placed on hold.

Call recording while alternating

Prerequisites:

- You have an active or held consultation or second call.
- Recording has started. The recording symbol  flashes (red / grey).



You are connected with the second party. You hear a beep and the recording symbol  flashes (red / grey) for the second call.

Alternate

Select "Alternate". You are switched to the main call. You hear a beep and the recording symbol  flashes (red / grey) for the main call – this call is now being recorded.

You can pause and restart the recording at any time in manual and "Auto start" modes.

The call is paused and reconnected during the recording

Prerequisites:

- You are making a call that is being recorded.
- Your call partner has placed the call on hold. You hear the music on hold.
- The recording symbol  is flashing (red / grey).



Your call partner resumes the call. You hear a beep and the recording symbol  continues flashing (red / grey).

Setting up a conference during recording

This function is possible only for a server based conference, not for a local (three party) conference.

Prerequisites:

- You are making a consultation call or have accepted a second call.
- Recording has started. The recording symbol  flashes (red / grey).
- The main call is placed on hold.

Conference

 
Select "Conference". You are connected to both parties at once. The conference is displayed with the current participants.

You hear a beep and the recording symbol  flashes (red / grey).

Adding conference participants during the recording

Prerequisites:

- You have set up a conference.
- The conference call is now being recorded.
- You have performed a consultation or accepted a second call (see "Consulting a second party" → page 88 and "Call waiting (second call)" → page 96). The conference call is placed on hold.
- You hear a beep and the recording symbol  flashes (red / grey) for the consultation or second call. The call is now being recorded.

Conference 

Select "Conference" to add the new contact to the conference. The conference is displayed with all current participants.

You hear a beep and the recording symbol  flashes (red / grey) for the conference call.

Your call is included in a conference during the recording

Prerequisites:

- You are making a call that is being recorded.
- Your call partner is to include you in a conference.
- You are placed on hold while the conference is being set up.
- You hear the music on hold while your call partner is setting up the conference.
- The recording continues and the recording symbol  flashes (red / grey).



Your call partner answers again and you are connected to the conference.

You hear a beep and the recording symbol  flashes (red / grey) in the "Conference" line.

The conference call is now being recorded.

Putting a line manually on hold during the recording

There are two options for placing a line manually on hold:

- You place the active line on hold during the call recording and then resume the call on this line.
- You seize a different line during call recording. The first line is placed on manual hold.

Prerequisites:

- The admin has configured that recording will start automatically for a new call.

- The phone has more than one line configured. The active call is being recorded. The recording symbol  flashes (red / grey) on the display.

It is assumed that a key module is connected for this example. If you do not have a key module, open the "Favourites" to use the line keys.

Holding the call on the line



You are making a call, for example on line 1. You hear a beep and the recording symbol  flashes (red / grey). The call is now being recorded.

 Line 1



Select line key 1. The line key LED lights up amber. The call is now on hold. The recording is stopped while the call is on hold. The recording symbol  is displayed.

Retrieving a held call

 Line 1



Select line key 1. The line key LED lights up. The call is retrieved. You hear a beep and the recording symbol  flashes (red / grey).

Call recording is interrupted (but a new recording may be started depending on the recording mode).

Call recording for a hold on a single line is continued.

Holding a call on the line and making a call on a different line

 Line 2



Select line key 2. The LED lights up. You hear a beep and the recording symbol  flashes (red / grey) for line 2 – this call is recorded.

Line 1 is placed on hold, call recording of line 1 is stopped.

 Line 1



Select line key 1 to resume the call. You hear a beep and the recording symbol  flashes (red / grey) for line 1 – a new recording of line 1 commences.

Diagnostic data

Prerequisite: The administrator has allowed access to diagnostic data.

The overview in the user area of the service menu provides you with information on the current configuration of the phone.

 For more information on configuring settings via the web interface, see "Web interface (WBM)" → page 204.

 


Press the key to open the main menu.


 Settings



Open "Settings".

User settings

 Open "User settings".

**Diagnostic information**

Select "Diagnostic information". You see a numbered list of phone parameters with the current settings.

Individual settings that impact energy efficiency

You can actively reduce energy consumption by making the following settings on your phone and therefore contribute in an important way to protecting the environment.

- You can reduce the ringer volume and display brightness – the default settings on delivery are 50%.
- You can change the time for switching from standby (ready) mode to an energy-efficient low power mode. The default setting on delivery is one minute.

Background lighting is always switched off in low power mode. The background lighting is set to a low level on delivery in all other modes.

Web interface (WBM)

You can configure a number of settings for your phone via the "Web Based Management" (WBM). The information is transferred via a secure HTTPS connection.

 Access to the web based management must be activated by the administrator.

Launching the web interface

For more information on the IP address, the web interface address, and how to connect the phone to the network, refer to the section "["Displaying network information" → page 172.](#)

1. To launch the interface, open a web browser and enter one of the following addresses:
 - **https://[IP address of the phone]**
[IP address of the phone] is the IP address of the phone.
 - **https://[Name of the phone]**
[Name of the phone] that was assigned by the administrator.
2. You might receive a certificate notification from the browser. Follow the instructions to download the certificate.
3. You will be prompted to configure a user password the first time you call up the WBM interface. You must log in with this password the next time you want to open the "User settings".

Administrator settings

This area lets you configure settings for administering your phone and the network environment. Access to the "Administrator settings" is protected by the administrator password.

 For further information, consult the administrator or refer to the administration manual.

Logging into the user settings

The web interface homepage opens once you have entered and confirmed the phone's IP address.

1. Enter the user password, if required.
2. Click a menu heading to display the individual menu entries.
3. Click the menu heading again to close the menu.
4. Click a menu entry to open the corresponding form.
5. Make the desired changes.
6. Click the corresponding button to save or discard your changes.

Button functions

- **Login:** Log in to the phone after you have entered the user password
- **Save & exit:** Apply changes
- **Reset:** Reset original values
- **Refresh:** Update the values.
- **Logout:** Log out from the phone

User menu

All settings in the user menu of the WBM interface can also be made via the user menu on the telephone.

Licenses

This area provides you with the information about EULA (End User License Agreement) and Open Source licenses. For further information, consult your administrator or refer to the administration manual.

Importing contacts via WBM

You can import your contacts into your phone through WBM interface, unless file transfer from the User settings in WBM is restricted by the administrator. If file transfer is disabled, contact your administrator.

For more information on configuring settings via the web interface, see → 204


The contact file can be exported from Outlook or OSM (discontinued).

See the products documentation for instructions on how to export contacts from an Outlook client or OSM.

Files previously exported by this or another phone may also be imported.

Downloading a contact list via the browser

1. Open the user pages in the browser with the URL of the phone.
2. Log on to the "User Settings" using your password.
3. Select "Contacts transfer".

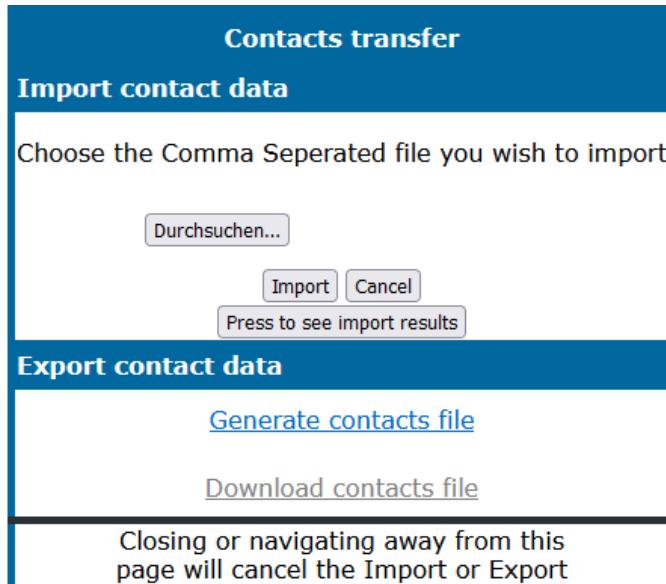

4. Click on "Choose file" and navigate to a local or remote folder.
5. Select a file.
 - The default format is ".csv".
 - You can use comma or a semi-colon as a value separator for the imported CSV file.
 - When exporting from Outlook, do not change the mapped header field names.
6. Confirm. The path to the file is displayed on the page when you select the destination and close the window.
7. Select "Import". While the import is in progress you may notice some deterioration in the phones performance.

Picture clips (avatars) are not included as part of the import.

The progress and outcome of the import is displayed.

- A completion message is displayed when the "Press to see import results" button is pressed.
- A successful import will be indicated by a "Import completed" text message below the panel on the page.
- A message "Import contacts completed" will also be displayed on the phone's screen when the import is completed.
- Failures will be indicated by a suitable text message below the panel on the page.


Exporting contacts via WBM

You can export your contacts from your phone through WBM interface so you can use them elsewhere. Note that file transfer from the User settings in WBM may be not be permitted by the administrator. For any issues, please contact your administrator.

Downloading a contact list from the phone via the browser

When exporting contacts via Internet Explorer browser, the contacts file “*.CSV” is written directly on to the browser page and must be copied and pasted.

1. Open the user pages in the browser with the URL of the phone.
2. Log on to the “User settings” using your password.
3. Select “Contacts transfer”.

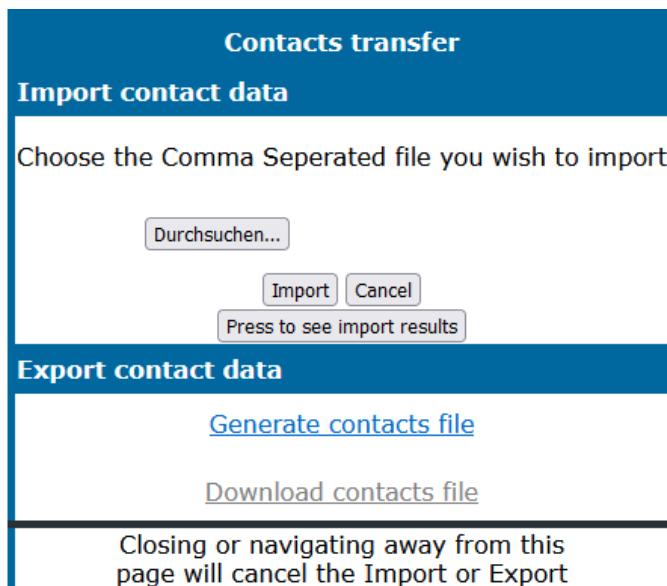

4. Select “Generate contacts file” and a new internal file containing all the valid contacts will be created. The default format is “.csv”.
5. Select “Download contacts file”. The *.csv file will be downloaded to your PC with the file name “CP_contacts.csv.”
6. You can then move and rename the file via PC.

Navigating away from this page will remove the internal file and the “Download contacts file” link becomes inactive.

Fixing problems

Error and warning messages

Indications that represent full errors that make normal operation impossible are displayed as "errors".

Indications that represent conditions where the phone can still be used but will operate subject to certain restrictions are displayed as "warnings".

Both error and warning messages (bar shaped notifications) are removed as soon as the relevant condition no longer applies.

An indication may contain multiple codes when more than one condition applies at the same time.

Any error, warning, or notification is displayed in a shortened form if the user scrolls to a menu option that is covered by a normal length of the notification (thus allowing the user to access the last menu item).

Cloud deployment errors are now shown as warning sausages.

Caring for your phone

- Never allow the telephone to come into contact with colouring, oily or aggressive agents.
- Always use a damp or antistatic cloth to clean the telephone. Never use a dry cloth.
- If the telephone is very dirty, clean it with a diluted neutral cleaner containing surfactants, such as a dish detergent. Afterwards remove all traces of the cleaner with a damp cloth (using water only).
- Never use cleaners containing alcohol, cleaners that corrode plastic or abrasive powders!

Troubleshooting

During operation, error or warning messages are displayed

Error messages (red notification) are displayed where the bracket identifies one or more codes that can be looked up by the administrator:

- No telephony possible (R**, L*, DO, TT)
 - Example "No telephony possible (LI, RF2)"

Warning messages (yellow notification):

- Limited keyset (WSS)
- Limited service (B8, NT) (where a failure may disrupt operation)
- Deployment error (A*, R*, D*) (where cloud deployment failed)
 - Example "Limited service (NT)"

Pressed key does not respond

If the phone is locked, selected dialling keys on the key module cannot be used. This also applies even if an emergency number is saved on this key.

- Check whether your phone is locked (The following message appears on the screen: "Phone locked. To unlock enter the PIN.").
- If the phone is locked, enter your PIN to unlock it.

The phone does not ring on call

- Check whether the ringer is deactivated (see icon in the status bar on the display).
- If it is deactivated, activate the ringer.

You cannot dial a number

- Check whether your phone is locked (The following message appears on the screen: "Phone locked. To unlock enter the PIN.").
- If the phone is locked, enter your PIN to unlock it.

Messages during remote configuration

If an error occurs during web deployment, it will be reported on the display. The following error codes are possible:

Code	Priority	Description
AU	1	Cancelled by user Appears if the PIN entry was rejected
RS	1	The IP address of the Mitel redirect server cannot be retrieved. DNS query failed.

Code	Priority	Description
RN	3	A connection cannot be established to the Mitel redirect server – No response
RR	2	A connection cannot be established to the Mitel redirect server – Rejected
RU	1	A connection cannot be established to the Unify redirect server – Not authorized
RO	3	A connection cannot be established to the Unify redirect server – No or invalid OCSP response
RV	2	A connection cannot be established to the Mitel redirect server – Certificate invalid
DS	1	The IP address of the deployment server cannot be retrieved. DNS query failed.
DN	3	A connection cannot be established to the deployment server. – No response
DR	2	A connection cannot be established to the deployment server. – Rejected

In such cases, contact the administrator and specify the error code.

Index

A

Administration.....	68
AICS Zip tone.....	140
Alerts.....	101
Answering calls	
MultiLine.....	139
Applications.....	46
Activating an application.....	46
Selecting an entry.....	46
Applications menu.....	66
Associated.....	147-148
Audio	
Room character.....	161
Auto headset.....	140
Autodial delay.....	84

B

Background lighting.....	169
Bluetooth.....	105

C

Call	
Forwarding.....	175
Holding.....	95
Incoming.....	73

Rejecting.....	78
Transferring.....	98
Call forwarding	
Activating/deactivating.....	178
Copying/pasting destination phone numbers.....	178
Call forwarding chain.....	179
Call recording	
Alternating.....	200
AutoStart.....	198
Call types.....	196
Conference.....	200
Consultation.....	199
Controlling.....	198
Icons.....	197
Line key.....	201
Multi-line.....	197
Operating modes.....	195
Second call.....	199
Tips.....	197
Call settings	
CTI calls.....	161
MultiLine.....	149
Call waiting.....	96
Changing the date display.....	166
Changing the password.....	153
Changing the user password.....	153
Conference.....	89
Connecting parties.....	95
Consultation.....	88

Consultation call from second call.....	97
Contact, deleting.....	60
Context.....	190
Context menus.....	45
Control relays.....	67
Conversations.....	52
Creating.....	54
Copying/pasting destination phone numbers.....	178
Corporate directory.....	101

D

Daylight saving.....	170
Daylight saving, Coordinated Universal Time.....	171
Deactivating the password.....	155
Deactivating the user password.....	155
Delayed ringer.....	149
Deleting a contact.....	60
Dial plan.....	156, 189

Directory

LDAP.....	101
-----------	-----

Display icons

Status line.....	44
------------------	----

Display settings

Idle mode for display.....	168
Do not disturb.....	152

E

Emergency call.....	156
---------------------	-----

Emergency number.....	156
-----------------------	-----

F

Fixed Function Keys.....	28
Forwarding	
Saving a destination phone number.....	176
Function key	
Programmable.....	28

G

General information.....	17
Graphic display.....	43
Graphic display settings	
Idle mode for graphic display.....	168

H

Headset	
Answering call automatically.....	140
Holding.....	95
Hotline	
For lines.....	149

I

Icons	
Status line.....	44
Immediate dialing.....	190

Incoming calls

MultiLine

Answering calls.....	139
----------------------	-----

K

Key modules.....	49-50
------------------	-------

L

Language setting

Country setting.....	164
----------------------	-----

LDAP.....	101
-----------	-----

LED displays

Direct station selection keys (DSS).....	29
--	----

Function keys.....	29
--------------------	----

Level.....	67
------------	----

Line utilization.....	137
-----------------------	-----

Line/trunk keys.....	136
----------------------	-----

Lines

Hot and warm line.....	149
------------------------	-----

Locking the phone.....	156
------------------------	-----

M

Microphone.....	85
-----------------	----

Missed calls.....	83
-------------------	----

MultiLine

Answering calls.....	139
----------------------	-----

LED displays.....	137
-------------------	-----

Making and receiving calls on a single line.....	146
--	-----

Multi-line

Making and receiving calls with multiple lines.....	147
MultiLine phone.....	21

N

Normal dialing.....	190
---------------------	-----

O

Open listening.....	86
OpenScape Key Module 410.....	49
OpenScape Key Module 710.....	50
Operating instructions.....	2
Operating steps	
programming a key.....	133

P

Parameters.....	67
Phone settings.....	159
Primary line.....	137
Privacy.....	152
Private line.....	137
Procedure	
programming a key.....	133
Program/Service menu.....	66
Programmable function key.....	28
Programmable keys.....	64-65

R

Remote configuration.....	25
Rollover.....	151

S

Safety notes.....	2
Saving destination phone number.....	176
ScreenSaver.....	167-168
Searching for conversations.....	56
Second call.....	96
Second call with consultation call.....	97
Secondary line.....	137
Security.....	152-153
Selected dialing key.....	81
Setting headset port.....	162
Settings.....	159
Shared line.....	137
Shared Line Group.....	147
SingleLine phone.....	21
Softkey.....	45
Softkeys.....	27
Speakerphone mode.....	74, 85
Status icons.....	44

T

Telephone maintenance.....	208
Telephony interface	
SingleLine.....	63

Time display format.....	166
Toggle/connect.....	89
Troubleshooting.....	208

U

User interface.....	26
---------------------	----

W

Warm line	
For lines.....	149
Web interface.....	204

Z

Zoom.....	147
-----------	-----

mitel.com



mitel.com



mitel.com



mitel.com



mitel.com



© 12/2025 Mitel Networks Corporation. All Rights Reserved. Mitel and the Mitel logo are trademark(s) of Mitel Networks Corporation. Unify and associated marks are trademarks of Unify Software and Solutions GmbH & Co. KG. All other trademarks herein are the property of their respective owners.