

MIVOICE OFFICE 400 VIRTUAL APPLIANCE

AS OF VERSION R4.1
SYSTEM MANUAL



NOTICE

The information contained in this document is believed to be accurate in all respects but is not warranted by Mitel Networks Corporation.

The information is subject to change without notice and should not be construed in any way as a commitment by Mitel or any of its affiliates or subsidiaries. Mitel and its affiliates and subsidiaries assume no responsibility for any errors or omissions in this document. Revisions of this document or new editions of it may be issued to incorporate such changes.

No part of this document can be reproduced or transmitted in any form or by any means - electronic or mechanical - for any purpose without written permission from Mitel Networks Corporation.

TRADEMARKS

The trademarks, service marks, logos and graphics (collectively "Trademarks") appearing on Mitel's Internet sites or in its publications are registered and unregistered trademarks of Mitel Networks Corporation (MNC) or its subsidiaries (collectively "Mitel") or others. Use of the Trademarks is prohibited without the express consent from Mitel. Please contact our legal department for additional information: legal@mitel.com.

For a list of the worldwide Mitel Networks Corporation registered trademarks, please refer to the website: <http://www.mitel.com/trademarks>.

PATENT NOTE ON POWER OVER ETHERNET

Mitel's Power Over Ethernet (PoE) Powered Device (PD) products are covered by one or more of the U.S. patents (and any foreign patent counterparts thereto) identified at Mitel's website: www.mitel.com/patents.

For more information on the PD patents that are licensed, please refer to . www.cmsspatents.com.

Virtual Appliance as of R4.1

syd-0590/1.2 – 08.2016

®, ™ Trademark of Mitel Networks Corporation

© Copyright 2016 Mitel Networks Corporation

All rights reserved

Content

1	Product and Safety Information	6
1. 1	About Mitel	6
1. 2	Product information	6
1. 3	Safety Information	9
1. 4	Data protection	10
1. 5	About this document	11
1. 6	Limited Warranty (Australia only)	13
2	System Overview	16
2. 1	Introduction	16
2. 2	Communication server	17
2. 2. 1	Positioning	17
2. 3	Networking Possibilities	18
2. 4	Mitel system phones and clients	19
2. 5	Various phones, terminals and equipment	24
2. 6	Solutions	25
2. 7	Applications and application interfaces	25
2. 7. 1	Mitel Applications	26
2. 7. 2	Application interfaces	29
2. 7. 2. 1	Mitel Open Interfaces Platform	29
2. 7. 2. 2	Message and alarm systems	32
2. 7. 2. 3	CTI - Computer Telephony Integration	32
2. 7. 2. 4	ISDN interface	34
2. 7. 2. 5	Configuration	34
2. 7. 2. 6	System monitoring	34
2. 7. 2. 7	Call logging	34
2. 7. 2. 8	Hospitality/Hotel	34
2. 7. 2. 9	Voice over IP	35
2. 8	First steps	35
2. 9	Connection options	35
3	Expansion Stages and System Capacity	36
3. 1	System capacity	36
3. 1. 1	Media resources	36
3. 1. 2	General system capacity	37
3. 1. 3	Terminals	39
3. 1. 4	Terminal and network interfaces	42
3. 1. 5	Software assurance	42
3. 1. 6	Licences	43
3. 1. 6. 1	Description of available licences	43
3. 1. 7	Restricted operating mode	52

3. 1. 8	Temporary offline licences	52
3. 1. 9	Trial licences	52
3. 1. 10	Virtual Appliance licenses	53
4	Installation.	61
4. 1	Introduction	61
4. 2	Abbreviations and definitions	61
4. 3	Minimum requirements for the virtual machine	62
4. 3. 1	Installing MiVoice Office 400 Virtual Appliance	62
4. 4	Installing, powering, connecting and registering terminals	66
4. 4. 1	IP system phones	66
4. 4. 2	Mitel 6700 SIP / 6800 SIP series SIP phones	67
4. 4. 3	Standard SIP phones and standard SIP terminals	68
4. 4. 4	Mobile/external phones	68
4. 4. 5	OIP and other applications	68
4. 4. 6	Digital system phones and terminals.	68
5	Configuration	69
5. 1	WebAdmin Configuration Tool	69
5. 1. 1	Integrated and auxiliary applications	71
5. 2	Access types	75
5. 3	User access control.	76
5. 3. 1	User accounts and authorization profiles	76
5. 3. 1. 1	User accounts	76
5. 3. 1. 2	Authorization profiles	77
5. 3. 2	Passwords	77
5. 3. 2. 1	Password syntax	78
5. 3. 2. 2	Change password	78
5. 3. 2. 3	Access with incorrect password	78
5. 3. 2. 4	Lost password	78
5. 3. 3	Automatic exit from the configuration	79
5. 3. 4	Access log	79
5. 4	Remote access	79
5. 4. 1	Access enabled by local users	80
5. 4. 2	Function code for remote maintenance access.	80
5. 4. 3	Function keys for remote maintenance access.	81
5. 5	Configuring	82
5. 6	Configuration Notes.	86
5. 6. 1	Licences	86
5. 6. 2	File management.	87
5. 6. 3	System reset	88
5. 6. 4	Data backup	89
5. 6. 4. 1	Auto backup	89
5. 6. 4. 2	Distribution service	90
5. 6. 4. 3	Manual backup	90

5. 6. 4. 4	Restore backup	90
5. 6. 5	Importing and exporting configuration data	91
5. 6. 6	Mitel 6700 SIP / 6800 SIP phones.	92
6	Operation and Maintenance	93
6. 1	Data Maintenance	93
6. 1. 1	File system of the communications server	93
6. 1. 2	Updating configuration data.	93
6. 2	Update Software	94
6. 2. 1	System software	94
6. 2. 2	Firmware for corded system phones.	95
6. 2. 3	Firmware System MiVoice Office 400 DECT.	96
6. 2. 4	Firmware System Mitel SIP-DECT	96
6. 3	Operations supervision	98
6. 3. 1	Event message concept	98
6. 3. 1. 1	Event types	98
6. 3. 1. 2	Event tables.	116
6. 3. 1. 3	Signal destinations	117
6. 3. 2	Other aids	123
6. 3. 2. 1	System logs.	123
6. 3. 2. 2	File system state	123
6. 3. 2. 3	File browser	123
7	Annex.	124
7. 1	Functions and terminals no longer supported	124
7. 2	Licensing information of third-party software products	125
7. 3	Documents and online help systems with further information	126

1 Product and Safety Information

Here you will find information relating to safety, data protection and legal matters besides product and documentation information.

Please read through the product and safety information carefully.

1.1 About Mitel

Mitel (Nasdaq:MITL) (TSX:MNW) is a global leader in business communications that easily connect employees, partners and customers - anywhere, anytime and over any device, for the smallest business to the largest enterprise. Mitel offers customers maximum choice with one of the industry's broadest portfolios and the best path to the cloud. With more than US\$1 billion in combined annual revenue, 60 million customers worldwide, and #1 market share in Western Europe, Mitel is a clear market leader in business communications. For more information, go to www.mitel.com.

1.2 Product information

Purpose and function

MiVoice Office 400 is an open, modular and comprehensive communication solution for the business sector with several communication servers of different performance and expansion capacity, an extensive telephone portfolio and a multitude of expansions.

MiVoice Office 400 Virtual Appliance is a software-based, hardware-independent communication server. It is also Mitel Standard Linux (MSL) based, and runs on a virtual machine (VMware®). The expansion possibilities for the Virtual Appliance communication server include an FMC Controller for integrating mobile/external phones and an open interface for application developers.

The business communication solution with all its elements was designed to cover the full spectrum of communication requirements of businesses and organizations in a user and maintenance-friendly way. The individual products and parts are co-ordinated and cannot be used for other purposes or replaced by outside products or parts (except to connect up other authorized networks, applications and phones to the interfaces certified for that purpose).

User groups

The phones, soft phones and PC applications of the MiVoice Office 400 communication solution are particularly user friendly in design and can be used by all end users without any specific product training.

The phones and PC applications for professional applications, such as the PC operator consoles or call centre applications, do require training of the personnel.

Specialist knowledge of IT and telephony is assumed for the planning, installation, configuration, commissioning and maintenance. Regular attendance at product training courses is strongly recommended.

User information

MiVoice Office 400 products are supplied with safety and product information, quick user guides and user guides.

These and all other user documents such as system manuals are available for download from the MiVoice Office 400 DocFinder as individual documents or as a documentation set. Some user documents are accessible only via a partner login.

It is your responsibility as a specialist retailer to keep up to date with the scope of functions, the proper use and the operation of the MiVoice Office 400 communication solution and to inform and instruct your customers about all the user-related aspects of the installed system:

- Please make sure you have all the user documents required to install, configure and commission an MiVoice Office 400 communication system and to operate it efficiently and correctly.
- Make sure that the versions of the user documents comply with the software level of the MiVoice Office 400 products used and that you have the latest editions.
- Always read the user documents first before you install, configure and put an MiVoice Office 400 communication system into operation.
- Ensure that all end users have access to the User Guides.

Download the MiVoice Office 400 documents from the internet: www.mitel.com/DocFinder

© The information, graphics and layouts featured in the user information are subject to copyright and may not be duplicated, presented or processed without the written consent of Mitel Schweiz AG.

Conformity

Mitel Schweiz AG hereby declares, that the MiVoice Office 400 products

- comply with the basic requirements and other stipulations of Directives EMC (2014/30/EU) and LVD (2014/35/EU).
- are manufactured in conformity with RoHS according to Directive 2011/65/EU.

You can find the product specific declarations of conformities under www.mitel.com/regulatory-declarations.

Use of third party software

MiVoice Office 400 products comprise, or are partially based on, third-party software products. The licence information for these third-party products is listed in the user's guide of the MiVoice Office 400 product in question.

Exclusion of Liability

(Not valid for Australia. See the chapter "Limited Warranty (Australia only)", page 13.)

All parts and components of the MiVoice Office 400 communication solution are manufactured in accordance with ISO 9001 quality guidelines. The relevant user information has been compiled with the utmost care. The functions of the MiVoice Office 400 products have been tested and approved after comprehensive conformity tests. Nonetheless errors cannot be entirely excluded. The manufacturers shall not be liable for any direct or indirect damage that may be caused by incorrect handling, improper use, or any other faulty behaviour. Potential areas of particular risk are signalled in the appropriate sections of the user information. Liability for loss of profit shall be excluded in any case.

Environment

MiVoice Office 400 products are delivered in recycled, chlorine-free corrugated cardboard packaging. The parts are also wrapped inside a protective fleece made of polyethylene foam fleece or polyethylene film for added protection during shipping. The packaging is to be disposed of in accordance with the guidelines stipulated under current legislation.



MiVoice Office 400 products contain plastics based on a pure ABS, sheet steel with an aluminium-zinc or zinc finish, and epoxy resin-based PCBs. These materials are to be disposed of in accordance with the guidelines stipulated under current legislation.

MiVoice Office 400 products are disassembled exclusively using detachable screwed connections.

1.3 Safety Information

Reference to hazards

Hazard warnings are affixed whenever there is a risk that improper handling may put people at risk or cause damage to the MiVoice Office 400 product. Please take note of these warnings and follow them at all times. Please also take note in particular of hazard warnings contained in the user information.

Operating safety

MiVoice Office 400 communication servers are operated on 115 or 230 VAC mains power. Communication servers and all their components (e.g. telephones) will not operate when mains power fails. Interruptions in the power supply will cause the entire system to restart. A UPS system has to be connected up-circuit to ensure an uninterrupted power supply. Up to a specific performance limit a Mitel 470 communication server can also be powered redundantly using an auxiliary power supply. For more information please refer to your communication server's system manual.

When the communication server is started for the first time, all the configuration data is reset. You are advised to backup your configuration data on a regular basis as well as before and after any changes.

Installation and operating instructions

Before you begin with the installation of the MiVoice Office 400 communication server:

- Check that the delivery is complete and undamaged. Notify your supplier immediately of any defects; do not install or put into operation any components that may be faulty.
- Check that you have all the relevant user documents at your disposal.
- During the installation follow the installation instructions for your MiVoice Office 400 product and observe to the letter the safety warnings they contain.

Any servicing, expansion or repair work is to be carried out only by technical personnel with the appropriate qualifications.

1. 4 Data protection

Protection of user data

During operation the communication system records and stores user data (e.g. call data, contacts, voice messages, etc.). Protect this data from unauthorised access by using restrictive access control:

- For remote management use SRM (Secure IP Remote Management) or set up the IP network in such a way that from the outside only authorised persons have access to the IP addresses of the MiVoice Office 400 products.
- Restrict the number of user accounts to the minimum necessary and assign to the user accounts only those authorisation profiles that are actually required.
- Instruct system assistants to open the remote maintenance access to the communication server only for the amount of time needed for access.
- Instruct users with access rights to change their passwords on a regular basis and keep them under lock and key.

Protection against listening in and recording

The MiVoice Office 400 communication solution comprises features which allow calls to be monitored or recorded without the call parties noticing. Inform your customers that these features may only be used in compliance with national data protection provisions.

Unencrypted phone calls made on the IP network can be recorded and played back by anyone with the right resources:

- Use encrypted voice transmission whenever possible.
- For WAN links used for transmitting calls from IP or SIP phones, use as a matter of preference either the customer's own dedicated leased lines or VPN encrypted connection paths.

1.5 About this document

This document contains information on the expansion stages, system capacity, installation, configuration, running and maintenance as well as the technical data of the MiVoice Office 400 communication servers. The system functions and features, the DECT planning and the possibilities for networking several systems into a private network (PISN) or an Mitel Advanced Intelligent Network (AIN) are not part of this Manual; they are described in separate documents.

The document is intended for planners, installers and system managers of phone equipment. Basic knowledge of phones, especially ISDN and IP technology, is required to understand the content.

The system manual is available in Acrobat Reader format and can be printed out if necessary. Navigation in PDF format is based on the bookmarks, table of contents, cross references and index. All these navigation aids are linked, i.e. a mouse click takes you directly to the corresponding places in the Manual. We have also ensured that the page numbering in the PDF navigation corresponds to the page numbering of the Manual, making it much easier to jump to a particular page.

Referenced menu entries and parameters appearing on terminal displays or on the user interfaces of the configuration tools are *highlighted* in italics and in colour for a clearer orientation.

Document information

- Document number: syd-0590
- Document version: 1.2
- Valid as of / based on: R4.1 / R4.1
- © 08.2016 Mitel Schweiz AG
- In PDF viewer, click on this link to download the latest version of this document:
https://pbxweb.aastra.com/doc_finder/DocFinder/syd-0590_en.pdf?get&DNR=syd-0590

Hazard alert messages

Special hazard alert messages with pictograms are used to signal areas of particular risk to people or equipment.



Hazard:

Failure to observe information identified in this way can put people and hardware at risk through electrical shock or short-circuits respectively.



Warning:

Failure to observe information identified in this way can cause a defect of the product or to a module.



Note:

Failure to observe information identified in this way can lead to equipment faults or malfunctions or affect the performance of the system.

General Considerations

Special symbols for additional information and document references.



Note

Failure to observe information identified in this way can lead to equipment faults or malfunctions or affect the performance of the system.



Tip

Additional information on the handling or alternative operation of equipment.



See also

Reference to other chapters within the document or to other documents.



Mitel Advanced Intelligent Network

Particularities that have to be observed in an AIN.

References to the MiVoice Office 400 configuration tool WebAdmin

If an equals sign is entered in the WebAdmin search window , followed by a two-digit navigation code, the view assigned to the code is directly displayed.

Example: [Licence overview](#) ([Q=q9](#)) view

The corresponding navigation code is available on the help page of a view.

1. 6 Limited Warranty (Australia only)

The benefits under the Mitel Limited Warranty below are in addition to other rights and remedies to which you may be entitled under a law in relation to the products.

In addition to all rights and remedies to which you may be entitled under the Competition and Consumer Act 2010 (Commonwealth) and any other relevant legislation, Mitel warrants this product against defects and malfunctions in accordance with Mitel's authorized, written functional specification relating to such products during a one (1) year period from the date of original purchase ("Warranty Period"). If there is a defect or malfunction, Mitel shall, at its option, and as the exclusive remedy under this limited warranty, either repair or replace the product at no charge, if returned within the warranty period.

Exclusions

Mitel does not warrant its products to be compatible with the equipment of any particular telephone company. This warranty does not extend to damage to products resulting from improper installation or operation, alteration, accident, neglect, abuse, misuse, fire or natural causes such as storms or floods, after the product is in your possession. Mitel will not accept liability for any damages and/or long distance charges, which result from unauthorized and/or unlawful use.

To the extent permitted by law, Mitel shall not be liable for any incidental damages, including, but not limited to, loss, damage or expense directly or indirectly arising from your use of or inability to use this product, either separately or in combination with other equipment. This paragraph, however, is not intended to have the effect of excluding, restricting or modifying the application of all or any of the provisions of Part 5-4 of Schedule 2 to the Competition and Consumer Act 2010 (the ACL), the exercise of a right conferred by such a provision or any liability of Mitel in relation to a failure to comply with a guarantee that applies under Division 1 of Part 3-2 of the ACL to a supply of goods or services.

This express warranty sets forth the entire liability and obligations of Mitel with respect to breach of this express warranty and is in lieu of all other express or implied warranties other than those conferred by a law whose application cannot be excluded, restricted or modified. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Repair Notice

To the extent that the product contains user-generated data, you should be aware that repair of the goods may result in loss of the data. Goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the goods. If it is necessary to replace the product under this limited warranty, it may be replaced with a refurbished product of the same design and colour.

If it should become necessary to repair or replace a defective or malfunctioning product under this warranty, the provisions of this warranty shall apply to the repaired or replaced product until the expiration of ninety (90) days from the date of pick up, or the date of shipment to you, of the repaired or replacement product, or until the end of the original warranty period, whichever is later. Proof of the original purchase date is to be provided with all products returned for warranty repairs.

Warranty Repair Services

Procedure: Should the product fail during the warranty period and you wish to make a claim under this express warranty, please contact the Mitel authorized reseller who sold you this product (details as per the invoice) and present proof of purchase. You will be responsible for shipping charges, if any.

Limitation of liability for products not of a kind ordinarily acquired for personal, domestic or household use or consumption (e.g. goods/services ordinarily supplied for business-use).

Limitation of liability

- 1.1 To the extent permitted by law and subject to clause 1.2 below, the liability of Mitel to you for any non-compliance with a statutory guarantee or loss or damage arising out of or in connection with the supply of goods or services (whether for tort (including negligence), statute, custom, law or on any other basis) is limited to:
 - a) in the case of services:
 - i) the resupply of the services; or
 - ii) the payment of the cost of resupply; and
 - b) in the case of goods:
 - i) the replacement of the goods or the supply of equivalent goods; or
 - ii) the repair of the goods; or
 - iii) the payment of the cost of replacing the goods or of acquiring equivalent goods; or
 - iv) the payment of the cost of having the goods repaired.
 - 1.2 Clause 1.1 is not intended to have the effect of excluding, restricting or modifying:
 - a) the application of all or any of the provisions of Part 5-4 of Schedule 2 to the Competition and Consumer Act 2010 (the ACL); or
 - b) the exercise of a right conferred by such a provision; or
 - c) any liability of Mitel in relation to a failure to comply with a guarantee that applies under Division 1 of Part 3-2 of the ACL to a supply of goods or services.
-

After Warranty Service

Mitel offers ongoing repair and support for this product. If you are not otherwise entitled to a remedy for a failure to comply with a guarantee that cannot be excluded under the Australian Consumer Law, this service provides repair or replacement of your Mitel product, at Mitel's option, for a fixed charge. You are responsible for all shipping charges. For further information and shipping instructions contact:

Manufacturer:

Mitel South Pacific Pty Ltd ("Mitel")
Level 1, 219 William Street
Sydney, NSW2000, Australia
Phone: +61 2 9023 9500

Note:

Repairs to this product may be made only by the manufacturer and its authorized agents, or by others who are legally authorized. Unauthorized repair will void this express warranty.

2 System Overview

This chapter provides a brief overview of the Virtual Appliance communication server with its positioning within the MiVoice Office 400 series and the networking possibilities. It also features the system phones, the applications and the application interfaces.

2.1 Introduction

MiVoice Office 400 is a family of IP-based communications servers for professional use in companies and organizations operating as small and medium-sized businesses in all industries. The family consists of four systems with different expansion capacities. The systems can be expanded using cards, modules and licences, and adapted to the specific requirements of companies.

The family covers the growing demand for solutions in the area of unified communications, multimedia and enhanced mobile services. It is an open system that supports global standards and is therefore easily integrated into any existing infrastructure.

With its wide range of networking capabilities the system is particularly well suited for companies that operate in several locations. Coverage can even be extended to the smallest branch offices at low cost.

MiVoice Office 400 communication systems handle “Voice over IP” technology with all its benefits. What’s more, the systems operate just as easily with traditional digital or analogue phones and public networks.

With the integrated Media Gateways any hybrid forms of an IP-based and digital or analogue communication environment are also possible. This enables customers to make the switch from traditional telephony to IP-based multimedia communication either in just one step or, gradually, in several stages.

2.2 Communication server

MiVoice Office 400 Virtual Appliance is a software-based, hardware-independent communication server. It is also Mitel Standard Linux (MSL) based, and runs on a virtual machine (VMware).™

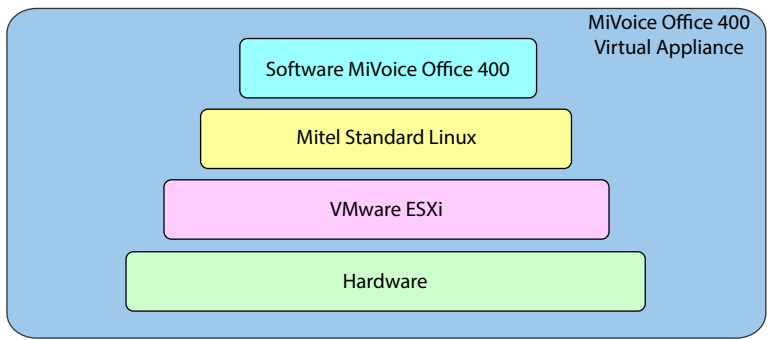


Fig. 1 MiVoice Office 400 Virtual Appliance

The integrated Mitel Media Server is responsible for switching the IP media channels. Analogue and digital interfaces are available via a networked, hardware-based Mitel 415, Mitel 430 or Mitel 470 satellite. Moreover, AIN networking is the prerequisite for obtaining master eVirtual Appliance licences.

2.2.1 Positioning

Applications range from small businesses and branches to large companies at one or more locations. Up to 1200 users can be operated on the Virtual Appliance communication server. One licence is required for each user.

The diagram below shows the MiVoice Office 400 communication servers with their expansion capacity for IP system phones.

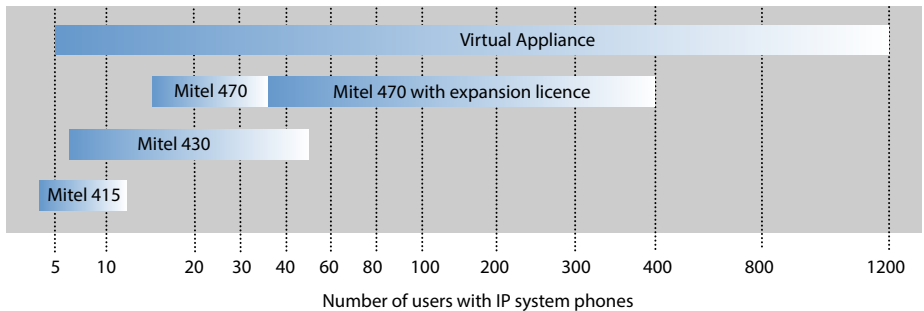


Fig. 2 MiVoice Office 400 communication servers and their expansion capacity

2.3 Networking Possibilities

MiVoice Office 400 communication servers at different company locations, even beyond national borders, can be linked together to form an enterprise-wide private communication network with a common numbering plan. The following networking types are possible:

Mitel Advanced Intelligent Network (AIN)

In an AIN several communication servers of the MiVoice Office 400 series can be connected up to form a homogeneous communication system. The single systems are connected with one another via the IP network, thereby forming the nodes of the overall AIN system. One node acts as the Master and controls the other (satellite) nodes. All the features are then available at all the nodes.

No call charges are incurred as the internal voice traffic between locations is routed via the system's own data network. All the AIN nodes are configured and set up centrally via the Master.

If a node is isolated from the rest of the AIN by an interruption in the IP connection, it restarts with an emergency configuration after a set amount of time. The connections are then routed to the public network via local links, for example with ISDN or SIP connections, until contact with the AIN is restored.

For the Virtual Appliance communication server, AIN networking (Virtual Appliance as master) with at least one satellite is mandatory.

SIP networking

Networking based on the open global SIP protocol is the universal way of connecting several systems with one another via the private data network or the internet. MiVoice Office 400 communication platforms can be used to network up to 100 other Mitel systems or SIP-compatible third-party systems. All the main telephony features such as call number and name display, enquiry call, hold, brokering, call transfer and conference circuits are supported. The transmission of DTMF signals and the T.38 protocol for Fax over IP between the nodes is also possible.

Virtual and leased-line networking via BRI/PRI interfaces

With this type of connection the nodes are connected via basic rate interfaces (BRI) or primary rate interfaces (PRI).

With virtual networking all the nodes are connected via the public ISDN network. This type of networking is particularly well suited for geographically dispersed locations which have such a low volume of calls between locations that leased lines or setting up a private data network are not worthwhile. The range of services available in a virtual network depends on the range of services offered by the network provider. The DSS1 ISDN protocol is the main protocol used.






With leased line networking the nodes are connected via dedicated or leased lines. One advantage of leased line networking are the fixed costs, regardless of the number of call connections. The most common protocol used is QSIG/PSS1, which supports several more features than the DSS1 protocol.

Virtual and leased-line networking can also be used in combination. Mitel systems are well as third-party systems can be used.






2.4 Mitel system phones and clients

Mitel system phones stand out by virtue of their high level of user convenience and their attractive design. The broad range of products ensures there is a suitable model for every use.




Tab. 1 Mitel 6800 SIP series SIP phones

Product	Principal common features	Additional model-specific features
 <p>Mitel 6863 SIP Phone</p>	<ul style="list-style-type: none"> • User-friendly registration, configuration and operation of system features through MiVoice Office 400 integration. • XML browser compatible • Automatic update of the terminal software • Web-user interface • Excellent voice quality due to Mitel Hi-Q™ wideband audio technology • Full-duplex hands-free operation (speakerphone) • Several configurable line keys • Three-party conference possible locally on the phone • Wall mounting possible • Power over Ethernet 	<p>Mitel 6863 SIP:</p> <ul style="list-style-type: none"> • Integrated 10/100 Mbit Ethernet switch for connecting a PC
 <p>Mitel 6865 SIP Phone</p>		<p>Mitel 6865 SIP, Mitel 6867 SIP, Mitel 6869 SIP and Mitel 6873 SIP:</p> <ul style="list-style-type: none"> • Integrated 1 Gbit Ethernet switch for connecting a PC • Backlit display • Expansion key modules can be connected
 <p>Mitel 6867 SIP Phone</p>		<p>Mitel 6867 SIP and Mitel 6869 SIP:</p> <ul style="list-style-type: none"> • Magnetic keyboard connector
 <p>Mitel 6869 SIP Phone</p>		<p>Mitel 6867 SIP, Mitel 6869 SIP and Mitel 6873 SIP:</p> <ul style="list-style-type: none"> • USB Interface • Replaceable keyboard covers
 <p>Mitel 6873 SIP Phone</p>		<p>Mitel 6873 SIP:</p> <ul style="list-style-type: none"> • Bluetooth interface <p>General:</p> <ul style="list-style-type: none"> • Additional model-specific features include the resolution, the display type and size, and the number of configurable or fixed function keys.





Tab. 2 Mitel 6730 SIP series SIP phones


Product	Principal common features	Additional model-specific features
 Mitel 6730 SIP Phone	<ul style="list-style-type: none">• User-friendly registration, configuration and operation of system features through MiVoice Office 400 integration.• XML browser compatible• Automatic update of the terminal software• Web-user interface• Excellent voice quality due to Mitel Hi-Q™ wideband audio technology• Full-duplex hands-free operation (speakerphone)• Several configurable line keys• Three-party conference possible locally on the phone• Wall mounting possible• Power over Ethernet (except Mitel 6730 SIP)	<p>Mitel 6731 SIP:</p> <ul style="list-style-type: none">• Integrated 10/100 Mbit Ethernet switch for connecting a PC <p>Mitel 6735 SIP , Mitel 6737 SIP and Mitel 6739 SIP:</p> <ul style="list-style-type: none">• Integrated 1 Gbit Ethernet switch for connecting a PC• Backlit display• Expansion key modules can be connected• Headset socket (DHSG standard) <p>Mitel 6739 SIP:</p> <ul style="list-style-type: none">• Bluetooth interface• USB Interface <p>General:</p> <ul style="list-style-type: none">• Additional model-specific features include the resolution, the display type and size, and the number of configurable or fixed function keys.
 Mitel 6731 SIP Phone		
 Mitel 6735 SIP Phone		
 Mitel 6737 SIP Phone		
 Mitel 6739 SIP Phone		

Tab. 3 Mitel 6750 SIP series SIP phones




Product	Principal common features	Additional model-specific features
 Mitel 6753 SIP Phone	<ul style="list-style-type: none">• User-friendly registration, configuration and operation of system features through MiVoice Office 400 integration.• XML browser compatible• Automatic update of the terminal software• Web-user interface• Excellent voice quality due to Mitel Hi-Q™ wideband audio technology• Full-duplex hands-free operation (speakerphone)• Several configurable line keys• Three-party conference possible locally on the phone• Wall mounting possible• Integrated 10/100 Mbit Ethernet switch for connecting a PC• Power over Ethernet	<p>Model-specific features include the resolution, the display type and size, and the number of configurable or fixed function keys.</p>
 Mitel 6755 SIP Phone		
 Mitel 6757 SIP Phone		

Tab. 4 IP system phones (softphones) and clients




Product	Main features
 <p>Mitel BluStar for PC</p>	<ul style="list-style-type: none"> • Autonomous and powerful SIP-based BluStar PC phone with video functionality • Can be used with headset or handset via PC audio interface, USB or Bluetooth • Graphical user interface with mouse and keyboard operation • User-friendly contact search • HD audio and HD video calls • Outlook integration • Link to e-mail client • Click to Call • Connection to an MS Lync server or an IBM Sametime server
 <p>MiVoice 2380 Softphone</p>	<ul style="list-style-type: none"> • Autonomous and powerful, IP-based PC system phone with intuitive user interface • Can be used with headset or handset via PC audio interface, USB or Bluetooth • Graphical user interface with mouse and keyboard operation • Displayable expansion keypad for team keys, functions and phone numbers • Displayable keypad • Ring tones expandable using .mp3, .mid and .wav files • Call contacts directly from Outlook • All the system features can be used
 <p>MiVoice 1560 PC Operator</p>	<ul style="list-style-type: none"> • OIP client application for a professional PC operator console • Can be used purely as an IP softphone (MiVoice 1560) or together with a system phone (MiVoice 1560) • Graphical user interface with mouse and keyboard operation • Can be used in an AIN as a network-wide PC operator console • Call management with internal and external queues • Presence indicator, presence profiles, phone book and journal • Operator groups and agent control • Line keys and calendar functions • Possibility of synchronisation with a Microsoft Exchange server • All the system features can be used
 <p>Mitel Office Suite</p>	<ul style="list-style-type: none"> • OIP client application for PC-based call management • Used in conjunction with a system phone • Graphical user interface with mouse and keyboard operation • Configuration of the coupled system phone • Call manager with extensive functions and options • Presence indicator of other users • Configurable presence profiles • Phone book with address books and personal contacts • Journal with call lists, text messages and notes • Workgroups (agent control) • Possibility of synchronisation with a Microsoft Exchange server • Possibility of displaying various additional windows • All the system features can be used

Product	Main features
 <p>Mitel Mobile Client (MMC)</p>	<ul style="list-style-type: none"> • FMC client for mobile phones (runs on various operating systems) • Integrates the mobile phone into the Mitel communication system • User is always reachable under the same call number (One Number concept) • Various telephone functions can be menu-operated both in the idle state and during a call • Other system features can be used via function codes • With MMC Controller handover is possible between internal WLAN and mobile radio network.





Tab. 5 MiVoice 5300 IP series IP system phones (hardphones)

Product	Principal common features	Additional model-specific features
 MiVoice 5361 IP Phone	<ul style="list-style-type: none">• Intuitive and user-friendly menu prompting with Foxkey and central navigation key• All the system features can be used• Excellent voice quality due to Mitel Hi-Q™ wideband audio technology• Automatic update of the phone software• Connection via Ethernet• Powered via Ethernet (POE) or power supply• Wall mounting possible• Web configuration interface	MiVoice 5370 IP/MiVoice 5380 IP: <ul style="list-style-type: none">• Expansion key modules can be connected• Headset socket with DHSG standard• Integrated switch for connecting a PC
 MiVoice 5370 IP Phone		MiVoice 5380: <ul style="list-style-type: none">• Backlit display• Optional Bluetooth module• Can be used as operator console when combined with expansion key module
 MiVoice 5380 IP Phone		
<p>Note:</p> <p>The MiVoice 5360 IP IP system phone is supported as before.</p>		

Tab. 6 Digital system phones of the MiVoice 5300 family

Product	Principal common features	Additional model-specific features
 <p>MiVoice 5361 Digital Phone</p>	<ul style="list-style-type: none">• Intuitive and user-friendly menu prompting with Foxkey and central navigation key• All the system features can be used• Automatic update of the phone software• Connection via DSI interface• Two phones can be connected per DSI interface• Powered via DSI bus or power supply• Wall mounting possible	MiVoice 5370/MiVoice 5380: <ul style="list-style-type: none">• Expansion key modules can be connected• Headset socket with DHSG standard
 <p>MiVoice 5370 Digital Phone</p>		MiVoice 5380: <ul style="list-style-type: none">• Backlit display• Optional Bluetooth module• Can be used as operator console when combined with expansion key module
 <p>MiVoice 5380 Digital Phone</p>		
<p>Note:</p> <p>The digital system phones of the Office family (Office 10, Office 25, Office 35, Office 45 and Office 45pro) are supported as before (not all system features can be used).</p>		



Tab. 7 Cordless system phones of the Mitel 600 DECT family

Product	Principal common features	Additional model-specific features
 Mitel 612 DECT Phone  Mitel 622 DECT Phone	<ul style="list-style-type: none"> • Intuitive and user-friendly menu prompting with Foxkey and central navigation key • Colour display • All the system features can be used • Automatic update of the phone software • Backlit display and keyboard • Headset socket • Automatic handover and roaming • Can be operated on both the DSI radio units SB-4+, SB-8, SB-8ANT and the SIP-DECT® radio units RFP L32 IP, RFP L34 IP and RFP L42 WLAN 	Mitel 622 DECT/Mitel 632 DECT/Mitel 650 DECT: <ul style="list-style-type: none"> • 3 configurable side keys • Vibra call • Bluetooth interface • USB Interface • micro-SD card interface • Power battery (optional)
 Mitel 632 DECT Phone  Mitel 650 DECT Phone		Mitel 632 DECT: <ul style="list-style-type: none"> • Complies with industry standard (IP65) • With emergency button and sensor alarms, suitable for personal protection Mitel 650 DECT: <ul style="list-style-type: none"> • Supports the DECT standard CAT-iq (Cordless Advanced Technology – internet and quality) for high-quality broadband telephony (can be used with Mitel SIP-DECT only).

Note:

The Mitel 610 DECT, Mitel 620 DECT, Mitel 630 DECT, Office 135/135pro and Office 160pro/Safeguard/ATEX cordless system phones are supported as before (not all system features can be used).

Tab. 8 Analogue Mitel phones

Product	Principal common features	Additional model-specific features
 Mitel 6710 Analogue Phone	<ul style="list-style-type: none"> • Destination dialling keys • Frequency dialling or pulse dialling • Handsfree • Adjustable volume (handset and loudspeaker) • System features can be used via function codes • Headset connection • Wall mounting possible • Functions controllable via communication server: Message display on/off, delete redial key memory. • Ideally suited for hospitality and hotel environments 	Mitel 6730 Analogue: <ul style="list-style-type: none"> • Three-line display • 100 phone book contacts • 50 entries each on call list and redial list • Number/name display for incoming calls • Clock with wake-up function • Functions controllable via communication server: Delete call lists and local phone book, set date, time and language.
 Mitel 6730 Analogue Phone		

Note:

The Aastra 1910 and Aastra 1930 analogue phones are still supported.

2.5 Various phones, terminals and equipment

Thanks to the use of international standards other clients, terminals and phones, Mitel and third-party, can be connected and operated on the communication server:

- SIP-based phones
With the integrated SIP protocol SIP-based phones (softphones, hardphones) - or via an SIP access point also WLAN and DECT phones - can be connected to the communication server. Besides the basic telephony functions, features such as call transfer, conference calls or CLIP/CLIR are also supported. Function codes can also be used to operate various system functions.
- Cordless phones
The sturdy 9d DECT phones from the Ascom Wireless Solutions product portfolio can be logged on to the communication server as system phones. User-friendly messaging and alarm systems can thus be implemented in combination with the IMS (Integrated Message Server). Other DECT phones can also be operated in GAP mode.
- Analogue terminals
All terminals (phones, fax, modem, etc.) approved by the network operator can be connected on the analogue terminal interfaces. The communication system supports pulse and frequency dialling modes.
- ISDN terminals
ISDN terminals that comply with the Euro ISDN standard can be connected to the BRI-S terminal interfaces. The communication system provides a series of ISDN features at the S bus.
- Mobile/external phones
Mobile/external phones can also be integrated into the communication system. They can then be reached under an internal call number, and their status is monitored and displayed. Internal/external calls can be made via the integrated mobile/external phone; system functions can also be executed using function codes. With the Mitel Mobile Client for mobile phones application all the main telephony functions are available with menu prompting (see "Mitel Applications", page 26).

2.6 Solutions

- **Alarming and Health care**
Thanks to the components Mitel Alarm Server, I/O-Gateway and the OpenCount application, flexible solutions are available for hospitals and old people's nursing homes. MiVoice Office 400 communication-server-integrated functions such as "Direct response" "Hotline alarm" or "PIN telephony" allow easy deployment of available features.
- **Hospitality/Hotel**
The hospitality software package provides functions to implement a user-friendly accommodation and hotel solution in the range of 4 to 600 rooms. This solution is also ideally suited for the management of care homes and retirement homes. The functions are operated using the MiVoice 5380 / 5380 IP reception phone or the web-based Mitel 400 Hospitality Manager application. Connection to a Property Management System (PMS) via the communication server's Ethernet interface is also possible. The commercially available FIAS protocol is provided for this purpose.
- **Mobility**
Mobility solutions, especially Mitel Mobile Client (MMC), enable employees to log on to the company network using their mobile phones. The MMCC Compact and MMCC 130 controllers allow mobile users to move back and forth between the internal WLAN coverage and the mobile radio network without the call being interrupted. Moreover, with Mitel SIP-DECT and Mitel 600 DECT series phones comprehensive solutions can be provided for wireless telephony on IP-based networks. In so doing, RFP radio units are directly connected to the LAN like a VoIP device.

2.7 Applications and application interfaces

A distinction is made among applications between Mitel-specific applications and certified applications supplied by third parties.

The Mitel application Mitel Open Interfaces Platform (OIP), as well as the certified third-party applications, are installed on a customer server. They communicate with the communication server via standardised interfaces (see "[Application interfaces](#)", page 29).

Auxiliary applications for planning and the configuration and park management are available as a web application.

2. 7. 1 Mitel Applications

Tab. 9 Mitel applications

Application	Main features
Mitel Dialer	<ul style="list-style-type: none"> • Simple first party CTI application • Dial, answer, hang up • Integration in Outlook, Lync 2013 and Office 365 • Search in directories • Compatibility with MiVoice 5300, MiVoice 5300 IP, Mitel 6700 SIP / 6800 SIP, Mitel 600 DECT series phones • Installation via SSP or WebAdmin
Mitel Open Interfaces Platform (OIP)	<ul style="list-style-type: none"> • Application interface for deep integration of applications by Mitel or other manufacturers (see "Application interfaces", page 29) • Easy to manage through an integrated web-based application • Integrates the MiVoice 1560 PC Operator and Mitel OfficeSuite applications • Presence-controlled communication coupled with Outlook diary entries • Integration of contact databases and directories (Outlook, Exchange, Active Directory, LDAP directories, phone book CD) • Integration of building automation equipment and alarm systems • Call centre functions with flexible routing algorithms, skill-based agent groups and emergency routing • Unified messaging with notification whenever new voice messages are received via email (incl. message attachment) • Partner program for integrating and certifying applications by other manufacturers • Also available as OIP Virtual Appliance, for installation on a VMware server.
Mitel MiCollab	<p>Comprehensive Unified Communications and Collaboration solution:</p> <ul style="list-style-type: none"> • Central software provided for industry standard servers or virtual environments • Integration of Microsoft® Outlook®, IBM® Lotus Notes® Google®, Microsoft® Lync® etc. <p>UC clients for desktop, web and mobile applications:</p> <ul style="list-style-type: none"> • Comprehensive real-time presence information • Dynamic call distribution • Real collaboration with joint use of the desktop and documents • Easy retrieval of voice messages • Secure instant messaging (IM) and data transmission • Audio, web and video conferences
Mitel 400 CCS	<ul style="list-style-type: none"> • Mitel 400 CCS is an additional application for the Mitel 400 Call Center, and provides statistics / reporting functions and agent monitoring (CCS = call centre supervision). The licensing of the application is made via OIP.
Mitel OpenCount	<ul style="list-style-type: none"> • MitelOpenCount is a software package used for the call logging management on the communication system. It consists for selected sectors of basic, comfort and premium solutions and is installed on an external server.

Application	Main features
Mitel BusinessCTI	<ul style="list-style-type: none"> • Powerful Unified Communications solution • Presence management with calendar integration • Instant Messaging (chat), video, SMS and e-mail functions • Compatibility with the federation between Mitel Business CTI servers and/or Microsoft Lync and OCS • Easy integration into CRM and ERP systems • Compatible with other call managers • Clients for PC (Windows, Mac) and mobile phones/tablets (Android/iOS) available • Optional additional modules Mitel BusinessCTI Analytics
MiContact Center Business	<ul style="list-style-type: none"> • Contact Center on a location with up to 80 agents • Progress reports • Real-time monitoring • Dynamic agents and wait loop control • Screen pop • Intelligent Messaging • Multimedia compatibility
Mitel Border Gateway (MBG)	<ul style="list-style-type: none"> • Highly scalable solution which offers mobile and external workers secure and seamless access to the company's voice and data applications, regardless of their location.
Mitel Alarm Server	<ul style="list-style-type: none"> • Specially designed for use in hospitals and nursing homes, industries and businesses as well as public domains. • Mitel Alarm Server monitors processes, activates the required services, sets off alarms based on predefined samples or notifies selected recipients via paging, e-mail, SMS or voice message. • The alarm can be set off via a nurse call or fire-alarm system (ESPA interface), via a key predefined on the Mitel DECT or system phone, an alert button, web client, or by calling the alarm server (audio guide), or via e-mail (subject line analysis).

Tab. 10 Planning and configuration applications

Application	Main features
Mitel CPQ	<ul style="list-style-type: none"> • Web-based planning application for Mitel communication platforms (CPQ = Configuring Planning Quoting) • Uses project data to calculate the necessary communication server complete with terminals, interface cards, modules and licences • Country-specific adaptations possible for accessories • Stored price lists and configurable quote compilation • No installation necessary
WebAdmin	<ul style="list-style-type: none"> • Web-based configuration tool for configuring and monitoring a single system or an entire network (AIN) • Access control with user accounts and predefined authorization profiles • Special accesses for hospitality solutions • Integrated online help and configuration assistant • Integrated in the communication server software package

Application	Main features
Mitel 400 Hospitality Manager	<ul style="list-style-type: none">• Integrated web-based application used to operate functions in the hospitality sector• List view and floor-by-floor view of the rooms• Functions such as check-in, check-out, group check-in, notification, wake-up call, retrieval of call charges, maintenance list, etc.
Self Service Portal (SSP)	<p>Web-based application for end-users, which allows personalised configuration of a telephone:</p> <ul style="list-style-type: none">• Functions key assignment and printing of labels• Setting the idle text and language• Setting the presence profiles, personal call routing, voice mail, forwarding, etc.• Setting up dial-in conference rooms• Creating private phone book contacts• Managing personal data such as e-mail address, password, PIN, etc.
Secure IP Remote Management (SRM)	<ul style="list-style-type: none">• Server-based solution for secure IP remote management• No router and firewall configuration or VPN connection setup required• Allows configuration via WebAdmin once the connection has been set up• No installation necessary

2. 7. 2 Application interfaces

The most important interface for own and third-party applications is the interface of the Mitel Open Interfaces Platform (OIP). This open interface allows the applications to be deeply integrated with telephony. Third-party applications can also be integrated on MiVoice Office 400 series systems via different interfaces without OIP.

2. 7. 2. 1 Mitel Open Interfaces Platform

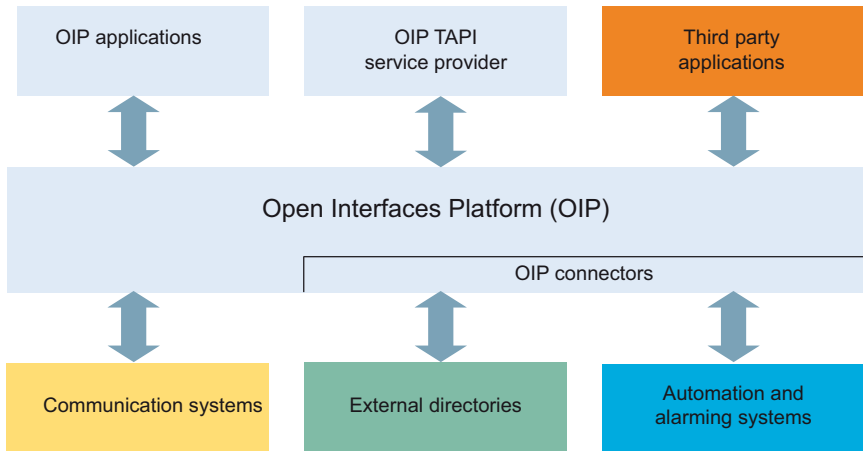


Fig. 3 OIP as middleware between communications system, external data sources and applications

OIP services

The OIP services are the central components of OIP. They are used to control the system and make the OIP features and interfaces available. Thanks to the modular organisation and vast configuration possibilities, versatile and customer-specific solutions can be set up.

OIP applications

Sophisticated Softphones are available as OIP applications and are controlled as clients via OIP.

- Mitel OfficeSuite is a rich-client application, which significantly broadens the range of functions of the coupled fixed and cordless phones.
- MiVoice 1560 PC Operator is an operator application which can be used as rich-client application together with a fixed or cordless phone or alone as Softphone.

Possible OIP application fields are listed in the following sections:

OIP as directory server

Already available directories, databases and phone books are linked to OIP and made useful for name dialling and identification.

Integration is compatible with many standard databases such as Microsoft Exchange, Microsoft Outlook, Microsoft Active Directory, communication server directories, LDAP and ODBC directories and electronic phone books.

Moreover, Microsoft Exchange directories can be directly synchronised.

Unified Communications - OIP as telephony server

When OIP is used as telephony server, telephony integrates in a scalable manner into IT communication: Top-class Softphones, PC-operated fixed and cordless phones, presence-controlled call, voice mail control and calendar coupling via presence profiles, name dialling and call number identification via all linked company directories, synchronisation of Microsoft Exchange contacts, e-mail notifications, etc. facilitate daily communication.

OIP as operator centre

Several multi-functional operator applications can be organised with call centre functions in operator groups.

OIP as Free Seating Server

OIP supports and expands the MiVoice Office 400 free seating function: A user logs on at a free seating workstation and the phone automatically takes over his call number and device configuration.

OIP as call center

The powerful Mitel 400 Call Center is an integral part of OIP and provides all the main features such as flexible routing algorithms (cyclical, linear, longest time available, CLIP-based, last agent), skill-based agent groups as well as an analysis of the call centre data (online and offline) with chart-based evaluation. In the event of a network interruption the emergency routing ensures the maximum availability of the system.

The agent functionality is available on all system phones including Softphones. This applies equally to home workstations and to all the users on a Mitel Advanced Intelligent Network. The one number user concept can also be set up for agents, which provides the staff of a Call Center with maximum mobility within the company.

The Mitel 400 Call Center is easy to manage and configure thanks to OIP WebAdmin. Various monitoring functions, simple statistical evaluations and work group control can be comfortably implemented using the administration interface.

Mitel 400 CCS is an extension of the Mitel 400 Call Center and offers several possibilities of statistically evaluating the call centre operation. Offline and online reports enable the call center operator to analyse and optimise call centre operations.

OIP as application interface

Certified third-party manufacturers can, for instance, integrate sector-specific applications into the MiVoice Office 400 and OpenCom communication environment.

OIP as automaton and alarm system

External alarm systems and building automation equipment (e.g. KNX) are easily monitored through the connection to the communication system. This allows information to be exchanged in a simple way between the systems. In this way the user can use his system phone for voice communications and for monitoring external systems.

The I/O service offers a wide range of features which allows very flexible uses and versatile applications. Some of its examples are listed below:

- Alarming equipment for maintenance personnel
- Monitoring of production processes
- Forwarding messages as e-mails
- Connection to building automation systems (KNX)

With the graphical interface (tree structure) events and the relevant actions are easily linked with one another.

OIP in a networked environment

An OIP server can also be used in an AIN. To do so, it will be linked to the Master. In addition, several communication systems can also be connected to an OIP server. It is then possible for instance to obtain network-wide call logging for all the systems, to display call charge information on the system phones or to display status in the presence indicator field of a PC operator console for all the users connected.



See also:

More information can be found in the Mitel Open Interfaces Platform system manual and in the OIP WebAdminOnline help.

2. 7. 2. 2 Message and alarm systems

MiVoice Office 400 supports several message formats and message protocols for implementing messaging, monitoring and alarm systems.

Internal messaging system for system phones

The internal messaging system for system terminals allows users to exchange predefined or user-defined text messages between system phones. Text messages can also be sent to individual users or message groups.

The internal messaging system does not have an interface with which it can be addressed directly. However it can also be operated via OIP.

External messaging, monitoring and alarm systems

The powerful ATAS/ATASpro protocol is available via the communication server's Ethernet interface for applications in the security and alarming sector. This protocol can be used to implement customised alarm applications. An alarm appears on the display of system phones, complete with the freely definable user functions that apply only to that alarm. In addition the duration of the tone as well as its volume and melody can be freely defined by the user for each alarm.

The Mitel Alarm Server is a flexible solution which can be used in all sectors to process and record alarms. It can be used, for instance, in old people's nursing homes and assisted-living homes, as well as in other different facilities such as hotels, industrial plants, shopping centres, schools or administrations. When used together with Mitel SIP-DECT it is even possible to dynamically determine the environment of the alarm solution using the location feature provided by the DECT system.

The cordless DECT phone Mitel 630 DECT is specially designed for applications in the security and alarming sector. Besides a special alarm button it also features a man-down alarm, a no-movement alarm and an escape alarm. Sensors inside the phone constantly check the handset's position and motion. An alarm is triggered if the phone remains in a virtually horizontal position or motionless for some time or if the handset is shaken violently.

2. 7. 2. 3 CTI - Computer Telephony Integration

The Computer Telephony Integration (CTI) integrates telephony services in the company process. Besides conventional telephony features Mitel Open Interfaces Platform (OIP) offers many other convenient functions, which supports the employees with their daily work, for instance:

- Dialling by name for outgoing calls and CLIP display for incoming calls offers an added value by the integration of external directories and databases.
- Notification of Microsoft Outlook appointments on the system phones

- Presence-controlled communications with Busy Indicator
- Automatic Call Distribution
- Access to system configuration, what a maximum integration of different systems ensures

And of course the communication system supports also First and Third-Party CTI interfaces for commercial CTI applications based on the Microsoft TAPI 2.1 standard.

Terminal supervision/control on the communication server by third-party applications via the CSTA protocol is also supported.

First-party CTI

A first-party CTI is the direct physical connection between a phone terminal and a telephony Client (workstation PC). Telephony functions and telephone states are controlled and monitored on the telephony Client. A first-party CTI solution is ideal for a small number of CTI workstations and is easily implemented.

MiVoice Office 400 supports First-Party CTI on all system phones via the Ethernet interface. For this purpose the First-Party TAPI Service Provider (AIF-TSP) is required.

For first-party CTI applications which use the CSTA protocol (for instance Mitel Dialer), the ECSTA driver (Mitel CSTA-to-TAPI Link) is required.

Application example

- Dialling from a database (phone book CD, etc.)
- Caller identification (CLIP)
- Creating a call journal
- Mitel Dialer (see Tab. 9, página 26)

Third-party CTI

Third-party CTI is an user-friendly multi-station solution. In contrast to first-party CTI, third-party CTI controls and monitors several system phones (including cordless phones) via the central telephony server, which is connected with the communication server. In addition phones on ISDN and analogue interfaces can also be monitored. PC and phone allocation is handled by the telephony server.

The third-party CTI connection is effected via Ethernet using the Mitel Open Interfaces Platform (OIP). To this end the OIP is installed on the telephony server. Third-party connections via Ethernet with CSTA are also possible.

Application example

- Busy indicator
- Group functionality
- Networked CTI solution
- Automatic Call Distribution (ACD)

2. 7. 2. 4 ISDN interface

MiVoice Office 400 supports the ISDN protocols ETSI, DSS1 and QSIG. Besides the possibility of networking various systems into a PISN (Private Integrated Services Network) via the ISDN interface, these protocols also provide various functions that can be used for connecting external applications (e.g. IVR systems, fax server, voice mail systems, unified messaging systems, DECT radio systems).

A gateway (Mitel 415, Mitel 430 or Mitel 470) is required to use the ISDN interface.

2. 7. 2. 5 Configuration

The MiVoice Office 400 communication server is configured via the web-based WebAdmin application. Other components of the application include special accesses for hospitality and hotel solutions as well as a configuration wizard.

2. 7. 2. 6 System monitoring

The system status is monitored with event messages which can be sent to various internal or external destinations. Examples of message destinations are: system phones, events log (WebAdmin), e-mail recipients, SRM servers, alarm servers (ATAS) or SNMP destination. Event messages are also accessible via the Mitel Open Interfaces Platform for application manufacturers.

2. 7. 2. 7 Call logging

The Call Logging Manager includes data acquisition for incoming traffic (ICL), outgoing traffic (OCL) and the counting of the acquired call charges according to a variety of criteria. The data can be retrieved via different interfaces and subsequently processed.

2. 7. 2. 8 Hospitality/Hotel

The MiVoice Office 400 communication servers offer you several possibilities to implement a hospitality and hotel solution, with different operation applications and interfaces. Configuration is via WebAdmin. The MiVoice 5380 / 5380 IP reception phone or

the web-based Mitel 400 Hospitality Manager application is available to operate the functions. A connection to a Property Management System (PMS) via the communication server's Ethernet interface is also possible. The commercially available FIAS protocol is provided for this purpose.

2. 7. 2. 9 Voice over IP

MiVoice Office 400 is a native VoIP solution. Apart from the possibility to operate IP system phones and SIP phones via the Ethernet interface, MiVoice Office 400 systems can also be networked over IP.

2. 8 First steps...

If you are setting up an MiVoice Office 400 communication system for the first time, it may be useful to set up a test system step by step on site. We have provided you with a "getting started package" for this.

Getting-started package

The getting-started package contains a beginner's guide for learning how to set up a MiVoice Office 400 communication server, a Mitel CPQ configuration file and the search and help tool System Search (not available for Virtual Appliance). The getting-started package is available for downloading via the following hyperlinks:

Tab. 11 Getting started

Communication server	English	English
Getting-started package Mitel 415/430	syd-0599	syd-0600
Getting-started package Mitel 470	syd-0604	syd-0605
Getting-started package Virtual Appliance	syd-0630	syd-0631

2. 9 Connection options

MiVoice Office 400 Virtual Appliance is a software-based, hardware-independent communication server. It can also be operated in an AIN with one or more satellites. The Mitel 415/430 and Mitel 470 system manuals respectively contain a diagram of all interfaces with possible terminal equipment.

3 Expansion Stages and System Capacity

Since the Virtual Appliance communication server does not contain any hardware, the expansion possibilities are limited to licensed features and external equipment. The expansion of the connected satellites with interface cards and system modules is described in the Mitel 415/430 and Mitel 470 system manuals. However, the system capacity of Virtual Appliance differs from the other communication servers and is described here.

3.1 System capacity

The system capacity of Virtual Appliance is defined by the limits set in the software and the capacity of the integrated Mitel Media Server. The software limits can be partly expandable by licences.

3.1.1 Media resources

Media resources are used for complex signal processing functions. They provide functions for conference circuits, DTMF sender and receiver, compression of voice data, etc. For Virtual Appliance, the media resources of the integrated Mitel Media Server are provided.

Functions of the integrated Mitel Media Server

The table below gives an overview of the Mitel Media Server functions. The functions can all be of the same type or used as a mix. Some of these functions are subject to a licence.

Tab. 12 Functions of the integrated Mitel Media Server

Max. number of simultaneous ...	Virtual Appliance
Total circuits for the functions three-party conference, six-party conference, intrusion and silent intrusion	10
switches in total for all audio services (voice mail, auto attendant, announcement service, music on hold, call recording, announcement with audio file, queue with announcement, conference bridge), for conferences, intrusion and silent intrusion, mobile and external phone integration as well as for each point-to-point connection (exchange to terminal, terminal to terminal). Two channels are required for DTP relay (indirect switching).	250 ¹⁾
Total number of switches for the functions Call waiting, DTMF sender and DTMF receiver	400
Dial tone receiver, busy tone receiver, call signal receiver, FSK sender and FSK receiver, CAS sender/receiver	2)

1) For the number of switches per function (channels), see "Tab. 13 General system capacity".

2) The resources are provided by the connected satellites.

3. 1. 2 General system capacity

Tab. 13 General system capacity

Max. number...	Virtual Appliance Individual systems or AIN with Virtual Appliance as Master
Nodes in a transparent network (AIN)	50
Nodes with SIP networking	100
Users ¹⁾	1200
Terminals per user ²⁾	16
Simultaneous connections	
• Without IP and without DECT (internal / external)	250
• IP – not IP (internal / external)	250
• IP – IP (internal)	250
• IP – IP via SIP access channels (external)	240
• DECT – not DECT (internal / external)	250
• DECT – DECT (internal)	250
• MiCollab - connections	80
VoIP voice channels G.711 / G.729 (Mitel Media Server) ³⁾	250 / 50
Audio channels, call recording	8 per node ⁴⁾
Audio channels for voice mail	16 pro node (max. 250)
Audio channels for voice mail and call recording, total	16 pro node (max. 250)
Audio channels for auto attendant	46 pro node (max. 250)
Total audio channels ⁵⁾	46 pro node (max. 250)
Voice channels FoIP, T.38 (standard media switch)	on satellites only
Voice channels FoIP, T.38 (IP media switch)	on satellites only
CAS transmitter/receiver for PRI network interfaces ⁶⁾	on satellites only
Configurable conference bridge	60
Active conferences	see Tab. 12
Trunk group	506
Trunk groups in route	8
Network interfaces per trunk group	64
Routes	212 ⁷⁾
B channel groups	506
SIP provider	10
SIP user account	1200
Direct dialling plans	10
Total DDI numbers	4000
Call distribution elements	4000
Queue with announcement	16
User groups	99
Members per trunk group "normal"	16

Expansion Stages and System Capacity

Max. number...	Virtual Appliance Individual systems or AIN with Virtual Appliance as Master
Members per trunk group "large"	1200
Abbreviated dialling numbers + PISN users	4000
Line keys per key telephone (except Mitel 6700 SIP / 6800 SIP)	39
Line keys per key telephone on Mitel 6700 SIP / 6800 SIP	2...12 ⁸⁾
Line keys per CDE on Mitel 6700 SIP / 6800 SIP	16 ⁹⁾
Total line keys on Mitel 6700 SIP / 6800 SIP	see ¹⁰⁾
Switch groups	50
Positions per switch group	3
Hotline destinations	20
Emergency destinations	50
Emergency numbers	10
Allocations of external call numbers to internal call numbers	1500
External digit barring	16
Internal digit barring	16
Predefined text messages	16
Announcement / message groups	50
User per announcement / message group	16
Data service tables	32
User accounts for user access control	25
Authorization profiles for user accounts	25
Log entries per user account	20
First-party CTI users via LAN	32
First-party CTI users via Mitel Dialer	1200
Third-party CTI interfaces	1
Third-Party CTI interface (Basic, Standard)	600
Groups, Agents (OIP Call centre)	150
Agents (MiContact Center Business)	80
Mailboxes with Basic or Enterprise voice mail system	1200
Greetings per mailbox	3
Profiles per mailbox for auto attendant	3
Backup communication servers for Dual Homing	50
Primary communication servers for Dual Homing	50
Blacklist	1
Call number entries in the blacklist	3000
Number of CLIP based routing tables	20
Total call number entries in call distribution tables	1000
Call data memory internal (number of records) ¹¹⁾	1000
Private contacts	12000

Max. number...	Virtual Appliance Individual systems or AIN with Virtual Appliance as Master
Call list entries for each of the 3 call lists per phone	30
Total call list entries	60000
Busy lamp field keys on Mitel SIP phones in total	4000
Busy lamp field keys per Mitel SIP phone	50
Same users on busy lamp field keys on Mitel SIP phones	25
Configured keys	12000
Expansion key modules on DSI terminals	400
Expansion key modules on IP system phones	400
Expansion key modules Mitel M670, Mitel M675, Mitel M680, Mitel M685	600
Alpha keyboard Mitel K680	600
Alpha keyboard (AKB)	400

- 1) Each user requires a licence.
- 2) Only 1 operator console, 1 , 1 MiVoice 2380 IP , 1 Mitel BluStar for PC, 1 Mitel SIP-DECT and 2 DECT- cordless phones are possible for each user.
- 3) Applies also to Secure VoIP modes
- 4) For IP-IP connections maximum 8
- 5) Audio channels can be used for voice mail, auto attendant, queue with announcement, call recording, announcement with audio file, or conference bridge. Announcement service and music on hold use their own resources.
- 6) Of relevance only to certain countries such as Brazil
- 7) 12 of them are masked (not configurable)
- 8) Depending on the phone type
- 9) The value applies to CDE with destination KT line. With multiple destinations (User + KT or KT + UG) the value is reduced to 8.
- 10) Depending on the highest number of line keys, configured for the same line. The following pairs apply (line keys per line / total line keys): (16/48), (14/56), (12/72), (10/100), (8/160), (6/240), (4/320), (2/400).
- 11) The call data memory is only used if the output destination is blocked (e.g. printer jam).

3.1.3 Terminals

Tab. 14 Maximum number of terminals per system and interface

Interface	Terminal type	Terminal	Virtual Appliance Individual systems	per AIN with Virtual Appliance as Master	per interface
Miscellaneous	Terminals (including virtual terminals and integrated mobile/external phones)		2400	2400	
Miscellaneous	Terminals (excluding virtual terminals and integrated mobile/external phones)		2400	2400	
DSI-AD2	Terminals on DSI-AD2 interfaces (total)		–	1200	

Expansion Stages and System Capacity

Inter-face	Terminal type	Terminal	Virtual Appliance Individual sys-tems	per AIN with Virtual Appli-ance as Master	per inter-face
DSI-AD2	Digital system phones	MiVoice 5360 MiVoice 5361 MiVoice 5370 MiVoice 5380 Office 10 Office 25 Office 35 Office 45	–	1200	2
DSI-AD2	Operator consoles / operator applications	MiVoice 5380 MiVoice 1560 Office 45	–	32	2
DSI-AD2	Cordless system	SB-4+ radio unit	–	255 ¹⁾	1
DSI-AD2	Cordless system	SB-8 / SB-8ANT radio units	–	255 ¹⁾	2)
DSI-DASL	Digital system phones	Dialog 4220 Dialog 4222 Dialog 4223	–	1200	1
DECT	Cordless phones	Mitel 610/612 DECT Mitel 620/622 DECT Mitel 630/632 DECT Mitel 650 DECT Office 135 Office 160 GAP terminals	–	1200	
LAN	Terminals on LAN interfaces (total)		2400	2400	
LAN	DHCP clients on the internal DHCP server		400	400	
LAN	IP terminals	MiVoice 2380 IP MiVoice 5360 IP MiVoice 5361 IP MiVoice 5370 IP MiVoice 5380 IP	1200	1200	
LAN	IP operator consoles / IP operator applications	MiVoice 5380 IP MiVoice 1560	32	32	
LAN	Mitel SIP terminals	Mitel 6863 SIP Mitel 6865 SIP Mitel 6867 SIP Mitel 6869 SIP Mitel 6873 SIP Mitel 6730 SIP Mitel 6731 SIP Mitel 6735 SIP Mitel 6737 SIP Mitel 6739 SIP Mitel 6753 SIP Mitel 6755 SIP Mitel 6757 SIP	2400	2400	

Interface	Terminal type	Terminal	Virtual Appliance Individual systems	per AIN with Virtual Appliance as Master	per interface
LAN	Mitel SIP-DECT Cordless phones		2400	2400	
LAN	Standard SIP terminals		1200	1200	
LAN	Mitel BluStar Softphones		1200	1200	
LAN	Mitel Mobile Client Controller		10	10	
–	Virtual terminals		1200	1200	
–	Integrated mobile/external phones		1200	1200	
–	Integrated mobile phones with MMC		800	800	
–	Integrated mobile phones per MMCC Compact		50	50	
–	Integrated mobile phones per MMCC 130		250	250	
BRI-S	Terminals on DSI-S interfaces (total)		–	512	8 ³⁾
BRI-S	Terminals as per ETSI standard <ul style="list-style-type: none"> • ISDN terminals • ISDN PC cards • ISDN LAN routers • ISDN Terminal Adapters 		–	512	
FXS	Terminals on FXS interfaces (total)		–	1200	1
FXS	Analogue, nationally approved terminals <ul style="list-style-type: none"> • Pulse dialling (PUL) • Frequency dialling (DTMF) • Radio units for cordless phones • Door intercoms with DTMF control functions • Group 3 fax machines⁴⁾ • Answering machines • Modems 		–	1200	
FXS	External audio equipment with line output		–	1 per node	
FXS	External equipment can be switched via control outputs		–	1200	
FXS	External switches for controlling internal switch groups via control inputs		–	1200	
FXS	General bell		–	1 per node	

1) Maximum 64 radio units per location area

2) Operation on 2 DSI interfaces in each case

3) Maximum of 2 simultaneous call connections.

4) Transmission with the T.38 protocol is recommended for Fax over IP. The corresponding media resources need to be allocated.

3.1.4 Terminal and network interfaces

Tab. 15 Terminal and network interfaces

Max. number...	Virtual Appliance Individual systems	AIN with Virtual Appliance as Master
Ethernet interfaces	1	per node
Network interfaces, total (FXO, BRI-T, PRI, BRI-Sext.)	–	288
Terminal interfaces, total (DSI, FXS, BRI-S)	–	1200
DSI terminal interfaces	–	1200
Analogue terminal interfaces FXS	–	1200
BRI-S terminal interfaces	–	224
Analogue network interfaces FXO	–	64
Basic rate interfaces BRI-T	–	256
Basic accesses BRI-S ext.	–	256
Primary rate interfaces PRI	–	32 ¹⁾
SIP access	10	10
SIP access channels ²⁾	240	240

1) 30 B channels per PRI network interface, of which 10 B channels each can be used without licence.

2) Licences required

3.1.5 Software assurance

Software Assurance (SWA) is Mitel's comprehensive support offer which gives access to new software releases, support services and SRM remote access to the communication server.

The software assurance agreement has a fixed runtime and defines the number of authorised users on the communication system. You can see at a glance whether a valid (active) SWA is available for the communication server, via the SWA state in the WebAdmin title bar.

The SWA state is retrieved via an encrypted direct link on the licence server. If there is no connection to the licence server, the last known state is displayed

The number of users covered via SWA and the number of configured users can be seen in the [System information](#) (**Q =1v**) view. SWA becomes invalid if the number of configured users exceeds the number of users covered via SWA . Each entry in the [User](#) category counts as configured user in the numbering plan (**Q =g4**).

3. 1. 6 Licences

Use of the call manager software requires a licence. Additional licences are required in order to use a number of enhanced functions and protocols, to enable voice channels or to operate certain terminals. The Mitel CPQ application automatically plans the necessary licences, which are then enabled on the communication server using a licence code.

The licence code (LIC) contains all the enabled licences. When you purchase a new licence from your authorised dealer, you obtain a new licence code in return. Enter this in WebAdmin and store it in the communication server in the [Licences \(Q=q9\)](#) view.



Notes:

- A licence code is not transferable to another communication server.
- If you receive a voucher instead of a licence code, log on with your partner login at Mitel Connect <https://connect.mitel.com> and generate the licence code yourself using the EID number. Detailed instructions about this can be found in the WebAdmin help on the [Licences \(Q=q9\)](#) view.

3. 1. 6. 1 Description of available licences

Software

- [Software Release](#)

Updating to a new software release requires a licence. A valid software assurance (SWA) entitles you to upgrade the communication server to a new software level for a specific period., and to operate it with a specific number of users.

A valid software assurance is the prerequisite for being able to acquire an update licence ([Software Release](#) licence) for a particular software version. Without a valid [Software Release](#) licence you can update the communication server to a new software level, but after four hours of operating time it will switch over to the restricted operating mode (see "[Restricted operating mode](#)", [page 52](#)). The communication server will switch back to normal operation as soon as you enter a licence code that comprises the [Software Release](#) licence. You do not need to restart the communication server.



Note:

The purchase of a new communication server also includes a software assurance for a specific period. Log on with your partner login to Mitel Connect <https://connect.mitel.com> and obtain a new licence code using the EID number and the voucher. The licence code issued as a result contains the appropriate [Software Release](#) licence (and any other licences you may have acquired). You can now activate the communication system with this licence code. Detailed instructions about this can be found in the WebAdmin help on the [Licences \(Q=q9\)](#) view.



Mitel Advanced Intelligent Network

In an AIN, a valid [Software Release](#) licence must be available on the master only. Exception: For long-term offline mode, for operation with Secure VoIP and use as backup communication server, the satellite must also have a valid [Software Release](#) licence.

- Behaviour of satellites in online mode:
Although satellites must also have a release licence, they must not necessarily match the current software status. If satellites do not have any release licence, they restart every four hours.
- Behaviour of satellites in offline mode:
Satellites with an incorrect release licence change over to restricted operating mode after thirty-six hours. Satellites without any release licence change over to restricted operating mode after four hours.

Users

- User
Virtual Appliance requires a basic [Base licence Virtual Appliance](#) licence (see [page 48](#)) and a [User](#) licence for each user. The licences also contain the [Base Mitel AIN](#) licences and 49 [Mitel AIN Satellites](#) licences for setting up a Mitel Advanced Intelligent Network (AIN).
- [Basic User](#) (licence bundle)
This licence bundle contains a user licence for Virtual Appliance ([User](#)) as well as any phone licence, and is explicitly assigned to a user. This allows the user to change the phone type without having to change the licensing.
- The following three UCC licence bundles contain any eight phone licences, video licences for all phones licensed together, ten [SIP Terminals](#) licences and ten Virtual Appliance ([User](#)) licences for MiCollab AWW, the [Enterprise Voice Mail](#) licence and activates MiCollab functions for the corresponding MiCollab role. With a specific number of UCC licence bundles more user licences for Virtual Appliance ([User](#)), terminal licences ([SIP Terminals](#)) as well as voice mail licences ([Enterprise Voice Mail Channels](#)) are added.
 - [Entry UCC User](#)
This licence bundle contains the licences described in the above section and activates MiCollab functions for the MiCollab role [UCC Entry](#). The licence is explicitly assigned to a user.
 - [Standard UCC User](#)
This licence bundle contains the licences described in the above section and activates MiCollab functions for the MiCollab role [UCC Standard](#). The licence is explicitly assigned to a user.
 - [Premium UCC User](#)
This licence bundle contains the licences described in the above section and activates MiCollab functions for the MiCollab role [UCC Premium](#). The licence is explicitly assigned to a user.

Terminals

- **MiVoice 2380 IP Softphones**

One licence per terminal is required to operate the IP softphones MiVoice 2380 IP. The licences are needed to register the terminals on the system.

- **MiVoice 5300 IP Phones**

One licence per terminal is required to operate the IP system phones MiVoice 5360 IP, MiVoice 5361 IP, MiVoice 5370 IP and MiVoice 5380 IP. The licences are needed to register the terminals on the system. If the required licences are missing, the relevant event message is output on the system. The licences can also be used if the **Mitel SIP Terminals** licences are missing (but not the other way round).

- **Mitel SIP Terminals**

To operate Mitel SIP terminals of the Mitel 6700 SIP / 6800 SIP series, for , for cordless terminals logged on via Mitel SIP-DECT or Mitel SIP WLAN base stations, one licence is required per terminal or user. The licences are needed when registering the terminals or the user on the system. If the licences are missing, Mitel SIP terminals can also be operated with **SIP Terminals** or **MiVoice 5300 IP Phones** licences (but not the other way round).

- **Mitel Dialog 4200 Phones**

One licence per phone is required to operate Dialog 4220, Dialog 4222 and Dialog 4223 digital phones. The licences are needed to register the phones on the system.

Note: Dialogue phones can be connected to Mitel 470 only.

- **Mobile or External Phone Extension**

With this licence it is possible to integrate mobile phones or other external phones into the communication system. One licence has to be purchased for each phone.



Note:

This licence does **not** allow comfortable integration with the Mitel Mobile Client application.

- **MMC Extension**

With this licence mobile phones can be integrated into the communication system together with an Mitel Mobile Client Controller and Mitel Mobile Client. The MMC Controller allows mobile users to move back and forth between the internal WLAN coverage and the mobile radio network without the call being interrupted.

- **SIP Terminals**

One licence is required per terminal to operate standard SIP terminals. The licences are needed when registering the terminals on the system and can be used even if **Mitel SIP Terminals** licences are missing (but not the other way round).

- [Video Terminals](#)

To be able to use the video functionality of a standard SIP video terminal you need to acquire a Video Terminals licence in addition to a [SIP Terminals](#) licence.

- [Dual Homing](#)

In the event of failure of the primary communication server or an interruption in the IP connection to the primary communication server, SIP phones in the Mitel 6700 SIP / 6800 SIP series can automatically register on a backup communication server. On the **backup communication server one licence** is required per phone. The licences are needed to register the clients on the system.

BluStar

- [BluStar Softphones](#)

This is a BluStar client licence. One licence per client is required to operate BluStar softphones. The licences are needed to register the clients on the system.

- [BluStar Softphone Video Options](#)

This licence is required for using the video functionality of a BluStar softphone. A BluStar client licence must be in place.

Audio services

- [Conference Bridge](#)

This licence allows the use of a conference bridge. The internal or external conference participants choose a specific call number and are connected with the conference after entering a PIN. One licence is required per system /AIN.

- [Enterprise Voice Mail](#)

If the functionality of the basic voice mail system is insufficient, the voice mail system can be expanded. This licence provides two audio channels for recording or playing back audio data for voice mail, auto attendant or call recording. The licence also increases the voice memory capacity and allows e-mail notification whenever new voice messages are received as well as the forwarding of voice messages and call recording.



Note

Additional audio channels require additional [Audio Record & Play Channels](#) licences. An [Auto Attendant](#) licence is required to use the auto attendant function.

- [Audio Record & Play Channels](#)

This licence enables an additional audio channel for recording or playing back audio data for voice mail, auto attendant or call recording. This licence can only be used in conjunction with the [Enterprise Voice Mail](#) licence.



Mitel Advanced Intelligent Network

In an AIN the Enterprise Voice Mail and Audio Record & Play Channels licences are all acquired for the Master. The number of Audio Record & Play Channels licences determines the maximum number of simultaneously active audio channels, regardless of the nodes on which they are currently being used. Requirement: The media resources on each node must be available and allocated accordingly.

- **Auto Attendant**

This licence enables the use of the auto attendant function and is independent of the Enterprise Voice Mail licence. It means it can also be used in conjunction with basic voice mail. One licence is required per system /AIN.

- **Number in Queue**

This licence is required for using the functionality of "Queue with announcement". The **Auto Attendant** licence is required here. One licence is required per system /AIN.

Features

- **Secure VoIP**

This licence allows encrypted VoIP connections with the aid of SRTP (Secure Real-Time Transport Protocol) and TLS (Transport Layer Security).



Mitel Advanced Intelligent Network

For legal reasons (Trade Control Compliance) in an AIN a **Secure VoIP** licence is required for both the Master and for each satellite.

- **Silent Intrusion**

This licence is needed for the **Silent intrusion** feature, which is similar to the **Intrusion** feature. The difference is that the user intruded upon receives neither a visual nor an acoustic signal of the intrusion. The feature is used mainly in call centres. One licence is required per system /AIN.

- **Analogue Modem**

This licence allows remote maintenance of an Mitel 415/430 using an analogue modem. For this the **Modem** function must be allocated to the mainboard DSP. Transmitting event messages via an analogue modem is also possible.



Mitel Advanced Intelligent Network

In an AIN the licence is always acquired on the Master. The licence allows the remote maintenance of the AIN via any Mitel 415/430 node.

Note: The master node can also be of Mitel 470 or Virtual Appliance type.

Resources

- **Base licence Virtual Appliance**

This basic licence is required for Virtual Appliance, and a **User** licence (see [page 44](#)) for each user. The licences also contain the **Base Mitel AIN** licences and 49 **Mitel AIN Satellites** licences for setting up a Mitel Advanced Intelligent Network (AIN).

- **VoIP Channels for Standard Media Switch**



Note:

This licence is required for Mitel 415/430 and Mitel 470 only. For Virtual Appliance, the VoIP channels of the integrated Mitel Media Server are made available and do not require any licences.

This licence enables the conversion of voice channels for VoIP-non-VoIP connections and is used for IP terminals, SIP terminals, SIP access channels or to operate an Mitel Advanced Intelligent Network. High voice data compression is possible with the G.729 VoIP channels. An additional voice channel is activated with each licence.



Notes:

- If VoIP mode is set to G.711, two G.711 VoIP channels per system can be used without a licence.
- Theoretically there are no VoIP channel licences in a pure VoIP environment (only IP/SIP phones on the system and connection to the public network via an SIP provider). However, as soon as voice mail functions, the announcement service or music on hold is used, VoIP channel licences are required as the use of these functions entails a conversion of the voice data.



Mitel Advanced Intelligent Network

In an AIN the licence can also be used for the connections between the nodes. Two VoIP channel licences are required for each node connection. The licences are always acquired for the Master. The number of licences determines the maximum number of simultaneously active conversions, regardless of the nodes on which they are currently being used. Requirement: The media resources on each node must be available and allocated accordingly.

If Virtual Appliance is used as Master, the VoIP channels of the master node are made available without a licence from the integrated Mitel Media Server. However, for the satellites' VoIP channels, the licences must be purchased.

- **G.729 Codec**

This licence allows the use of a G.729 codec for the voice channel of Mitel SIP phones, IP system phones and SIP network interfaces (also for SIP networking). The licences are always used wherever they are required. Mitel SIP-DECT and standard SIP terminals do not require this licence. Likewise, calls to the emergency number do not require a licence.



Note

If several emergency destinations are defined in a system, the following points need to be considered:

- Sufficient G.729 Codec licences must be available.
- No phone and no SIP network interface is configured exclusively to G.729 Codec.

Networking

- ***B-Channels on PRI Cards***

Ten B-channels can be used without licences for each PRI interface. These channels cannot be transferred to other PRI interfaces. An additional channel is activated with each licence. These licences are in a pool and are used from any PRI interface, if necessary (per call) .



Mitel Advanced Intelligent Network

In an AIN the licence is always acquired on the Master. For each licence an additional B channel is available on a PRI interface of any node, depending on where the B channel is currently being used.

- ***SIP Access Channels***

The connection of the system to a SIP service provider or the networking of the systems via SIP requires one licence per channel.



Mitel Advanced Intelligent Network

In an AIN all the SIP licences are always acquired for the Master. The number of licences determines the maximum number of simultaneously active voice channels, regardless of the nodes on which they are currently being used. Requirement: The media resources on each node must be available and allocated accordingly.

Private networking

- ***QSIG Networking Channels***

These licences are used to implement a private leased-line network with QSIG by enabling a specific number of simultaneously outgoing QSIG channels. Two licence levels are available (see [Tab. 16](#)).

Note: For Virtual Appliance this licence is only relevant to the QSIG networking of an AIN satellite.

- ***Base Mitel AIN / Mitel AIN Satellites***

In a Mitel Advanced Intelligent Network with Virtual Appliance as Master, these licences are part of the Virtual Appliance licences and must not be purchased individually.

Applications

- ***Mitel Dialer***

This licence allows you to use the Mitel Dialer CTI application. The number of licences determines the simultaneously active, user-assigned Mitel Dialer applications.

- ***Hospitality Manager***

This licence allows you to use the Mitel 400 Hospitality Manager. The Mitel 400 Hospitality Manager is a web-based application for receptionists in the hospitality sector. One licence is required per system /AIN.

- [*Hospitality PMS Interface*](#) and [*Hospitality PMS Rooms*](#)

The [*Hospitality PMS Interface*](#) licence is used to connect the communication server to a hotel management system using the FIAS protocol. One licence is required per system /AIN. Moreover, one [*Hospitality PMS Rooms*](#) licence is required per room.

- OpenCount licences

MitelOpenCount is a software package used for the call logging management on the communication system. It consists for selected sectors of basic, comfort and premium solutions and is installed on an external server. The licences are stored in MiVoice Office 400. OpenCount obtains the licences via the XML based interface Open Application Interface.

- [*Mitel OpenCount Basic Package*](#)

This basic licence is a prerequisite for all OpenCount additional licences. The licence contains the “Company” branch package, enables the connection to MiVoice Office 400 and allows basic functions to be used.

- [*Mitel OpenCount Healthcare Branch Package*](#)

This additional licence offers extra functions for care and retirement homes.

- [*Mitel OpenCount Public Authorities Branch Package*](#)

This additional licence offers extra functions for municipalities, communities and ministries.

- [*Mitel OpenCount Functional Upgrade to Comfort*](#)

This additional licence offers extra functions such as PIN telephony.

- [*Mitel OpenCount Functional Upgrade to Premium*](#)

This additional licence offers extra functions such as intermediate statements, invoicing etc.

- [*Mitel OpenCount Users*](#)

This additional licence enables a defined number of users to be monitored via OpenCount. All OpenCount users must be licensed, otherwise a warning is generated.

- [*Advanced Messaging*](#)

Enables the SMPP protocol to be used for integrating an SMS server and 9d cordless phones to be logged on as system phones (Ascom Wireless Solutions products). User-friendly messaging systems can then be implemented. One licence is required per system /AIN.

- [*CTI First Party via LAN*](#)

This basic licence enables the CTI basic functions via Ethernet interface (e.g. for using a PC dial help) for a specific number of users (see ["General system capacity", page 37](#)). It cannot be combined with CTI third-party licences.

interfaces

- [*ATAS Interface / ATASpro Interface*](#)

With ATAS licences external alarm and messaging sources can be connected via the Ethernet interface. The licences also offer additional possibilities compared with ATPCx (e.g. displaying the Fox menu on system phones and triggering an alarm with the Redkey).

The [*ATASpro Interface*](#) licence can also be used to determine the position of users of Mitel DECT cordless phones, which can be viewed with the appropriate applications.



Note:

If you use the Mitel Open Interfaces Platform, OIP takes the licences from the communication server. So always acquire these licences for the communication server so you can use ATAS even without OIP.

- [*BSS Licence*](#)

This licence allows a BluStar server to be connected.

- [*BSS-Lync Interface*](#)

This licence allows the use of the BluStar Lync interface.

- [*CSTA Sessions*](#)

This licence allows third-party applications to monitor/check a terminal on the communication server using the CSTA protocol. If a terminal is monitored or checked by several applications or instances, one licence is required for each monitoring/check.

- [*Presence Sync. via SIMPLE and MSRP*](#)

SIMPLE (Session Initiation Protocol for Instant Messaging and Presence Leveraging Extensions) is a protocol for exchanging presence information, and is used between SIP endpoints (terminals, network interfaces and nodes). MSRP (Message Session Relay Protocol) is a protocol used for exchanging data between SIP clients (e.g. for chats). This combined licence defines the number of users who can use one or both protocols for third-party applications. Only one licence is needed for a user with several SIP phones.

- [*SMPP*](#)

This licence allows the use of the SMPP protocol. The licence cannot be purchased individually but is part of the [*Advanced Messaging*](#) licence.

3.1.7 Restricted operating mode

Without a valid [Software Release](#) licence the communication server switches over to a restricted operating mode four hours after each restart. The restriction concerns the following aspects:

Restricted operating features:

- No call information for incoming calls and during the call connection.
- Dialling by name is deactivated.
- Functions cannot be invoked via the menu or function key (likewise no enquiry calls can be made).
- The team keys do not work.
- Functions codes are not carried out (except remote maintenance on/off).
- Dialling from PC and other CTI functions are not supported.

Restricted services and routing functions:

- Calls are not routed to integrated mobile/external phones.
- Call centre functions are out of service (no routing to ACD).
- Voice mail functions are out of service (no call routing to voice mail).
- The announcement service is out of service.

3.1.8 Temporary offline licences

If the connection to the master is interrupted in an AIN, the satellites restart in offline mode. The licences acquired on the master are no longer visible for the satellites in offline mode. To ensure autonomous VoIP and QSIG traffic temporarily, certain licences are enabled in the satellites concerned for the duration of offline operation or for a maximum of 36 hours (the licences are not visible in WebAdmin). The licence overview ([Tab. 16](#)) shows which licences are affected. To ensure longer offline operation, the necessary licences must also be acquired on the satellites.

3.1.9 Trial licences

Trial licences are available for some functions. This means that functions or features that require a licence can be used and tested, licence-free, for a period of 60 days. The trial licences are automatically enabled the first time a particular function is used and then listed in WebAdmin in the [Licenses \(Q=q9\)](#) view, complete with the date on which they expire. This procedure can only be used once for each function or feature. Thereafter you must acquire a licence. The licence overview ([Tab. 16](#)) shows which trial licences are available.

3. 1. 10 Virtual Appliance licenses

You can obtain Virtual Appliance licences in two ways:

Via the Virtual Appliance EID

For this type of licensing, your Virtual Appliance communication server must have a permanent internet access. This is necessary as the licence server regularly checks whether a second communication server with the same EID (clone) does not exist. If this is the case, the event message *Possible clone of your system detected* is displayed. If the suspicion is confirmed, the communication server switches to restricted operating mode (see *"Restricted operating mode"*, page 52).

Restricted operating mode is also activated if the communication server remains unconnected to the licence server for a longer time (max. 72 hours), or if the licence is invalid.



Note:

If during normal operation Virtual Appliance loses contact with the licence server, a 72-hour timer is started. If the link is restored before the end of the 72 hours, the timer is not directly reset, but counts up until the 72 hours are reached again.

This licensing type can be used for an individual system or in an AIN. The parameter *Online licence check* in the *Licensing* (Q=q9) view must be activated.

Licensing via the EID of a gateway satellite

A satellite's EIM card serves as licensee for this licensing type. Therefore, in addition to the EID of Virtual Appliance, the satellite's EID (gateway EID) must be entered in the WebAdmin configuration. The parameter *Online licence check* in the *Licensing* (Q=q9) view must also be deactivated.

If during normal operation the Master loses contact with the satellite with the gateway EID, a 72-hour timer is started. The satellite restarts in offline mode with the temporary offline licence (see *"Temporary offline licences"*, page 52). The Master Virtual Appliance continues to run for 72 hours in normal operating mode, except that, for instance, the satellite's gateway functions can no longer be used. After the 72 hours, the Virtual Appliance communication server switches to restricted operating mode (see *"Restricted operating mode"*, page 52).



Note:

If the link between the master and the satellite is restored before the end of the 72 hours, the timer is not directly reset, but counts up until the 72 hours are reached again.

This licensing type is only available in an AIN with Virtual Appliance as master.

Overview of licences

Tab. 16 Overview of licences

Licence	Licensed attributes	With-out licence	With licence	Licences for net-working	Offlin e licenc e	Trial licenc e
Software						
<i>Software Release</i>	Allows a particular software release to be operated	Restricted ¹⁾	Unrestricted	per node (also in AIN)	–	–
Users						
<i>User</i>	Allows user operation on Virtual Appliance.	Locked	1, 20, 50 or 100 additional users per licence.	In the AIN, only on the Master; otherwise per node.	–	–
<i>Basic User</i>	Licence bundle: 1 <i>User</i> licence 1 phone licence (any one)	0	Limited only by the system capacity	In the AIN, only on the Master; otherwise per node.	–	–
<i>Entry UCC User</i>	Licence bundle: • 1 licence <i>User</i> • 8 phone licences (any one) • Video licence for all licensed phones. • MiCollab role <i>UCC Entry</i>	0	Limited only by the system capacity	In the AIN, only on the Master; otherwise per node.	–	–
<i>Standard UCC User</i>	Licence bundle: • 1 <i>User</i> licence • 8 phone licences (any one) • Video licence for all licensed phones. • MiCollab role <i>UCC Standard</i>	0	Limited only by the system capacity	In the AIN, only on the Master; otherwise per node.	–	–
<i>Premium UCC User</i>	Licence bundle: • 1 <i>User</i> licence • 8 phone licences (any one) • Video licence for all licensed phones. • MiCollab role <i>UCC Premium</i>	0	Limited only by the system capacity	In the AIN, only on the Master; otherwise per node.	–	–

Licence	Licensed attributes	With-out licence	With licence	Licences for net-working	Offlin-e licence	Trial licence
Terminals						
<i>MiVoice 2380 IP Softphones</i>	Number of registered MiVoice 2380 IP IP soft-phones	0	Per licence 1 additional IP softphone	In the AIN, only on the Master; otherwise per node.	✓	✓
<i>MiVoice 5300 IP Phones²⁾</i>	Number of registered , MiVoice 5360 IP, MiVoice 5361 IP, MiVoice 5370 IP and MiVoice 5380 IP IP system phones	0	1, 20 or 50 additional IP system phones per licence	In the AIN, only on the Master; otherwise per node.	✓	✓
<i>Mitel SIP Terminals</i>	Number of registered Mitel SIP terminals	0	1, 20 or 50 additional Mitel SIP terminals per licence	In the AIN, only on the Master; otherwise per node.	✓	✓
<i>Mitel Dialog 4200 Phones³⁾</i>	Number of registered Dialog 4220, Dialog 4222 and Dialog 4223 digital phones	0	One additional phone per licence	In the AIN, only on the Master; otherwise per node.	✓	✓
<i>Mobile or External Phone Extensions</i>	Number of mobile/external phones that can be registered (without Mitel Mobile Client)	0	One additional mobile/external phone per licence (without Mitel Mobile Client)	In the AIN, only on the Master; otherwise per node.	✓	✓
<i>MMC Extensions</i>	Number of mobile phones that can be registered with Mitel Mobile Client for operation with an Mitel Mobile Client Controller (MMCC)	0	Per licence 1 additional mobile phone (with Mitel Mobile Client)	In the AIN, only on the Master; otherwise per node.	–	–
<i>SIP Terminals</i>	Number of registered standard SIP terminals	0	1 additional standard SIP terminal per licence	In the AIN, only on the Master; otherwise per node.	✓	✓
<i>Video Terminals</i>	Use of the video functionality of a standard SIP terminal	0	Additional licence for <i>SIP Terminals</i> . 1 additional standard SIP terminal with video functionality per licence.	In the AIN, only on the Master; otherwise per node.	✓	✓

Expansion Stages and System Capacity

Licence	Licensed attributes	With-out licence	With licence	Licences for net-working	Offlin e licenc e	Trial licenc e
<i>Dual Homing</i>	Number of registered Mitel 6700 SIP / 6800 SIP SIP phones on a backup communication server	0	Per licence 1, 20 or 50 additional phones	Always on the backup communication server	–	✓
BluStar						
<i>BluStar Softphones</i>	Number of registered BluStar softphones	0	1, 20 or 50 additional BluStar softphones per licence	In the AIN, only on the Master; otherwise per node.	✓	✓
<i>BluStar Softphone Video Options</i>	Use of the video functionality of a BluStar softphone	0	Additional licence for BluStar softphone. 1, 20 or 50 additional BluStar softphones with video functionality per licence.	In the AIN, only on the Master; otherwise per node.	✓	✓
Audio services						
<i>Conference Bridge</i>	Use of conference bridge	Locked	Enabled	In the AIN, only on the Master; otherwise per node.	–	✓
<i>Enterprise Voice Mail</i>	Voice compression, expanded voice memory capacity, and e-mail notification whenever new voice messages are received, forwarding of voice messages, call recording.	Locked	Enabled (including 2 audio channels for voice mail, Auto Attendant or call recording)	In the AIN, only on the Master; otherwise per node.	✓	✓
<i>Audio Record & Play Channels</i>	Audio channels for recording or playing back audio data.	Locked	Per licence 1 additional audio channel for voice mail, Auto Attendant or call recording	In the AIN, only on the Master; otherwise per node.	–	–
<i>Auto Attendant</i>	Use of the auto attendant function	Locked	Enabled	In the AIN, only on the Master; otherwise per node.	✓	✓
<i>Number in Queue</i>	Use of the function 'queue with announcement '	Locked	Enabled	In the AIN, only on the Master; otherwise per node.	✓	✓

Licence	Licensed attributes	With-out licence	With licence	Licences for net-working	Offlin-e licenc-e	Trial licenc-e
Features						
<i>Secure VoIP</i>	Encrypted VoIP connections using SRTP and TLS.	Non-encrypted transmission	Encrypted transmission	Per node	–	–
<i>Silent Intrusion</i>	Use of the Silent intrusion feature	Locked	Enabled	In the AIN, only on the Master; otherwise per node.	–	–
<i>Analogue Modem</i>	Use of the modem functionality on an Mitel 415/430.	Locked	Enabled	In the AIN, only on the Master; otherwise per node.	✓	✓
Resources						
<i>Base licence Virtual Appliance</i>	Allows the operation of Virtual Appliance	Restricted ¹⁾	Unrestricted	In the AIN, only on the Master; otherwise per node.	–	–
<i>VoIP Channels for Standard Media Switch⁴⁾</i>	VoIP functionality	0 / 2 ⁵⁾	Per licence 1 additional VoIP channel	In the AIN, only on the Master; otherwise per node.	✓	✓
<i>G.729 Codec</i>	Use of a G.729 codec for the voice channel of Mitel SIP phones, IP system phones and SIP network interfaces.	0	Per licence 1 voice channel with G.729 codec	In the AIN, only on the Master; otherwise per node.	✓	–
Networking						
<i>B-Channels on PRI Cards</i>	B channels that can be used simultaneously on the PRI interface	10	Per licence 1 additional B- channel	In the AIN, only on the Master; otherwise per node.	–	–
<i>SIP Access Channels</i>	Simultaneously usable channels to an SIP provider	0	Per licence 1 additional SIP access channel	In the AIN, only on the Master; otherwise per node.	✓	✓

Expansion Stages and System Capacity

Licence	Licensed attributes	With-out licence	With licence	Licences for net-working	Offlin e licenc e	Trial licenc e
Private networking						
<i>QSIG Networking Channels⁶⁾</i>	QSIG channels	0	Per licence 4 or n QSIG channels (n limited by the system capacity)	Per node	✓	✓
<i>Base Mitel AIN⁷⁾</i>	Operation of an AIN	Locked	AIN with master and one satellite	Only on the Master	–	–
<i>Mitel AIN Satellites⁷⁾</i>	Additional satellite in an AIN	0	Additional licence for <i>Base Mitel AIN</i> . 1 additional satellite per licence	Only on the Master	–	–
Applications						
<i>Hospitality Manager</i>	Use of Mitel 400 Hospitality Manager	Locked	Enabled	In the AIN, only on the Master; otherwise per node.	–	✓
<i>Hospitality PMS Interface</i>	Use of the PMS interface and therefore the FIAS protocol.	Locked	Enabled	In the AIN, only on the Master; otherwise per node.	–	✓
<i>Hospitality PMS Rooms</i>	Number of rooms when using the PMS interface.	0	1, 20, 50 or 100 rooms per licence	In the AIN, only on the Master; otherwise per node.	–	✓
<i>Mitel OpenCount Basic Package</i>	Basic licence: Prerequisite for all other OpenCount licences. Enables connection to the MiVoice Office 400 and the use of basic functions.	Locked	Enabled	In the AIN, only on the Master; otherwise per node.	✓	✓
<i>Mitel OpenCount Healthcare Branch Package</i>	Additional licence: Offers extra functions for care homes and retirement homes.	Locked	Enabled	In the AIN, only on the Master; otherwise per node.	✓	✓
<i>Mitel OpenCount Public Authorities Branch Package</i>	Additional licence: Offers extra functions for municipalities, communities and ministries.	Locked	Enabled	In the AIN, only on the Master; otherwise per node.	✓	✓

Licence	Licensed attributes	With-out licence	With licence	Licences for net-working	Offlin-e licence	Trial licence
<i>Mitel OpenCount Functional Upgrade to Comfort</i>	Additional licence: Offers extra functions such as PIN telephony.	Locked	Enabled	In the AIN, only on the Master; otherwise per node.	✓	✓
<i>Mitel OpenCount Functional Upgrade to Premium</i>	Additional licence: Offers extra functions such as intermediate statements, invoicing etc.	Locked	Enabled	In the AIN, only on the Master; otherwise per node.	✓	✓
<i>Mitel OpenCount Users</i>	Additional licence: Enables a defined number of users to be monitored via OpenCount.	0	1, 20 or 50 additional users per licence	In the AIN, only on the Master; otherwise per node.	✓	✓
<i>Advanced Messaging</i>	SMPP protocol for integration of an SMS server and registration of 9d cordless phones as system phones. (Includes licence SMPP)	Locked	Enabled	In the AIN, only on the Master; otherwise per node.	–	–
<i>CTI First Party via LAN</i>	First-party CTI clients with basic functions on Ethernet interface	0	Enabled for a specific number of users (see <u>"General system capacity", page 37</u>)	In the AIN, only on the Master; otherwise per node.	–	✓
interfaces						
<i>ATAS Interface</i>	Use of the ATAS interface	Locked	Enabled	In the AIN, only on the Master; otherwise per node.	–	✓
<i>ATASpro Interface</i>	Use of the ATASpro interface	Locked	Enabled	In the AIN, only on the Master; otherwise per node.	–	–
<i>BSS Licence</i>	Right to connect a BluStar server	unavailable	enabled	In the AIN, only on the Master; otherwise per node.	–	–

Licence	Licensed attributes	With-out licence	With licence	Licences for net-working	Offlin e licenc e	Trial licenc e
BSS-Lync Interface	Right to use the BluStar Lync interface	unavail- able	enabled	In the AIN, only on the Master; otherwise per node.	–	–
CSTA Sessions	Number of monitored terminals via the CSTA protocol.	0	1, 20, 50 or 100 CSTA sessions per licence	In the AIN, only on the Master; otherwise per node.	✓	✓
Presence Sync. via SIMPLE and MSRP	Number of users who can use one (or both) protocols for the third-party applications.	0	1, 20 or 50 additional users per licence who may use both protocols.	In the AIN, only on the Master; otherwise per node.	✓	✓
SMPP⁸⁾	SMPP protocol	Locked	Enabled	In the AIN, only on the Master; otherwise per node.	–	–

- 1) four hours after the new software has been uploaded or after a restart operation, the communication server switches over to a restricted operating mode (see "[Restricted operating mode](#)", page 52).
- 2) The licences can also be used if the [Mitel SIP Terminals](#) licences are missing.
- 3) Dialogue phones can be connected to Mitel 470 only.
- 4) If Virtual Appliance is used as Master, the VoIP channels of the master node are made available without a licence from the integrated Mitel Media Server. However, for the satellites' VoIP channels, the licences must be purchased.
- 5) If VoIP mode is set to G.711, two G.711 VoIP channels per system can be used without a licence.
- 6) For Virtual Appliance this licence is only relevant to the QSIG networking of an AIN satellite.
- 7) In a AIN with Virtual Appliance as Master, these licences are part of the Virtual Appliance licences and must not be purchased individually.
- 8) This licence cannot be purchased separately; it is part of the [Advanced Messaging](#) licence.

All the licences are offered in separate licence packages. Depending on the sales channels the packages may differ from the licences in [Tab. 16](#). The systems ship out unlicensed. Back-licensing is not provided for. However, resetting to the factory setting is possible.

OIP licences

OIP licences are managed by OIP itself. A detailed description of the OIP licences can be found in the System Manual Mitel Open Interfaces Platform.

4 Installation

This chapter defines the conditions for installing Virtual Appliance and contains detailed installation instructions. A description of how to mount, power, equip and connect the Mitel 415/430 and Mitel 470 communication servers, and how to connect the interfaces, as well as their features, is given in the corresponding system manuals.

4.1 Introduction

The MiVoice Office 400 Virtual Appliance is provided as a preconfigured VMware-compatible image (OVA file) and installed on a virtual machine of a professional server. The server may also contain other virtual Mitel applications (e.g. OIP or MiCollab AWW) and third-party applications such as a mail server.

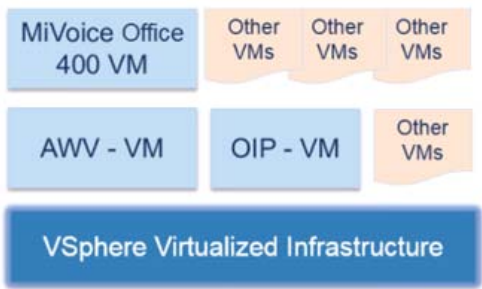


Fig. 4 MiVoice Office 400 Virtual Appliance and other virtual applications

4.2 Abbreviations and definitions

Tab. 17 Abbreviations and definitions

VM	Virtual Machine	A virtual machine is the software implementation of a computer environment. It reflects the architecture of a real hardware PC.
OVA	Open Virtualization Archive	Image file for installing MiVoice Office 400 Virtual Appliance, including Mitel Standard Linux operating system on a virtual machine.
MSL	Mitel Standard Linux	Operating system on which MiVoice Office 400 Virtual Appliance is running.
ESXi™	Hypervisor developed from VMware	Abstracting layer between the hardware and one or more virtual machines.
vSphere® Hypervisor	Installable ISO file containing the ESXi Hypervisor and vSphere client	
vSphere client	Configuration and management tool for ESXi	

4.3 Minimum requirements for the virtual machine

Tab. 18 Minimum requirements for the virtual machine

VMware vSphere	ESXi 5.5 or higher
CPU	2 GHz, 1 core reserved for MiVoice Office 400Virtual Appliance
RAM	2 gbytes
Free hard disk capacity	40 gbytes
Network	1 Gbit/s Ethernet
Network card	VMXNET3



Note:

ESXi may only be installed by certified personnel on VMware compatible hardware. (see <http://www.vmware.com/resources/compatibility/search.php>)

4.3.1 Installing MiVoice Office 400 Virtual Appliance

The MiVoice Office 400 Virtual Appliance software and Mitel Standard Linux operating system are installed using an OVA file. The guide below contains the necessary steps to take in order to install MiVoice Office 400 Virtual Appliance.



See also:

You can find more information about Mitel Standard Linux in the Installation and Administration Guide "Mitel Standard Linux".

You can also find more information on how to operate virtual applications in a virtual VMware vSphere environment in the Solutions Guide "Virtual Appliance Deployment".


Both documents are stored in the MiVoice Office 400 documentation set.

Installation prerequisites:

- ESXi VMware vSphere is pre-installed on an appropriate server and the registration data is known.
- The OVA file used to install the virtual machine is available. (Accessible via software download server).
- The minimum requirements for the virtual machines are met (see Tab. 18).

Installing the vSphere client on a Windows PC

1. In a browser window, enter the IP address of the server on which ESXi VMware vSphere is pre-installed..
→ The VMware ESXi website is displayed.
2. Click the [Download vSphere Client for Windows](#) link then install the client.

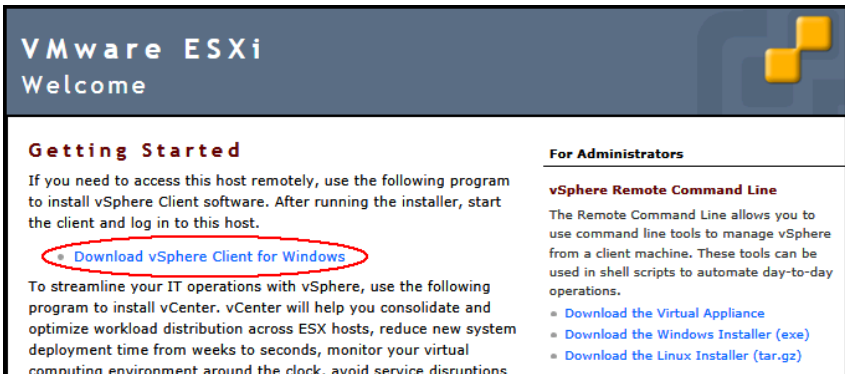

Installing the virtual machine using the OVA file





Note:

If you had been deploying a Virtual Appliance communication server and wish to make a fresh installation with an OVA file, please take note of the following:
(Fresh installation resets all configuration data to the default values and deletes all audio data).
First create a backup of the configuration and audio data (see Chapter "Data backup", page 89).

1. Start the vSphere client and enter the ESXi server user name and password.
2. Click [Provide file / OVF form](#) then enter the storage area and OVA file (e. g.: [mlx_x-41_pbx8715a0.ova](#))
→ An information window displays the size of the packet and the required storage capacity on the hard disk.
3. Enter a name and the storage area for the virtual machine. By default, the OVA file name is proposed.
4. [Thick Provisioning Lazy Zeroed](#) is recommended as hard disk format. This setting reserves approx. 15 gbytes storage space on the hard disk for the virtual machine.
5. End the installation wizard and wait till the installation of the virtual machine with the Mitel Standard Linux operating system and the application for MiVoice Office 400 is completed.

Starting the virtual machine

1. Open a console via the menu or by clicking .
2. Start the virtual machine via the menu or by clicking .
3. After the start sequences, a window opens so you can enter an [Application record ID](#). Skip this step by pressing [Next](#).

4. In the login screen that opens, log on using the following default values:

login: [admin](#)

password: [password](#)




Notes

- The default WebAdmin password is used here as password. Once you change the password in WebAdmin, you must henceforth use the new WebAdmin password here.
- Be careful if a new password contains some digits. When the console is active, the [Num lock](#) function of the digit block may be disabled and your password is not accepted. Therefore, it is better to use the digits via the normal keyboard and not via the digit block.
- If you see only a black window instead of the login, click inside the window and press [Enter](#).

Configuring the Mitel Standard Linux server

The menu below is displayed after you have logged on successfully:

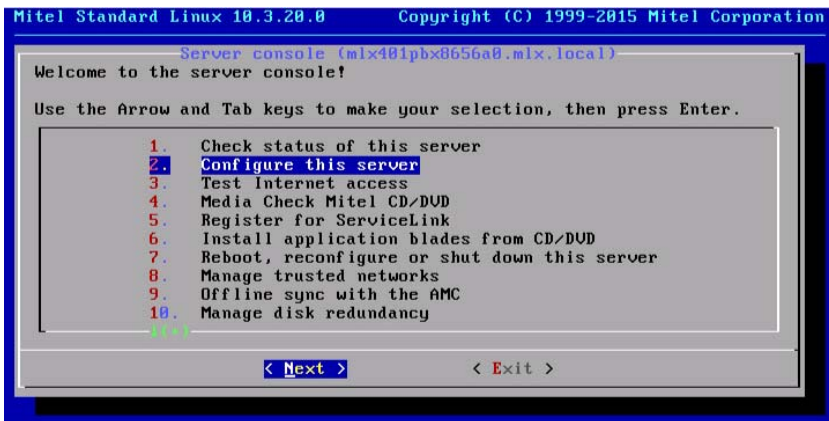

1. Use the arrow keys to select the entry [Configure this server](#).



Tip

When you click inside the console with the mouse, the cursor becomes invisible and you cannot use the mouse any longer (even outside the console). Navigate through the console using the keyboard. To restore the cursor, press CTRL + ALT on the keyboard.

2. Enter a domain name for the server or use the default value [mlx.local](#).
3. Enter a system name for the server or use the default value (e. g. [mlx41pbx-8715a0](#)).
4. Overwrite the default IP address 192.168.104.13 with your communication server IP address.
5. Enter the subnet mask or use the default value 255.255.255.0.
6. Choose [IPv6 protocol = no](#) (default value).

7. Overwrite the default gateway IP address 192.168.104.1 with your gateway IP address.
8. Enter the DNS server IP address.
9. Select the DNS server you have just entered.
10. Restart the server with [Reboot Now](#), to apply the settings.
11. Wait until the server starts up again. This is the case once the [Application record ID](#) entry window reappears. Click [Next](#) and log on again.



Note

If you wish to change the IP address of your Virtual Appliance communication server later, you must do so via the console menu. Although the IP address is visible in WebAdmin, it cannot be changed.

Activating a trusted network



Note

This step is only necessary if you wish to access this virtual machine and, thus, the Virtual Appliance communication server, from a PC located on another local area network.

1. After the server is restarted, and the login successfully implemented, select the entry [Manage trusted networks](#) with the arrow keys via the console menu.
2. To add a trusted network, select the entry [Add IPv4 trusted network](#).
3. Enter the IP address area of the local area network, the subnet mask and the IP address of the router via which the added trusted network can be reached.
→ An information window then confirms the area of the local addresses added as trusted addresses.

Access the Virtual Appliance communication server.

Congratulations, the installation has now been completed. You can now, as usual, enter your Virtual Appliance communication server IP address in a browser window and see the entry page of WebAdmin for which the sales channel must first be chosen.

The necessary configuration steps for operating the Virtual Appliance communication server with or without satellites are described here ["Configuring", page 82](#).



Mitel Advanced Intelligent Network:






In an AIN, the Virtual Appliance communication server must always be used as master. Satellites can be deployed as gateway for analogue and digital terminals and interfaces. Satellites may be of Mitel 415, Mitel 430 or Mitel 470 type. The installation of these communication servers, as well as the equipment of interface cards and system modules, is described in the Mitel 415/430 or Mitel 470 system manual.


4. 4 Installing, powering, connecting and registering terminals

4. 4. 1 IP system phones

Accesses

Tab. 19 Socket connections of the IP system phones of the MiVoice 5300 IP series

LAN	PoE Ethernet interface for connection to the IP network
PC 	Socket connection for a workstation PC (integrated 100Base-T switch, available on MiVoice 5370 IP and MiVoice 5380 IP)
	Handset socket
	Headset socket
	Power supply socket for connecting a power supply if PoE is not available
OUT 	Connect expansion key module MiVoice M530MiVoice M535 (available on MiVoice 5370 IP and MiVoice 5380 IP)

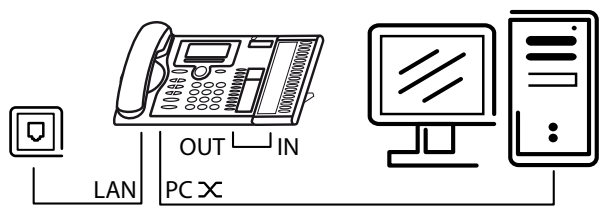


Integrated switch (MiVoice 5370 IP and MiVoice 5380 IP)

You can use the integrated 100Base-T mini-switch to connect other network terminals (e.g. PC, printer), thereby reducing the amount of cabling required.

Power supply

If your network supports Power-over-Ethernet, the IP system phone is powered directly via the LAN connection and there is no need to connect the power supply available as an option.

Tab. 20 Power over Ethernet

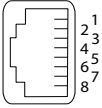RJ45 socket	Pin	Signal	PoE power supply (Variant 1)	PoE power supply (Variant 2)
	1	Rx	DC+	—
	2	Rx	DC+	—
	3	Tx	DC-	—
	4	—	—	DC+
	5	—	—	DC+
	6	Tx	DC-	—
	7	—	—	DC-
	8	—	—	DC-

Depending on the power requirements different classes are defined in the IEEE 802.3af standard. The following table provides information on the class allocation of the IP system phones.

Tab. 21 PoE class allocation

Class	Max. load, PSE ¹⁾	Max. power requirement, PD ²⁾	IP system phones
1	4.0 W	0.44...3.84 W	MiVoice 5360 IP, MiVoice 5361 IP
2	7.0 W	3.84...6.49 W	MiVoice 5370 IP ³⁾ , MiVoice 5380 IP ⁴⁾
3	15.4 W	6.49...12.95 W	

1) PSE (Power Source Equipment) = power supply device, e.g. a switch

2) PD (Powered Device) = power consumer, e.g. an IP system phone

3) including an MiVoice M530 or MiVoice M535 expansion keypad

4) including up to three MiVoice M530 or MiVoice M535 expansion keypads

You can obtain information on how to operate and register the IP system phones on a MiVoice Office 400 communication server in the WebAdmin online help.

4. 4. 2 Mitel 6700 SIP / 6800 SIP series SIP phones

Mitel SIP phones are platform-independent phones with a wide range of features. They can also be perfectly integrated into one of the Mitel Platforms and used as a system phone. Mitel SIP Phones on MiVoice Office 400 first support MiVoice Office 400 features and have a separate user's guide. Many of the device-specific functions are less significant or are not used at all. Please read the Mitel SIP administration instructions if you wish to carry use device-specific functions or carry out device-specific settings. Device-specific installation instructions are available for installing the phones. You can obtain information on how to register a Mitel SIP phone on a MiVoice Office 400 communication server in the WebAdmin online help.

4. 4. 3 Standard SIP phones and standard SIP terminals

For information on installation, powering and connection, please refer to the installation instructions of the corresponding phones and terminals. Information on how to register Mitel or third-party standard SIP phones and standard SIP terminals as internal users in MiVoice Office 400 is given in WebAdmin.

4. 4. 4 Mobile/external phones

The integration of mobile/external phones in the MiVoice Office 400 communication system is described in the System Manual "System Functions and Features".

4. 4. 5 OIP and other applications

Mitel Open Interfaces Platform (OIP) release 8.6 and later is also available as OIP Virtual Appliance and can be installed on the same server as the Virtual Appliance communication server. The operating requirements and installation instructions for the OIP applications MiVoice 1560 PC Operator and Mitel OfficeSuite are described in the "Mitel Open Interfaces Platform" System Manual.

4. 4. 6 Digital system phones and terminals


You can find information on how to install MiVoice 5300-series system phones, DECT radio units, older Office-series system phones and some analogue Mitel phones in the Mitel 415/430 or Mitel 470 system manuals.

5 Configuration

This chapter describes the web-based configuration tool WebAdmin as well as some additional options. With WebAdmin the installer configures and maintains the communication server and its auxiliary equipment, and is supported in the process by a set up and configuration assistant. WebAdmin offers different user interfaces for administrators, system assistants and end-users as well as a special application for accommodation and hotels. A context-sensitive online help provides valuable instructions on configuration, and step-by-step instructions. The chapter ends with valuable information and instructions on how to configure your communication system.

5.1 WebAdmin Configuration Tool

This web-based configuration tool is available for the online configuration of MiVoice Office 400 series communication servers. It offers a simple, user-friendly interface and an online help, and with its different authorization levels it is aimed at different user groups:

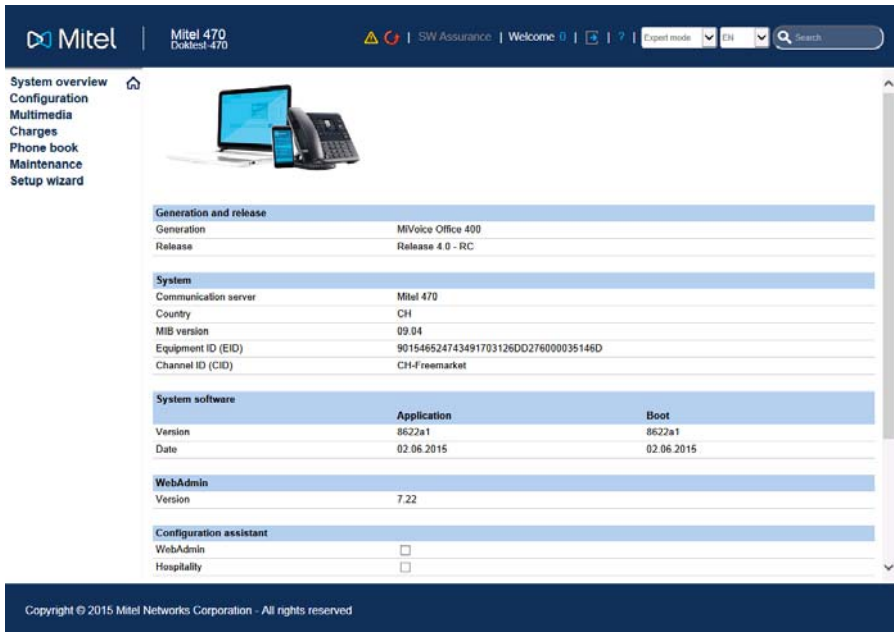

Mitel 470
Doktest-470

SW Assurance | Welcome 0 | Expert mode | CH | Search

System overview
Configuration
Multimedia
Charges
Phone book
Maintenance
Setup wizard

Generation and release

Generation	MiVoice Office 400
Release	Release 4.0 - RC

System

Communication server	Mitel 470
Country	CH
MIB version	09.04
Equipment ID (EID)	901546524743491703126DD276000035146D
Channel ID (CID)	CH-Freemarket

System software

	Application	Boot
Version	8622a1	8622a1
Date	02.06.2015	02.06.2015

WebAdmin

Version	7.22
---------	------

Configuration assistant

WebAdmin	<input type="checkbox"/>
Hospitality	<input type="checkbox"/>

Copyright © 2015 Mitel Networks Corporation - All rights reserved

Fig. 5 WebAdmin Configuration Tool

Administrator authorization level:

The Administrator has access to all the views and functions of the configuration tool (*Expert mode*). He can call up a set-up assistant, show a general configuration assistant and a special hospitality configuration assistant, and configure all system parameters. The administrator can switch back and forth between *Expert mode* and *Standard mode* at any time.

Authorization level *Administrator (Standard mode only)*:

In Standard mode the administrator has access to all the main views and functions of the configuration tool. He can call up a set-up assistant, show a general configuration assistant and configure the most needed system parameters.

System assistant authorization level:

The System Assistant only sees selected views of the configuration tool, and the scope of functions is limited.

Hospitality-Administrator authorization level:

The Hospitality Administrator features all the views required to set up the Mitel 400 Hospitality Manager and the reception menu of the MiVoice 5380 / 5380 IP and specify its default settings. A link can also be used to start the Mitel 400 Hospitality Manager (see "Mitel 400 Hospitality Manager", page 71).

Receptionist authorization level:

This access starts the Mitel 400 Hospitality Manager directly (see "Mitel 400 Hospitality Manager", page 71).

The WebAdmin is included in the file system of each communication server of the MiVoice Office 400 family and does not have to be installed separately.

Access:

To access the registration page of WebAdmin, enter the communication server IP address in your browser. You can find the registration data of a new communication server in the chapter "Default user account for initial access", page 76.



Note:

With the web-based administration two users are able to access the same communication server simultaneously (and no fewer than five users at the Receptionist authorization level). This can cause confusion if a configuration is being carried out in the same places.

5. 1. 1 Integrated and auxiliary applications

Mitel 400 Hospitality Manager

The Mitel 400 Hospitality Manager is a web-based application for receptionists in the hospitality sector. It provides a clear, at-a-glance list view or floor-by-floor view of the rooms and features functions such as check-in, check-out, notification, wake-up call, retrieval of call charges, maintenance list, etc.

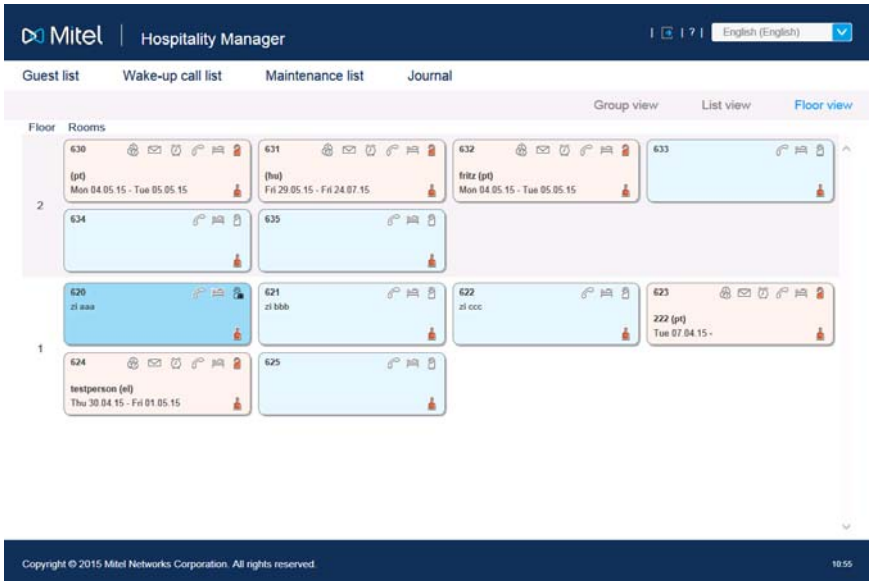


Fig. 6 Mitel 400 Hospitality Manager

Mitel 400 Hospitality Manager is integrated into WebAdmin and subject to a licence.

Access:

You have access to two types in Mitel 400 Hospitality Manager:

- Register on the WebAdmin registration page with the access data of a user account to which an authorisation profile with the WebAdmin authorisation level *Receptionist* has been assigned. This starts Mitel 400 Hospitality Manager directly.
- Register on the WebAdmin registration page with the access data of a user account to which an authorisation profile with the WebAdmin authorisation level *Hospitality administrator* has been assigned. Click the menu tree on the left side on the *Hospitality Manager* input.

Self Service Portal

With the Self Service Portal, users can configure and adjust personal phone settings, such as key configuration, labels, display language, directly and independently on the PC. Users also have access to their personal mail boxes; they can configure and control presence profiles, personal call routing and call transfers, and create or search for private phone book contacts.

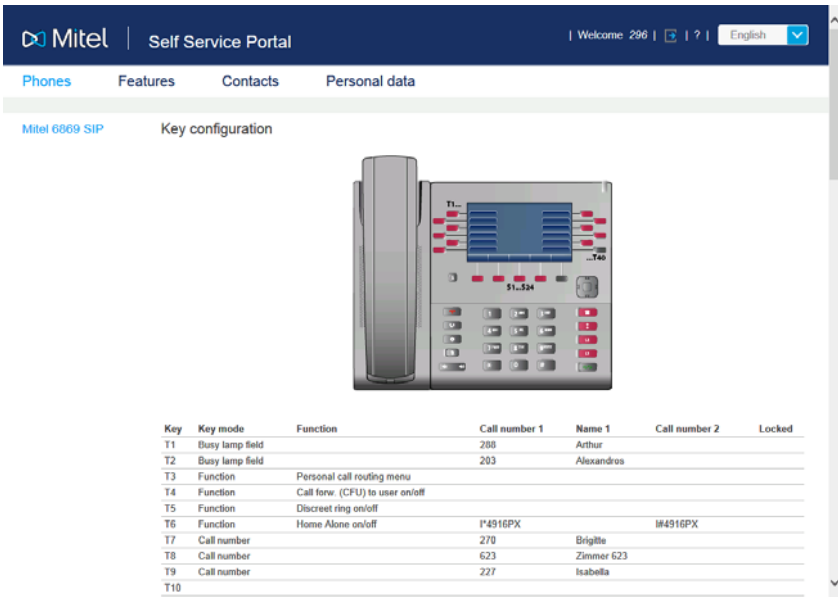


Fig. 7 Self Service Portal

The Self Service Portal application is integrated into WebAdmin.


Access:

You can access a user's Self Service Portal by entering any of the following combinations (registration data) on the WebAdmin registration page:

- Call number + PIN
- Windows user name + PIN
- Windows user name + password

The standard PIN "0000" is accepted, but must be changed during first login. You can choose any 2 to 10-digit number combination.

System Search

The auxiliary application System Search  is an independent help tool for detecting MiVoice Office 400 series communication servers on the IP network. System Search MiVoice Office 400 finds all communication servers connected to the IP network, provided they are located on the same subnet as the PC and are at least compatible with Software release 1.0. (does not apply to Virtual Appliance). With System Search you can also see the name, type, sales channel, EID number and operating mode of a selected communication server. You can modify its IP address or directly start the WebAdmin administration tool.

Moreover, with System Search you can load language files for the audio guide, Mitel phones as well as for the user interface and online help of WebAdmin, Hospitality Manager and Self Service Portal via MiVoice Office 400 FTP server onto your PC and upload them afterwards to the communication server with WebAdmin. Thus, an update or an upload of new languages is possible without an internet connection of the communication server.

With System Search you can also upload system software in boot mode (Emergency Upload). This is particularly useful if the current software application on the communication server is no longer able to run or if you wish to load an older software application (does not apply to Virtual Appliance).

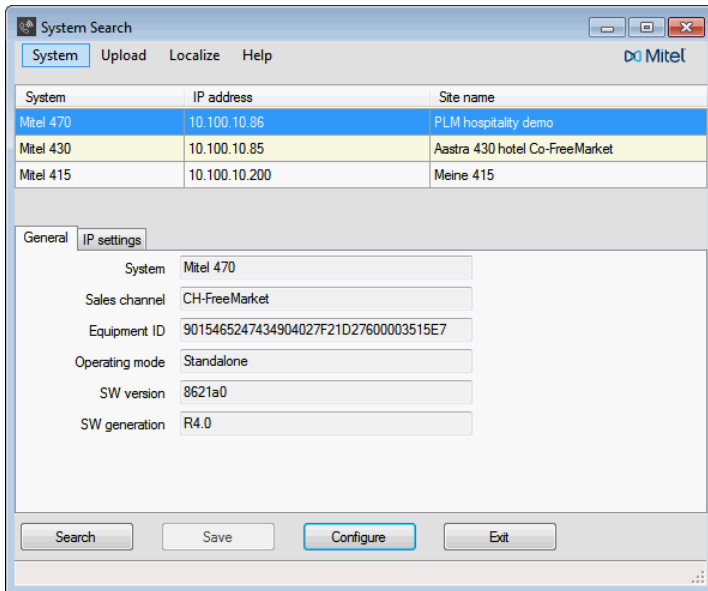



Fig. 8 System Search

You can download the System Search application via Software download server. For this, you must first log on to the Extranet with your partner login. The application must not be installed but is started with a double-click.



Note:
For Virtual Appliance, System Search is **only available for downloading language files for the audio guide, Mitel SIP terminals as well as for the WebAdmin, Hospitality Manager and Self Service Portal** user interfaces and online help.

Mitel 400 WAV Converter

The auxiliary application Mitel 400 WAV Converter  is an independent help tool for compressing audio data. If the integrated voice mail system is operated in expanded mode (Mitel 415/430 only), all the audio data must be available in compressed G.729 format. To be able to continue using existing, uncompressed greetings in G.711 format, you need to compress them first. Mitel 400 WAV Converter is available for this.

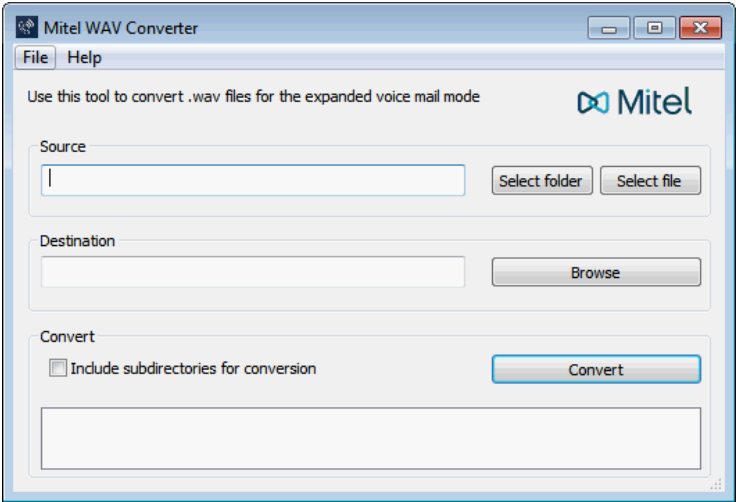


Fig. 9 Mitel 400 WAV Converter

You can download the application via Software download server. For this, you must first log on to the Extranet with your partner login.
The application must not be installed but is started with a double-click.

5.2 Access types

There are the following possibilities to access the communication server with WebAdmin:

- In the LAN with an Ethernet cable (via a switch)
- Externally via SRM (secure IP remote management)



Note:

External access via dial-up access (ISDN/analogue) is only recommended on some conditions, for performance reasons.

Accessing the communication server on the LAN

If the communication server IP address is known, it can be entered directly in the address line of a web browser. WebAdmin is started after the access data is entered. The computer only needs to be located on the same LAN, but not necessarily on the same subnet.

Accessing the communication server from outside

For remote access to the communication server, we recommend SRM (Secure IP Remote Management) secure IP remote management. For this, you need to install an SRM agent on your computer with which you can set up a connection to the SRM server. Thereafter, the SRM server calls the communication server via PSTN and sends it the connection parameters. The communication server now sets up a secure connection to the SRM server which switches together them with the connection to the SRM agent.



See also:

You can find instructions on how to set up Secure IP Remote Management in the WebAdmin help on the [IP remote management \(SRM\) view \(Q=mw\)](#).

5.3 User access control

Access to the configuration is password-protected. Any user wanting to log in to a communication server is prompted for his user name and password (access data).

5.3.1 User accounts and authorization profiles

A user's authorizations are regulated by authorization profiles, which are assigned to the user accounts.

5.3.1.1 User accounts

Default user account for initial access

When a new communication server is opened or after a first start, the default user account ([admin](#)) and several authorization profiles are created. The default user account is linked with the authorization profile [Administrator](#). This authorization profile is assigned the administration rights for the [User access control](#) for [Audio services](#) and for WebAdmin at the [Administrator](#) authorisation level.

The required user accounts and authorization profiles can be set up using the default user account.

To access the default user account ([Default User Account](#)) enter the following:

Tab. 22 Standard user account and standard password

User name	admin
Password	password



Notes:

- To prevent unauthorised access to the communication server, it is necessary to modify the default password during first access. For password selection and input, see "[Password syntax](#)", page 78.
- The password change is also applied to the login on the virtual machine for the configuration of the Mitel Standard Linux server (see "[Installing MiVoice Office 400 Virtual Appliance](#)", page 62).

Other predefined user accounts

The predefined user account [MMCC](#) is meant for operating a Mitel Mobile Client Controller.

The two predefined user accounts [blustar](#) and [bucs](#) are meant for BluStar terminals and for a BluStar server.

You can see the predefined user accounts in the [User account](#) ([Q=a7](#)) view.



Note:

The predefined user accounts cannot be deleted.

Personal user accounts

Subject to the administration right for user access control, personal user accounts can be created in user access control ([Q=a7](#)) and assigned some authorisation profiles. The following rules apply to user names selection and spelling:

- An user name must consist of a minimum of 1 and a maximum of 25 alphanumeric characters.
- Unlike the passwords, the user names are **not** case sensitive.
- The following special characters can be used: ?, /, <, >, -, +, *, #, =, full stop, comma and space.
- German umlauts (e.g. ä, ö, ü) and other diacritical characters (e.g. é, à, â) are not permitted.
- User names must be unique throughout the system.
- The user name and password must not be identical.

5. 3. 1. 2 Authorization profiles

Predefined authorization profiles

The predefined authorization profiles are assigned administration rights and interface user rights. An overview of all predefined authorisation profiles with their administration and access rights is available in the WebAdmin help on the [Authorization profile](#) view([Q=u5](#)).

Personal authorisation profiles

Subject to administration right for the administration right for user access control, no personal authorisation profiles can be protected and assigned the desired rights. A description of the various administration and access rights is available in the WebAdmin help on the [Authorisation profile](#) view([Q=u5](#)).



Note:

Authorization profiles can only be viewed or created by [Administrators](#) in [Expert mode](#).

5. 3. 2 Passwords

To ensure that the communication server can only be configured by authorized personnel, access to the configuration is password-protected.

5. 3. 2. 1 Password syntax

The following rules apply to password selection and spelling:

- A password must consist of a minimum of 8 and a maximum of 10 alphanumeric characters.
- Unlike the user names, the passwords are case sensitive.
- The following special characters can be used: ?, /, <, >, -, +, *, #, =, full stop, comma and space.
- German umlauts (e.g. ä, ö, ü) and other diacritical characters (e.g. é, à, â) are not permitted.
- The default password *password* is not permitted.
- The password must not be the same as the user name.

5. 3. 2. 2 Change password

Any user who has been assigned an authorisation profile in which the *User access control* administration right is released is authorised to modify the passwords of all user accounts. It is therefore advisable to assign this administration right restrictively.

Users whose password has been changed are prompted to enter their newly assigned password the next time they log in. The same applies to users whose accounts have been newly created.

Users without the administration right *User access control* can only change their own password.

5. 3. 2. 3 Access with incorrect password

After 15 failed login attempts using incorrect passwords the corresponding user account is blocked; it can then only be reactivated by a user with the *User access control* administration right. He then replaces the old password with a new one. The next time he logs in, the corresponding user is prompted to change the password and enter the new one he has been assigned.

5. 3. 2. 4 Lost password

If another user has also been defined with the *User access control* administration right released, he can simply overwrite with a new password the password lost by another user. The next time he logs in, the corresponding user is prompted to change the password and enter the new one he has been assigned.



Note:

For security reasons, there is no password-free access for Virtual Appliance. Be careful with your passwords.

5. 3. 3 Automatic exit from the configuration

Access to the configuration is interrupted if no changes are made to a parameter value or the navigation system is not used during a specific timeout.

5. 3. 4 Access log

An access log with 20 entries is drawn up for each user account so that the history of accesses to the configuration can be tracked. Denied access attempts using erroneous or incorrectly type passwords are also logged. The logs can be read by each user (authorization level) *Administrator* in *Expert mode* required).

Retrieving the log data

The system monitors all the accesses and failed access attempts and saves them in the file system of the communication server. These lists can be retrieved locally or remotely. (*Q =ez* or *Q =z3*).

CLIP verification

If in the general maintenance settings (*Q =t0*) of the parameter *CLIP required* is activated, remote maintenance is only possible if the retrieving party is using a CLIP. The CLIP number is also recorded by the access log.

Entering the processes in the log

Each access attempt generates an entry in the corresponding list.

In case of remote maintenance an entry will not be generated if remote maintenance is barred or if *CLIP required* is activated in the configuration and no CLIP is received.

5. 4 Remote access

With a remote maintenance access the user is authenticated using his user name and password. The user account must also be assigned an authorization profile in which the interface access *Remote maintenance dial-up access* is enabled. This also applies to SRM (Secure IP Remote Management), secure IP remote management.

5. 4. 1 Access enabled by local users


Remote maintenance access can be enabled in two ways:

- Using function codes (see [page 80](#))
- With WebAdmin

It can be revoked again automatically or manually.

All enabling types have equal authorization status. This means that remote maintenance access can be enabled using a function code for example, and then barred again using the WebAdmin in general maintenance settings (**Q =t0**).

When remote maintenance access is activated, the event message *Remote maintenance on* is sent to the local printer and to all the terminals registered in message group 16.

If remote maintenance is released, this can be recognised in the WebAdmin title bar of the  symbol.

Remote maintenance access can be enabled or barred using the function codes both from the idle state and the talk state, e.g. after an enquiry.

The authorisation to activate or bar remote maintenance access using the function code is defined and granted to the user with the parameter *Remote maintenance access* in a permission set (**Q =cb**).

After a first start of the communication server, the authorizations of all users are restricted.



Note:

It is advisable not to keep the remote maintenance access permanently activated. This ensures that the communication server data cannot be manipulated from a remote location by unauthorized persons.

5. 4. 2 Function code for remote maintenance access

Tab. 23 Function code for remote maintenance access

Enable/bar a one-off remote maintenance access	*754 / #754
Enable/bar a one-off permanent maintenance access	*753 / #753

When remote maintenance access is enabled using function code *754, access will automatically be barred again once the remote maintenance process has been completed. It is possible to bar remote maintenance manually using #754 before it is initiated.

Remote maintenance access can be enabled permanently using the function code *753. To bar access, the authorized user must enter the function code #753 manually.

The enabling or barring of remote maintenance access using the function code is signalled in each case by an acknowledgement tone.

Remote maintenance access can also be enabled or barred in WebAdmin, if the relevant authorization has been given.



Note:

In a QSIG network it is important to ensure that the authorization to change the remote maintenance access is also denied to unauthorized PISN users. Otherwise, a PISN user would be able to use an abbreviated dialling number defined for the destination PINX and containing the appropriate function code to change the remote maintenance access to the destination PINX.



Mitel Advanced Intelligent Network:

In an AIN the remote maintenance access of all the nodes depends on the setting in the Master. If remote maintenance access is enabled in the Master, both the AIN configuration and the offline configuration of the satellites are enabled.

Remote maintenance access via an external dial-up connection to the AIN is also protected and has to be explicitly enabled via the control panel on the front panel (Mitel 470) or via the control key (Mitel 415/430).

5. 4. 3 Function keys for remote maintenance access

On system phones the function code for enabling/barring remote maintenance access can be stored under a function key, provided the user has the appropriate authorization.

The relevant LED lights up if remote maintenance access is enabled once or permanently.

The relevant LED goes off as soon as remote maintenance access is denied again, either automatically or manually, using the function code or WebAdmin.

5.5 Configuring

The configuration steps are based on the information determined during the planning and, where applicable, the installation.

Whenever possible, use the planning and ordering software Mitel CPQ, to set up your communication system. Mitel CPQ can be operated online after logging in at Mitel Connect <https://connect.mitel.com> . Mitel CPQ not only calculates the required hardware – it also lists the required licences for the planned operation.



See also:

If you are setting up an MiVoice Office 400 communication system for the first time, we recommend to you the Getting-started package (see "[First steps...](#)", page 35).

Putting Virtual Appliance into operation

There are various methods of putting Virtual Appliance without or with a satellite into operation. Below is a summary of a possible procedure for both cases.

Operating without a satellite

Requirements:

- Your communication server Virtual Appliance has permanent Internet access. This is required, because the communication server regularly sends messages to the Mitel licence server, to maintain the permission for the unrestricted operating mode.
- You have received a licence code and an EID for Virtual Appliance via Mitel Connect (<https://connect.mitel.com>) with the help of the voucher.

Recommendation:

Download the latest MiVoice Office 400 software for Virtual Appliance from the download server <https://pbxweb.aastra.com/swdl/SwDL> and store it.

For the operation, proceed as follows:

1. Enter the IP address of your Virtual Appliance communication server in a browser.
→ The WebAdmin entry page is displayed.
2. Select your sales channel.
3. Upload the latest software release to the Virtual Appliance communication server.
→ A first start is executed with the sales channel-specific values and new software release.
4. Skip the loading of audio guide languages. You can comfortably do this later in WebAdmin via an FTP server.
5. Change the default password, select the system language and enter a location name for your communication system.
6. Skip the setup wizard. You can call it up later at any time from WebAdmin.

7. You are prompted for WebAdmin mode. Select *Expert mode*.
8. Change to the *System overview / Licences (Q=q9)* view then tick the *Online licence check* checkbox.
9. Enter the *Equipment ID (EID)* of Virtual Appliance and the *Licence code*.
10. Enable the *NTP service* in the *System / General (Q=ty)* view.
11. Change to the *System / Media resources (Q=ym)* view. Make sure the media switch of the master Virtual Appliance is enabled and select the *VoIP mode*.
12. Restart the communication server in the *Maintenance / File management / System reset (Q=4e)* view, to make the changes take effect.
13. Log on again and change to the *System / Media resources (Q=ym)* view.
→ The state of the media switch has changed to *Operational*.
14. Now, carry out the configuration procedures to set up the numbering plan, the SIP providers, users, phones and DDIs. For this you can call up the set-up wizard, the configuration wizard or use your own methods.

Operating with a satellite

If Virtual Appliance is operated with one or more satellites in a AIN you have two possibilities regarding licensing:

Variant 1: The EID of a satellite and the EID of Virtual Appliance is used to generate the license. As long as the satellite and the master are connected, the unrestricted operation is ensured. This variant is especially useful, if no permanent internet access for Virtual Appliance can be ensured.

Variant 2: Only the EID of Virtual Appliance is used to generate the license. This requires a permanent internet access of the communication server Virtual Appliance, because it regularly sends messages to the Mitel licence server in order to maintain the permission for the unrestricted operating mode.

Below the operating with variant 1 is described:

Requirements:

- The installation of the virtual machine using the OVA file has been completed; the Mitel Standard Linux server has been configured and you can access the Virtual Appliance communication server from your local area network (see "Installing MiVoice Office 400 Virtual Appliance", page 62).
- You have successfully set up a communication server Mitel 415, Mitel 430 or Mitel 470 as a satellite with a static IP address in the same range as the one of the communication server Virtual Appliance.
- You have received a licence code and an EID for Virtual Appliance via Mitel Connect (<https://connect.mitel.com>) with the help of vouchers and EID of the satellite (gateway EID).

Recommendation:

Download the latest MiVoice Office 400 software for Virtual Appliance and the satellite from the download server <https://pbxweb.aastra.com/swdl/SwDL> and store it. The master Virtual Appliance and the satellite must run with the same software release.

For the operation, proceed as follows:

1. Enter the IP address of your Virtual Appliance communication server in a browser.
→ The WebAdmin entry page is displayed.
2. Select the sales channel.
3. Upload the latest software release to the Virtual Appliance communication server.
→ A first start is executed with the sales channel-specific values and new software release.
4. Skip the loading of audio guide languages. You can comfortably do this later in WebAdmin via an FTP server.
5. Change the default password, select the system language and enter a location name for your communication system.
6. Skip the setup wizard. You can call it up later at any time from WebAdmin.
7. You are prompted for WebAdmin mode. Select *Expert mode*.
8. Change to the *System overview / Licences* (**Q=q9**) view then untick the *Online licence check* checkbox.
9. Enter the *Equipment ID (EID)* of Virtual Appliance, the *Gateway EID* of the Satellite and the *Licence code*.
10. Enable the *NTP service* in the *System / General* (**Q=ty**) view.
11. Change to the *Private networking / AIN / General* (**Q=3q**) view, add a satellite then enter the *Equipment ID* and the gateway satellite *IP address*.
→ The satellite is being added.
12. In the same view, on the added satellite's line, click the *WebAdmin* button.
→ A new browser window opens.
13. Log on to the satellite and change to the same *Private networking / AIN / General* (**Q=3q**) view. Select *AIN satellite* as *operating mode* and indicate the *Master IP address* of the Virtual Appliance communication server.
14. Restart the satellite directly in the popup window or in the *Maintenance / File management / System reset* (**Q=4e**) view.
15. Wait until the satellite is running again. Then change to the WebAdmin configuration of the master Virtual Appliance, refresh the *Private networking / AIN / General* (**Q=3q**) view and confirm the satellite.
→ Master and satellite are now networked.
16. Change to the *System / Media resources* (**Q=ym**) view. Make sure the media switch of the master Virtual Appliance is enabled and select the *VoIP mode*. Enable

the *Standard media switch* of the satellite, select the *VoIP mode* and allocate some audio channels to *VoIP*.

17. Restart the master Virtual Appliance in the *Maintenance / File management / System reset* (**Q =4e**) view, to make the changes take effect.
→ The master Virtual Appliance and the satellite restart.
18. After master and satellite are running again, log on master Virtual Appliance and change to the *System / Media resources* (**Q =ym**) view.
→ The state of the media switch of Virtual Appliance and the standard media switch has changed to *Operational*.
19. Now, carry out the configuration procedures to set up the numbering plan, the SIP providers, users, phones and DDIs. For this you can call up the set-up wizard or configuration wizard, or even use your own methods.

Setup wizard

The WebAdmin setup wizard takes you step by step through the setup of a basic configuration and is suitable for initial communication server setup. The setup wizard is automatically called up when a new communication server is installed. Logging on as administrator in WebAdmin (expert or default mode) allows you to also start the setup wizard directly from the WebAdmin navigation tree.

The setup wizard comprises the following steps:

1. Activating licences
2. Viewing the IP addressing
3. Configuring media resources
4. Setting up the numbering plan
5. Setting up SIP providers
6. Setting up users, terminals and DDIs
7. Setting up the auto attendant

For each step you can display a help page or see it in the lower part of the window where it is already displayed. You can skip individual steps of the setup wizard or exit the setup wizard at any time in order to return to the WebAdmin start page.

Configuration assistant

The configuration assistant goes further than the setup wizard and helps you to configure a communication system in sequence, from scratch. Logging on as administrator in WebAdmin (expert or default mode) allows you to display the configuration assistant on the WebAdmin start page.

The configuration assistant comprises the following steps:

1. Viewing the IP addressing
2. Regulating access control
3. Checking licences
4. Configuring media resources
5. Setting time and date
6. Checking network interfaces
7. Setting up SIP providers and accounts
8. Specifying user permissions
9. Create users and DDI numbers
10. Checking outgoing routing
11. Setting up the auto attendant
12. Setting up music on hold
13. Setting up an announcement service
14. Entering abbreviated dialling contacts
15. Saving configuration data

For each step, the upper half of the screen displays the configuration overview; the right-hand side contains notes and instructions about the step you have selected. The WebAdmin online help can be called up for further help.

You can skip individual configuration assistant steps or call up additional views of the WebAdmin navigation tree. To hide the configuration assistant again, untick the control box on the WebAdmin start page.

5. 6 Configuration Notes

The sections below contain information that may be useful before, during or after a configuration.

5. 6. 1 Licences

All the features (even those subject to licences) can be configured without a valid licence.

If you use a function or feature that requires a licence but do not actually have the relevant licence, a trial licence is acquired automatically; it is also shown in the overview of activated licences ([Licenses](#) [Q=q9](#) view). With a trial licence you can now use the function or feature free of charge for 60 days. The trial licence's expiry date is indicated under [Status](#). This procedure can only be used once for each function or feature.

Thereafter you must acquire a licence. The licence overview ([Tab. 16](#)) shows which trial licences are available.

All licences are contained in a licence code, which you can obtain from your authorised dealer. Each licence code can only be used for one communication server. To licence several communication servers, you will obtain separate licence codes to match the licence information of the individual communication server. If a communication system consists of several communication servers (e.g. in a AIN), normally only one licence code is required on the Master.

A new communication system must be activated first after commissioning. Otherwise, the communication server changes after 4 operating hours to limited operating mode.

Enter the licence code in the [Licences](#) ([Q =q9](#)) view.

If you have received a voucher (or with the help of the [Equipment ID](#)), you can also obtain the licence code via Mitel Connect <https://connect.mitel.com> (partner login required). You can find instructions about this in WebAdmin help.

If you wish to use Virtual Appliance in an AIN, you can choose whether licensing will be carried out via [Equipment ID](#). (see "[Virtual Appliance licenses](#)", page 53).



See also:

["Licences", page 43](#)

5. 6. 2 File management

You can gain access to the communication server's file system in WebAdmin.

- [Localization](#) ([Q =e6](#))
You can adapt the communication system to your country's specifications, with the help of localization. In this view language files can be manually or automatically loaded for Mitel 6700 SIP / 6800 SIP SIP phones via FTP server. Moreover, you can manually or automatically load the languages for the WebAdmin, Hospitality Manager and Self Service Portal user interface and online help, as well as an external numbering plan for the SIP connection via the FTP server.
- [File system state](#) ([Q =e3](#))
In this view you can see the thematically structured file system's memory load. In an AIN the file systems for all nodes can be viewed.
- [File browser](#) ([Q =2s](#))
With the file browser you have access to the communication server file system and create new folders as well as view, import, replace or delete files in the file system.



Note:

File management is only accessible for [Administrators](#) in [Expert mode](#).



See also:

You can find detailed information about the functions in WebAdmin help for the corresponding view.

5. 6. 3 System reset

Restart of the communication server

A restart reboots the entire communication system. The configuration data is preserved.

A new start can be achieved in the following ways:

- With WebAdmin in the maintenance settings
With the [Restart](#) button in the [System reset\(Q =4e\)](#) view.



Note:

- The restart is triggered immediately. All the active call and data connections are interrupted.
- With a restart via WebAdmin you only restart the Virtual Appliance communication server application. In some rare cases, it is necessary to also restart the corresponding virtual machines. Restarting the virtual machine also restarts the communication server.


Restarting the virtual machine

Should the virtual machine stop running (correctly) for whatever reason, it must be restarted. To do so proceed as follows:



Note:

Restarting the virtual machine also restarts the communication server. The restart is triggered immediately. All the active call and data connections are interrupted.

1. Start the vSphere client and enter the ESXi server user name and password.
2. Select your virtual machine from the list.
3. Choose via the [Restart guest](#) or click on .
 - The virtual machine restarts, together with the communication server.
 - After approx. two minutes, WebAdmin can again be used to access the Virtual Appliance communication server.

First start of the communication server

A first start has the effect of resetting the communication server from scratch. The system-specific data such as the system ID, system type, sales channel, licence code, software generation and IP address of the system are preserved.

A restart can be achieved in the following ways:

- With WebAdmin in the maintenance settings
With the [First start](#) button in the [System reset\(Q =4e\)](#) view.



Notes:

- A first start deletes all the configuration data already stored and replaces it with the default values of the sales channel. Therefore, back up your configuration data before a first start.
- The first start is triggered immediately. All the active call and data connections are interrupted.

Starting the communication server for the first time and resetting the sales channel

With the [First start and reset sales channel](#) button for the maintenance settings in the WebAdmin [System reset \(Q =4e\)](#) view, you have the possibility for a first start to also delete the sales channel and licence code. During the next start, you will be prompted for the sales channel and licence code. Note that the licence code is dependent on the sales channel and that you can no longer use the existing licence code.



Note:

This function is only accessible for Administrators in Expert mode.

5. 6. 4 Data backup

With a configuration data backup all the configuration data of the communication server is stored in a compressed file in ZIP format. You can let the configuration data backup run automatically ([Auto backup](#)) or as required ([Manual backup](#)).

You can automatically copy the backup files to an FTP server or e-mail them.

With an audio data backup all the audio data of the communication server is backed up in a compressed file in ZIP format. The backup of the audio data can only be done manually.

You can find the automatic data backup and distribution service settings in the WebAdmin [Maintenance / Data backup \(Q =um\)](#) view where you can also test the configuration. Moreover, in this view, you can see the automatically and manually created backup files and also restore or delete them.



Note:

The backup may consist of several files. They are compiled by the communication server and compressed into a ZIP file. During the Restore process the ZIP file is extracted by the communication server itself. To ensure the restore process to run smoothly, make sure you do not modify the ZIP file. Never extract or modify a backup file yourself.

5. 6. 4. 1 Auto backup

The automatic data backup function creates a backup of the configuration data at regular intervals and saves the backup files on the communication server's file management system.

The Auto Backup function creates a backup of the configuration data at daily, weekly and monthly intervals:

- Everyday at the set time a backup is created and stored in the [..\backup\day\](#) directory.

- When the week changes, a copy of the backup is stored in the `..\backup\week\` directory.
- When the month changes, a copy of the backup is stored in the `..\backup\month\` directory.

The backup directories are located on the file system of the communication server and are directly accessible via the [File browser](#) (**Q** =2s) or with an FTP connection.

A backup remains stored until the set storage time has expired; the .zip file is then deleted from the file system.

5. 6. 4. 2 Distribution service

You can use the distribution service to automatically copy the backup files to an FTP server or e-mail them.

- The e-mail distribution service sends a copy of each backup file created to a pre-configured e-mail address.
- The FTP distribution service stores a copy of each backup file created on an FTP server.

5. 6. 4. 3 Manual backup

Configuration and audio data must be stored separately and stored as .zip files on any data carrier you want. The configuration data is also backed up automatically as copy on the communication server file system.

Situations in which you have to create a manual backup:

- Before running a first-start of the communication server (a first start resets all the configuration data to their default values and deletes all audio data).
- Before making a fresh installation of the virtual machine with an OVA file. (Fresh installation resets all configuration data to the default value and deletes all audio data).
- Before and after any major configuration changes.

5. 6. 4. 4 Restore backup

The available configuration data and audio data backup files can be restored at any time.



Note:

- Restoring a backup irretrievably overwrites the current configuration data or audio data.

- Restoring a backup also resets the users' presence status, the personal routing settings and any activated CFUs to the backup status.
- Some configuration changes only take effect after a restart. The communication server is restarted after the configuration data is restored.



See also:

The procedure for creating and restoring a backup is described in detail in the WebAdmin help in the [Data backup](#) ([Q =um](#)) view.

5. 6. 5 Importing and exporting configuration data

You have the possibility to edit various configuration data outside WebAdmin, or to import configuration data from other MiVoice Office 400 series communication systems. Here you can create, with the help of the export function, a specific Excel file hereinafter referred to as [Export file](#). The export file contains several spreadsheets. Each sheet covers a specific configuration area. Subsequently, edit then re-import the export file. Only the data belonging to the view, on which you have activated the import function, will be imported. Example: The import function in the [Phone book](#) / [Public](#) view imports only the data from the export file located on the spreadsheet [Abbreviated dialling list](#).

Exception: The export function in the [Backup](#) view imports the data in all spreadsheets.

You can find the export function in the following views:

- [Overview](#) (user data and key configuration of the terminals)
- [Abbreviated dialling numbers](#)
- [PISN user](#)
- [Time controlled functions](#)
- [Ext./Int. Allocation](#)
- [LCR](#)
- [Blacklist](#)
- [CLIP based routing](#)
- [Data backup](#)



Note:

You can activate the [Replace existing configuration](#) option with the import function. Activate this function only if you are setting up the communication server from scratch. This action deletes all previously configured user data and all user associated settings such as DDI numbers, CDE targets, user group entries, assigned phones, configured keys, etc.

5. 6. 6 Mitel 6700 SIP / 6800 SIP phones

Prior to the registration, reset any phones that were already in operation back to the factory setting. For security reasons, delete the phone's MAC address in WebAdmin. This prevents problems during registration.

Use these procedures in the following cases:

- Assigning the phone to another user on the same system
- Transferring the phone to another system with the same software release
- Changing the software release from R4.0 SP1 to an earlier release
- Changing the communication server IP address.


6 Operation and Maintenance

This chapter describes maintaining the system and configuration data as well as updating the system software. Moreover, operations supervision is described with the event message concept.

6.1 Data Maintenance

6.1.1 File system of the communications server

The file system of the communication server comprises the system software, the software for system phones, the system and terminal configuration data, the audio data, system logs, data for WebAdmin, etc. With WebAdmin you have access to the file system via the menu item [File management](#). You can see the file system memory load and then load audio data, languages for the user interface and online help, language files for Mitel 6700 SIP / 6800 SIP-series SIP phones as well as an external numbering plan for SIP connection. Moreover, with the file browser you have the possibility to view, upload, replace or delete the folders and files in the file system.

Functions for backing up and restoring configuration data and audio data are available in the WebAdmin [Maintenance / Data backup](#) ( =um) view (see also ["Data backup"](#), page 89).



Note:

Modifying or deleting files on the file system of the communication server can result in a system that is no longer able to run.

6.1.2 Updating configuration data

There are system-wide, user-related and terminal-related configuration data:

- System-wide configuration data can only be modified with WebAdmin.
- Terminal configuration data such as key assignments or ringing melodies can be modified either directly on the terminal, with Self Service Portal or with WebAdmin. With some system phones configuration is also possible using the web user interface or with the help of configuration files.
- User-related configuration data such as private contacts or CFUs is valid for all the terminals assigned to the user and can be configured using WebAdmin, partly via Self Service Portal, or directly on the terminal itself.

Access to the configuration data via WebAdmin is regulated by a User Access Control with user accounts, authorization profiles and authorization levels. More information can be found in the Chapter ["User access control"](#), page 76.

6. 2 Update Software

6. 2. 1 System software

The communication server software is normally updated with WebAdmin. In some exceptional cases, it is necessary to reinstall the entire virtual machine via an OVA file (see [page 63](#)).



Notes:

Fresh installation with an OVA file resets all configuration data to the default values and deletes all audio data. First create a backup of the configuration and audio data (see Chapter "[Data backup](#)", [page 89](#)).

The firmware for MiVoice 5300/MiVoice 5300 IP, Mitel 600 DECT phones, DECT phone Office 135/135pro, DECT radio units SB-4+/SB-8/SB-8ANT and WebAdmin is also available in the system software.



Tip

The communication server software version can be displayed as follows on MiVoice 5300/MiVoice 5300 IP phones:

1. Access the configuration menu [Settings](#).
2. Long-click on the * key

Information can be retrieved on /Mitel 6700 SIP / 6800 SIP SIP phones as well as on /Mitel 600 DECT DECT phones via the menu.

Depending on the phone, additional information is displayed.

Providing the system software and licence code

The new system software and the relevant licence code are provided by your sales dealer. In most cases you will download the software from an internet site specified by your sales partner. You will also receive a voucher. With this you can generate the new licence code through the Mitel Connect internet portal <https://connect.mitel.com> and transmit it to your communication system. You need a login to access Mitel Connect (user name and password).

Load new system software with WebAdmin

New system software can conveniently and safely be loaded on the communication server file system in the WebAdmin [Maintenance](#) / [System software](#) ([Q=m7](#)) view. The activation point of the new software is selectable. (Exception: The activation time on the satellites AIN always depends on the master's demand).

In newly delivered systems it is possible to directly load new system software after choosing the sales channel.

**Notes:**

Most times a new licence code is also required for new system software. You can also install and start up the new software without specifying the licence code. However, once you have started to use the software you will need to enter the licence code within 4 hours; otherwise the communication server will switch over to the restricted operating mode. In this mode, only the basic functions of the communication server are available.

**See also:**

A detailed description of the software upload procedure with WebAdmin is available in the online help.

6.2.2 Firmware for corded system phones

The communication server's software package contains the software for certain system phones (DSI and IP), which is updated in each case along with the system software. For other system phones (SIP) the firmware is located on a firmware server.

The Office 10, Office 25 and MiVoice 5360 system phones do not have their own memory. All other system phones have a Flash memory.

SIP system phones

The firmware for Mitel 6700 SIP / 6800 SIP series SIP phones as well as for Mitel BluStar clients and Mitel Dialer is preferably located on a firmware server. In the WebAdmin [Configuration / IP network / Firmware server](#) (**Q=yv**) view Mitel FTP servers are already predefined. Various firmware releases are stored on this server, according to different communication server software releases. The predefined entry in WebAdmin is adjusted to each communication server release if necessary. You can also indicate the address of another firmware server.

Whenever the phones are started the phone firmware version is compared with the version on the firmware server. If the versions differ, the firmware is downloaded from the firmware server to the phones.

DSI and IP system phones with Flash memory

The flash memory contains the boot software and the application software. DSI phones also have an area with the interface software.

The firmware for the phones Office 35, Office 45, MiVoice 5370, MiVoice 5380 as well as for all MiVoice 5300 IP series IP phones is contained in the communication server's system software. The firmware versions are compared when the phones are started. If the versions differ, the firmware is downloaded from the communication server to the phones. When updating the system software this can take several minutes for each DSI phone.

The expansion key modules MiVoice M530 and MiVoice M535 also have a flash chip containing firmware. The update mechanism is the same as the one described above. However a local power supply is always required (Power over Ethernet is also possible with IP terminals).

6. 2. 3 Firmware System MiVoice Office 400 DECT

DECT radio units SB-4+, SB-8 and SB-8ANT

The Flash memory on the radio units contains an area that cannot be modified. It is used for starting the radio unit and receiving the firmware for the radio unit.

The actual firmware for the radio unit is contained in the communication server's system software. The loaded firmware is tested when the radio unit starts up. If the loaded firmware is not identical to the version in the system software, the firmware will be downloaded from the communication server on to the radio unit and stored in the Flash memory of the radio unit.

Cordless DECT phones of the Mitel 600 DECT family

The firmware for the Mitel 600 DECT cordless phones, is updated via radio (Air-Download). The update can be enabled or disabled individually for each cordless phone using the menu [System - Download server](#) on the cordless phones. If the cordless phone is logged on to several systems, this menu defines which system the firmware update is relevant to.

There is only one firmware for the cordless Mitel 600 DECT series phones. It is included in the communication server's software package and stored in the file system of the communication server.

DECT cordless phones Office 135 and Office 160

The firmware for the Office 135 and Office 160 cordless phones, is updated via radio (Air-Download). This requires the cordless phone to be logged on to system A.

The memory in the cordless phones is a Flash memory. The Flash memory contains an area that cannot be modified. This area contains the cordless phone's boot software.

The firmware for the cordless phones is contained in the communication server software package. The loaded firmware is tested when the cordless phone starts up. If the loaded firmware is not identical to the version in the system software, the system will initiate an Air-Download. The firmware is loaded from the communication server onto the cordless phones via radio and stored in the Flash memory.

To be able to run an Air-Download, you need to ensure that the cordless phone contains a functional firmware.

The cordless phone remains fully functional during an Air-Download. The new loaded firmware is activated only once the Air-Download has been successfully completed. A restart is carried out on the cordless phone.

6. 2. 4 Firmware System Mitel SIP-DECT

With Mitel SIP-DECT and Mitel 600 DECT series phones comprehensive solutions can be provided for wireless telephony on IP-based networks. This requires RFP radio

units that can be directly connected to other VoIP devices on the LAN.

OpenMobilityManager (OMM) is installed on one of the RFP radio units or on a PC, which constitutes the management interface for the Mitel SIP-DECT solution.

Mitel 600 DECT phones have loaded a different firmware in an Mitel SIP-DECT system from the one in an MiVoice Office 400 DECT system.

The firmware for the RFP radio units and for the Mitel 600 DECT cordless phones is preferably located on a firmware server. Automatic firmware update is then possible. The WebAdmin [Configuration](#) / [System](#) / [DECT/SIP-DECT](#) / [SIP-DECT](#) ([Q=9y](#)) view contains a global predefined Mitel FTP server. Various firmware versions are stored on this server, according to different communication server software releases. The predefined entry in WebAdmin is adjusted to each communication server release if necessary. You can also indicate the address of another firmware server.

Firmware designations for Mitel SIP-DECT (examples):

aafon6xxd.dnld:

Firmware for Mitel 600 DECT cordless DECT phones.

iprfp3G.dnld:

Firmware for OpenMobilityManager (OMM).

6.3 Operations supervision

6.3.1 Event message concept

The system generates an event message every time an event or error occurs. The event tables are used to specify how often an event message of a particular type may be generated by the system over a given period before the event message is sent to the allocated signal destinations.

There are 7 event tables that can be allocated to 8 signal destinations:

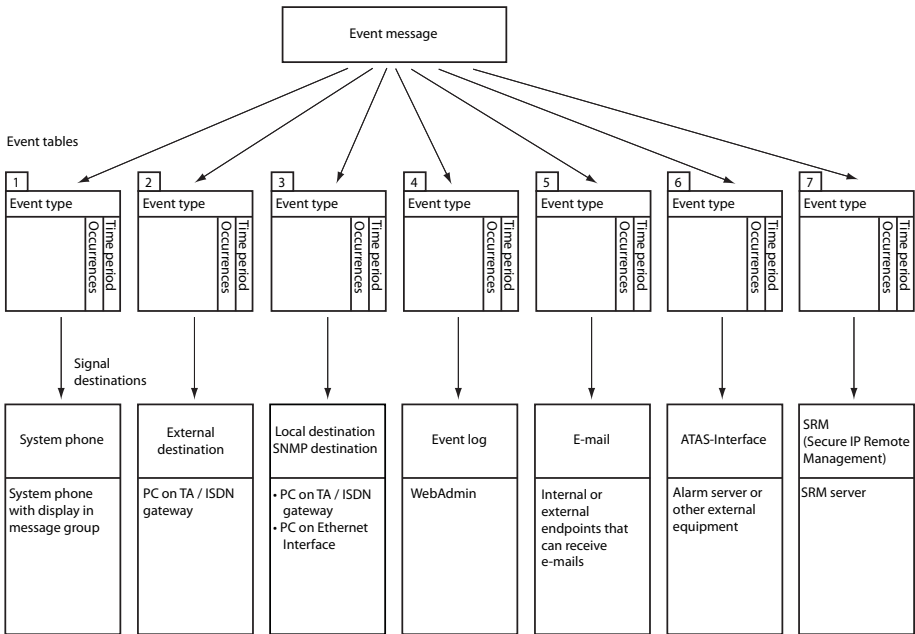


Fig. 10 Distribution principle for an event message

6.3.1.1 Event types

Event messages have a certain severity level: *Normal* (blue), *Serious* (yellow) and *Critical* (red). Many event messages have both a negative impact (error occurred) and a positive impact (error corrected). Some event messages have no impact and, thus, no match. Severity level and impact are indicated in the event table.

If an SRM server is indicated as signal destination, the event message severity level results in a change of system status. This can be seen in the SRM agent and is displayed with the corresponding colour (see also section "SRM destination", page 121).

Tab. 24 Event types, in alphabetical order

Event message	Trigger condition	Details ¹⁾	Severity
<i>ATAS: Connection established</i>	ATAS: connection (re) established	date, time	critical (positive, with match)
<i>ATAS: Connection lost</i>	ATAS: connection lost	Cause (0: Logoff, 1: missing cycle signal), date, time	critical (negative, with match)
<i>BluStar Client back within the licence limit</i>	A sufficient number of licences is now available again for BluStar clients. Parameter 1: 0 (not used) Licence type: 0 and 1: (not used), 2: BluStar CTI, 3: BluStar Softphone, 4: BluStar video option, 5: BluStar Presence option	Parameter 1, licence type, total purchased licences, date, time	Serious (positive, with match)
<i>Card in service</i>	A card that was previously out of service is back in service again.	Number of the expansion slot, date, time	critical (positive, with match)
<i>Card out of service</i>	A card previously in operation has stopped functioning.	Number of the expansion slot, date, time	critical (negative, with match)
<i>Card reset</i>	A reset was carried out for one card	Number of the expansion slot, date, time	Normal (without match)
<i>Charge counter overflow</i>	Individual cumulative counter or cost centre counter overflow	Cause (0: User / 1: Cost centre / 2: Exchange line / 3: Room), number, date, time	Serious (without match)
<i>CL printer available again</i>	Printout on the system printer available once again	Date, time	Serious (positive, with match)
<i>CL printer blocked</i>	<ul style="list-style-type: none"> No response from system printer for past 4 minutes Printer out of paper or switched off 	Interface, interfaces/card number, port number, date, time	Serious (negative, with match)
<i>Compatible PMS application</i>	The external hotel management system (PMS application) is suitable for communicating with the communication server.	Date, time	critical (positive, with match)
<i>Configuration template available</i>	The missing configuration template for a Mitel SIP terminal is now available in the communication server file system.	Date, time	Serious (positive, with match)

Event message	Trigger condition	Details ¹⁾	Severity
<i>Connection to IP remote management (SRM) failed</i>	IP remote management connection set up (SRM = Secure IP Remote Management) has failed. Cause parameter: 1: Connection attempt failed, 2: Authentication failed, 3: File upload rejected	Cause, date, time	Normal (negative, with match)
<i>Connection to IP remote management (SRM) restored</i>	IP remote management connection has been (SRM = Secure IP Remote Management) successfully restored.	Date, time	Normal (positive, with match)
<i>Connection to PMS system established</i>	A connection with a hotel management system (PMS system) has now been successfully established.	Date, time	critical (positive, with match)
<i>Connection to PMS system failed</i>	An unsuccessful attempt was made to establish a connection with a hotel management system (PMS system). Reason: 1: Call rejected, 2: Destination unobtainable, 3: Destination busy, 4: Connection timeout, 5: Wrong address, 6: Unknown error	Error, date, time	critical (negative, with match)
<i>CPU2 applications card Data communication out of service</i>	Data communications with the CPU2 applications card have been interrupted for an unusually long period of time (> 1 hour) due to an error (after a Windows update or for other reasons).	Date, time	critical (negative, with match)
<i>CPU2 applications card Data communications back in service</i>	Data communications with the CPU2 applications card have been restored.	Date, time	critical (positive, with match)
<i>Creation instance on backup communication server failed</i>	The backup communication server was unable to create or modify a user or terminal instance with the received configuration data. Note: This event message is generated by the backup communication server.	Instance type (0: User, 1: terminal), user number or terminal ID, date, time	critical (negative, with match)
<i>Creation instance on backup communication server successful</i>	The backup communication server was able (following one or more previous failed attempts) to create or modify a user or terminal instance with the received configuration data. Note: This event message is generated by the backup communication server.	Instance type (0: User, 1: terminal), user number or terminal ID, date, time	critical (positive, with match)
<i>CSTA sessions within the licence limit again</i>	<i>CSTA Sessions</i> licences are now available again.	Number of licences, date, time	Serious (positive, with match)
<i>CTI first party Connection established</i>	The ATPC3 first-party link was (re)established	User number, date, time	critical (positive, with match)

Event message	Trigger condition	Details ¹⁾	Severity
<i>CTI first party Connection lost</i>	The ATPC3 first-party link was interrupted because the cycle signal is missing.	User number, date, time	critical (negative, with match)
<i>CTI third party: Connection established</i>	The ATPC3 third-party link was (re)established	Date, time	critical (positive, with match)
<i>CTI third party: Connection lost</i>	The ATPC3 third-party link was interrupted	Cause (0: Logoff, 1: missing cycle signal), date, time	critical (negative, with match)
<i>Definitive activation licence missing</i>	The initial temporary activation of the communication server for a certain duration (e.g. 90 days) was started. After this period, the communication server switches to restricted operating mode (see "Restricted operating mode", page 52).	Date, time	critical (negative, with match)
<i>Definitive activation licence now present</i>	A licence code with a definitive activation licence was entered.	Date, time	critical (positive, with match)
<i>Dual Homing back within the licence limit</i>	There are now enough licences available for registering SIP phones in the Mitel 6700 SIP / 6800 SIP series on a backup communication server. Note: This event message is generated by the backup communication server.	Date, time	Serious (positive, with match)
<i>E-mail successfully sent</i>	The system has now successfully sent an e-mail. Meaning of the parameter values in <u>Tab. 25</u>	Cause/action=0000, e-mail client, additional information, date, time	critical (positive, with match)
<i>ESME reachable</i>	The LAN connection between the SMSC and the ESME is now available	IP address, date, time	critical (positive, with match)
<i>ESME unreachable</i>	The LAN connection between the SMSC and the ESME is interrupted	IP address, date, time	critical (negative, with match)
<i>Ethernet activated again</i>	The overload on the Ethernet interface no longer exists. The interface has been reactivated.	Date, time	Normal (positive, with match)
<i>Ethernet deactivated due to high load</i>	The system has detected an overload on the Ethernet interface. The interface is temporarily deactivated.	Date, time	Normal (negative, with match)

Event message	Trigger condition	Details ¹⁾	Severity
<i>External auxiliary power supply failed</i> (Mitel 470 only)	The external auxiliary power supply to the communication server has failed. If the auxiliary power supply unit has been used for redundant operation, there are no short-term limitations. If the auxiliary power supply unit has been used to increase the power supply, the internal power supply unit overflow must be calculated.	Date, time	Normal (negative, with match)
<i>External auxiliary power supply in service</i> (Mitel 470 only)	The external auxiliary power supply to the communication server is working.	Date, time	Normal (positive, with match)
<i>External event message destination not reachable</i>	External signal destination not automatically reachable	Cause (0: Busy /1: Not available /2:(not used), 2: Barred /3: not defined), date, time	Serious (negative, with match)
<i>External event message destination reachable</i>	External signal destination is now reachable	Date, time	Serious (positive, with match)
<i>Fan failure</i> (Mitel 415/430 only)	The fan is jammed or defective or the connection is no longer making contact. • Parameter = 0: No more fans in operation. → Risk of overheating: Replace defective fan.	Parameter, date, time	critical (negative, with match)
<i>Fan failure</i> (Mitel 470 only)	The fan is jammed or defective or the connection is no longer making contact. • Parameter = 0: No more fans in operation. → Risk of overheating: System shut down after 2 minutes. → Replace defective fan. • Parameter = 1: Only one fan left in operation. → System still running with only one fan. → Replace defective fan.	Parameter, date, time	critical (negative, with match)
<i>Fan in operation</i> (Mitel 415/430 only)	The fan is back in service again after a failure. • Parameter = 0: Fan back in service again.	Parameter, date, time	critical (positive, with match)
<i>Fan in operation</i> (Mitel 470 only)	The fan is back in service again after a failure. • Parameter = 0: A fan is back in service again. • Parameter = 1: Second fan back in service again.	Parameter, date, time	critical (positive, with match)
<i>FIAS command buffer full</i>	The command buffer to the PMS interface is full.	Date, time	critical (negative, with match)

Event message	Trigger condition	Details ¹⁾	Severity
<i>FIAS interface usable again</i>	The command buffer to the PMS interface is back below the critical limit.	Date, time	critical (positive, with match)
<i>G.729 Codecs within the licence limit again</i>	Free G.729 codecs are once again available for connections.	Date, time	Serious (positive, with match)
<i>Inactive radio unit port</i>	Radio unit not responding Reason: 0: Startup running, 1: Not registered, 2: Various nodes, 3: Port not permitted, 4: Local power supply, 5: Not connected, 6: Port reset, 7: Startup error, 8: Unknown error	Card number, port number, radio unit ID/reason, date, time	Serious (negative, with match)
<i>Incompatible PMS application</i>	The external hotel management system (PMS application) is not suitable for communicating with the communication server.	PMS SW version, PMS interface version, PMS interface driver version, date, time	critical (negative, with match)
<i>Incorrect or no wiring adapter (Mitel 415/430 only)</i>	There is no wiring adapter in the wiring adapter slot or the wiring adapter fitted is unsuitable.	Slot number, date, time	Critical (without match)
<i>Insufficient bandwidth</i>	An user in an AIN is trying to set up a connection and the bandwidth currently available with the WAN link is insufficient.	Link ID, WAN link name, available bandwidth in Kbit/s, date, clock	Normal (without match)
<i>Internal event message destination not reachable</i>	Local output blocked or not available	Cause (0: Busy /1: Not available /2:(not used), 2: Barred /3: not defined), date, time	Serious (negative, with match)
<i>Internal event message destination reachable</i>	Local output available once again	Date, time	Serious (positive, with match)
<i>Internal power supply unit failed (Mitel 470 only)</i>	The internal power supply unit of the communication server has failed. If the auxiliary power supply unit has been used for redundant operation, there are no short-term limitations. If the auxiliary power supply unit has been used to increase the power supply, the external power supply unit overflow must be calculated.	Date, time	Normal (negative, with match)
<i>Internal power supply unit in service (Mitel 470 only)</i>	The internal power supply unit of the communication server is in service.	Date, time	Normal (positive, with match)

Event message	Trigger condition	Details ¹⁾	Severity
<i>IP address added to the DoS black list</i>	A DoS attack has taken place beyond the maximum configured admissible registration attempts or transactions. The IP address concerned has been included in the black list and will remain blocked for a set period.	IP address, Cause (0: Registration / 1: Too many transactions / 2: No session / 3: modified message), date, time	Normal (negative, with match)
<i>IP address changed: Regenerate TLS certificates</i>	The IP address of the communication server has changed. The TLS certificates have to be regenerated. For terminals downcircuit from a NAT without ALG the public NAT gateway address has to be configured.	Date, time	Normal (without match)
<i>IP address removed from the DoS black list</i>	An IP address added previously due to a DoS (Denial of Service) attack was again removed from the black list and is no longer blocked.	IP address, date, time	Normal (positive, with match)
<i>IP phone: Connection lost</i>	An IP system phone is no longer connected to the communication server.	User number, terminal ID, date, time	Serious (negative, with match)
<i>IP phone: Connection re-established</i>	An IP system phone has re-established the connection to the communication server.	User number, terminal ID, date, time	Serious (positive, with match)
<i>IP system phone licence is now available</i>	A sufficient number of licences is now available again for MiVoice 5361 IP / 5370 IP / 5380 IP.	Date, time	Serious (positive, with match)
<i>Language file download failed</i>	The downloading of a language file via FTP server for an MitelSIP terminal has failed.	Parameter 1: FTP server address, Parameter 2: Language file type and name, date, time	Normal (negative, with match)
<i>Language file download successful</i>	The downloading of a language file via FTP server for an Mitel SIP terminal has been successfully completed.	Parameter 1: FTP server address, Parameter 2: Language file type and name, date, time	Normal (positive, with match)
<i>LCR on alternative network provider</i>	Automatic switch from primary network provider to secondary network provider using LCR function	Provider ID, date, time	Normal (without match)
<i>Licence for integrated mobile/external phone available</i>	A sufficient number of licences is now available again for integrated mobile/external phones.	Date, time	Serious (positive, with match)
<i>Licence for PMS interface available</i>	The <i>Hospitality PMS Interface</i> licence or a sufficient number of <i>Hospitality PMS Rooms</i> licences are now available.	Date, time	Serious (positive, with match)

Event message	Trigger condition	Details ¹⁾	Severity
<i>Licence invalid, restricted operating mode 4 hours after restart</i>	The system software loaded requires a software release licence. Without this licence the system software's functionality is severely restricted 4 hours after the restart.	Date, time	Normal (without match)
<i>Licences for offline operations expired</i>	The maximum period of 36 hours for the temporary licence activation has expired.	Date, time	Critical (without match)
<i>Link to gateway satellite lost</i> (Virtual Appliance only)	The communication server has lost the link to the gateway satellite. Without this link, the communication server switches to restricted operating mode after xx hours.	Number of hours until restricted operating mode, date, time	critical (negative, with match)
<i>Link to gateway satellite restored</i> (Virtual Appliance only)	The communication server has been able to restore the link to the gateway satellite.	Date, time	critical (positive, with match)
<i>Link to the licence server (SLS) has failed</i> (Virtual Appliance only)	It has been impossible for a long time to set up a link to the licence server. The system switches to restricted mode after a variable timeout (max. 72 hours).	Date, time	critical (negative, with match)
<i>Link to the licence server (SLS) has restored</i> (Virtual Appliance only)	It has been possible to restore a link to the licence server.	Date, time	critical (positive, with match)
<i>Local supply error on radio unit</i>	Local power supply of a SB-4+ / SB-8 / SB-8ANT radio unit failed or unavailable	Card number, port number, date, time	critical (negative, with match)
<i>Local supply on radio unit available</i>	Local power supply of a SB-4+ / SB-8 / SB-8ANT is now again available	Card number, port number, date, time	critical (positive, with match)
<i>Mains voltage failure</i>	Event message once mains power is restored • Mains power has failed more frequently than entered in the trigger table	Date, time	Normal (without match)
<i>Malfunction</i>	A hardware or software error has occurred. The error ID can help Support to pinpoint the possible cause of the error.	Error ID, date, time	Normal (without match)
<i>Mitel Dialer within the licence limit again</i>	<i>Mitel Dialer</i> user licences are now available again.	Date, time	Normal (positive, with match)
<i>Mitel SIP terminals within the licence limit again</i>	<i>Mitel SIP Terminals</i> and <i>Mitel 8000i Video Options</i> licences are now available.	Parameter 1=1: <i>Mitel SIP Terminals</i> licence, Parameter 2=1: <i>Mitel 8000i Video Options</i> licence, date, time	Serious (positive, with match)

Event message	Trigger condition	Details ¹⁾	Severity
<i>Monitor event</i>	Monitor event	Monitor Type, Date, Time	Normal (without match)
<i>No configuration template</i>	A configuration template for a Mitel SIP terminal is missing in the communication server file system. Without the configuration template, no configuration file can be generated for this terminal type.	No configuration template, date, time	Serious (negative, with match)
<i>No DECT DSP channels available</i>	DECT channels on DSP-0x overloaded	Date, time	Normal (without match)
<i>No DTMF receiver available for integrated mobile/external phones</i>	A permanent DTMF receiver (for detection suffix dialling function codes) could not be assigned to an integrated mobile/external phone with enhanced functionality.	BCS Ref., date, time	Normal (without match)
<i>No other system clone detected</i> (only Virtual Appliance)	The clone detection service on the licence server (SLS cloud) could not find any other clone (system with the same EID) for a long time (24 hours).	Date, time	critical (positive, with match)
<i>No response from network</i>	No answer to Call Setup on BRI-T/PRI interface	Port number of the exchange line circuit, date, time	Normal (without match)
<i>No response from user</i>	No answer to incoming DDI call from user on S bus or DSI	DDI No., date, time	Normal (without match)
<i>Node: Connection lost</i>	A node is not connected to the Master for a certain amount of time (configurable).	Node number, date, time	critical (negative, with match)
<i>Node: Connection re-established</i>	A node is reconnected with the Master for a certain amount of time (configurable) after an interruption.	Node number, date, time	critical (positive, with match)
<i>Not enough licences for integrated mobile/external phones</i>	The connection setup with an integrated mobile/external phone has failed because the number of configured mobile/external phones is greater than the number of licences available. All the integrated mobile/external phones remain blocked until a sufficient number of licences are available.	Number of licences, number of configured mobile/external phones, date, time	Serious (negative, with match)
<i>NTP: Time synchronisation failed</i>	Time synchronization via the NTP server (NTP = Network Time Protocol) has failed.	Date, time	Serious (negative, with match)

Event message	Trigger condition	Details ¹⁾	Severity
<i>NTP: Time synchronisation re-established</i>	Time synchronization via the NTP server (NTP = Network Time Protocol) has been restored.	Date, time	Serious (positive, with match)
<i>Outgoing call rejected</i>	Call rejected by the network <ul style="list-style-type: none"> On any line: error code 34 On required line group: error code 44 	Port number of the exchange line circuit, cause, date, time	Normal (without match)
<i>Overheat</i> (Mitel 415/430 only)	The temperature inside the communication server is too high. The appropriate measures must be taken immediately to improve the heat dissipation, e.g. by providing the required clearances, lowering the ambient temperature or installing the fan from the rack-mounting set (Mitel 430 only).	Card number, temperature, date, time	critical (negative, with match)
<i>Overheat</i> (Mitel 470 only)	The temperature inside the communication server is too high. Appropriate measures must be taken immediately to improve heat dissipation. Measures are automatically adopted, depending on where the overheating occurs: FXO and FXS interface card: <ul style="list-style-type: none"> the ports are deactivated in groups of 4 ports. Once they have cooled down below a defined card-specific value, the ports are automatically reactivated group by group. CPU2 applications card <ul style="list-style-type: none"> The card will be completely deactivated. Once it has cooled down below a defined value, the card is automatically reactivated. Internal power supply unit PSU2U or call manager card CPU1: <ul style="list-style-type: none"> the communication server will be shut down completely. Notes: <ul style="list-style-type: none"> To prevent the system from overheating, no more than 30% of the FXS ports should be active simultaneously per 32FXS card and no more than 50 FXS ports per system. PRI, BRI and DSI cards do not have temperature sensors and are therefore never deactivated due to overheating. 	Card number, temperature, date, time	critical (negative, with match)
<i>Overload detected on USB port (CPU2)</i> (Mitel 470 only)	A (current) overload was detected on one of the USB interfaces on the applications card (CPU2). Note: The maximum current input at the USB interfaces varies:	Date, time	Normal (without match)
<i>Port out of service</i>	A port previously in operation has stopped functioning.	Number of the slot, relevant port number, date, time	Normal (without match)

Event message	Trigger condition	Details ¹⁾	Severity
<i>Possible clone detected for your system</i> (Virtual Appliance only)	The clone detection service on the licence server (SLS cloud) has detected a possible clone (system with the same EID).	Date, time	critical (negative, with match)
<i>QSIG licence limit reached</i>	Maximum number of licensed outgoing connections with QSIG protocol exceeded	Route number, user number, date, time	Normal (without match)
<i>Radio unit port active</i>	The radio unit is responding again	Card number, port number, date, time	Serious (positive, with match)
<i>Register error</i>	<ul style="list-style-type: none"> Card not fitted Card not logged on Card defective 	Card number, date, time	Normal (without match)
<i>Remote maintenance disabled</i>	Remote maintenance has been deactivated	Date, time	Normal (positive, with match)
<i>Remote maintenance enabled</i>	The remote maintenance has been activated (The report is output unfiltered on local destinations).	Date, time	Normal (negative, with match)
<i>Restricted operating mode disabled</i>	Restricted mode could be disabled again.	Date, time	critical (positive, with match)
<i>Restricted operating mode enabled</i>	<p>The communication server has switched to restricted mode.</p> <p>Cause: 0: No valid licence. 1: Link to gateway satellite lost. 2: Max. duration without link to licence server reached. 3: Your system clone confirmed. 4: Licence check mode mismatch in SLS and MiVo400. 5: Support mode enabled.</p>	Cause, date, time	critical (negative, with match)
<i>Satellites missing after supervision time</i>	After an AIN update (Master and all satellites) some satellites no longer have a connection to the Master.	Total satellites missing, Satellites rolled back, Date, Time	Normal (without match)
<i>Send e-mail failed</i>	<p>The system was unable to send an e-mail because an error occurred.</p> <p>Meaning of the parameter values in Tab. 25</p>	Cause/action, e-mail client, additional information, date, time	critical (negative, with match)
<i>SIMPLE/MSRP back within the licence limit</i>	There are now enough licences available for using the MSRP and/or SIMPLE protocol for users.	Date, time	Serious (positive, with match)

Event message	Trigger condition	Details ¹⁾	Severity
<i>SIP account available</i>	The SIP account has successfully registered with the SIP provider.	Provider, account, date, time	critical (positive, with match)
<i>SIP account not available</i>	The SIP account cannot register with the SIP provider for a certain reason (0: Provider unobtainable / 1: no permission). The event is triggered only if the parameter <i>Registration required</i> is configured to <i>Yes</i> .	Provider, account, date, time	critical (negative, with match)
<i>SMS gateway reachable</i>	External SMS gateway again reachable	Date, time	critical (positive, with match)
<i>SMS gateway unreachable</i>	External SMS gateway unobtainable by network provider or incorrectly configured	Date, time	critical (negative, with match)
<i>Software upgrade IP system phone failed</i>	The software update of an MiVoice 5361 IP / 5370 IP / 5380 IP has failed for the stated reason.	User number, terminal ID, reason, date, time	critical (negative, with match)
<i>Software upgrade IP system phone successful</i>	The software update of an MiVoice 5361 IP / 5370 IP / 5380 IP has now been successfully completed after unsuccessful attempt(s).	User number, terminal ID, date, time	critical (positive, with match)
<i>Software upload</i>	During an upload in system status: <ul style="list-style-type: none"> • <i>Update running</i> • <i>Supervision running</i> • <i>Normal operation</i> 	Parameter 1: <ul style="list-style-type: none"> • 0: "New communication server software loaded, starting..." • 1: New communication server software crashed, roll-back performed • 3: New communication server software started and running well Date, time	Normal (without match)
<i>Standard SIP terminals within the licence limit again</i>	<i>SIP Terminals</i> and <i>Video Terminals</i> licences are now available.	Parameter 1=1: <i>SIP Terminals</i> licence, Parameter 2=1: <i>Video Terminals</i> licence, date, time	Serious (positive, with match)
<i>Synchronisation loss on trunk</i>	A BRI/PRI interface entered in the clock pool has lost the system clock	Port number, date, time	Serious (negative, with match)

Event message	Trigger condition	Details ¹⁾	Severity
<i>Synchronisation re-established</i>	Synchronization with the network has been restored on at least one BRI/PRI interface.	Date, time	Serious (positive, with match)
<i>Synchronisation with backup communication server failed</i>	The primary communication server was unable to transmit the configuration data to the backup communication server. Note: This event message is generated by the primary communication server.	Backup communication server ID, date, time	critical (negative, with match)
<i>Synchronisation with backup communication server successful</i>	The primary communication server was able (following one or more previous failed attempts) to transmit the configuration data to the backup communication server. Note: This event message is generated by the primary communication server.	Backup communication server ID, date, time	critical (positive, with match)
<i>Synchronization on trunk re-established</i>	A BRI/PRI interface entered in the clock pool has been successfully re-synchronized with the system clock.	Port number, date, time	Serious (positive, with match)
<i>System memory usage below the critical range again</i>	The memory usage in the file system for a specific purpose has again fallen below a defined (<i>Serious</i> severity level) or critical (<i>Critical</i> severity level) value. Purpose (file type ID): 0: File system, 1: Application, 2: Crash-Log, 3: Monitor-Log, 4: Announcement service, 5: Voice mail, 6: Music on hold, 7: Data backup, 8: Hospitality/Accommodation, 9: User folder	File type ID, memory usage in %, date, time	Serious / Critical (positive, with match)
<i>System memory usage over the critical range</i>	The memory usage in the file system for a specific purpose has exceeded a defined (<i>Serious</i> severity level) or critical (<i>Critical</i> severity level) value. Purpose (file type ID): 0: File system, 1: Application, 2: Crash-Log, 3: Monitor-Log, 4: Announcement service, 5: Voice mail, 6: Music on hold, 7: Data backup, 8: Hospitality/Accommodation, 9: User folder	File type ID, memory usage in %, date, time	Serious / Critical (negative, with match)
<i>System overload</i>	Network access attempted when all lines are seized or the system is overloaded.	Route number, user number, date, time	Normal (without match)
<i>System phone in service again</i>	A system phone on the DSI bus is ready for operation again.	Card number, port number, user number, date, time	critical (positive, with match)

Event message	Trigger condition	Details ¹⁾	Severity
<i>System phone out of service</i>	A system phone on the DSI bus is defective or was disconnected.	Card number, port number, user number, date, time	critical (negative, with match)
<i>Temperature within normal range again</i>	Following overheating, the temperature inside the communication server is back in the normal operating range.	Card number, temperature, date, time	critical (positive, with match)
<i>Temporary activation expires on</i>	Reminder of the missing, definitive activation licence following connection set-up with the communication server.	Expiration date [DD.MM.YYYY], date, time	Normal (without match)
<i>Terminal power supply: Overload (Mitel 470 only)</i>	Rated output slightly exceeded for > 4 s.	Date, time	critical (negative, with match)
<i>Terminal power supply: Shutdown (Mitel 470 only)</i>	Rated output clearly exceeded for 4 s	Date, time	critical (negative, with match)
<i>Terminal power supply: Switching back on (Mitel 470 only)</i>	The power supply to the terminals was switched back on after deactivation due to overflow.	Date, time	critical (positive, with match)
<i>Terminal power supply: Within normal range again (Mitel 470 only)</i>	The power supply to the terminals is back in the normal rated output range following a slight, preceding overflow.	Date, time	critical (positive, with match)
<i>Test event message</i>	The configuration of message destinations can be tested with this event message.	Date, time	Serious (without match)
<i>The communication server has been restarted</i>	The communication server was restarted manually or automatically due to an error.	Date, time	Critical (without match)
<i>The licence limit for BluStar clients has been reached.</i>	A BluStar client was unable to register because there are too few licences for this client type. Parameter 1: 0 (not used) Licence type: 0 and 1: (not used), 2: BluStar CTI, 3: BluStar Softphone, 4: BluStar video option, 5: BluStar Presence option	Parameter 1, licence type, total purchased licences, date, time	Serious (negative, with match)
<i>The licence limit for CSTA sessions has been reached</i>	An application is unable to set up a CSTA session to monitor/check a terminal because there are too few <i>CSTA Sessions</i> licences available.	Max. number of licences, date, time	Serious (negative, with match)

Event message	Trigger condition	Details ¹⁾	Severity
<i>The licence limit for Dual Homing has been reached</i>	A SIP phone in the Mitel 6700 SIP / 6800 SIP series has attempted to register on a backup communication server and not enough licences are available. Note: This event message is generated by the backup communication server.	Date, time	Serious (negative, with match)
<i>The licence limit for G.729 codecs has been reached.</i>	An attempt was made to set up a G.729 connection, but there are no free G.729 codecs available at present.	Max. number of licences, date, time	Serious (negative, with match)
<i>The licence limit for Mitel Dialer has been reached</i>	Mitel Dialer could not be linked to a user because too few licences are available.	Total purchased licences, date, time	Normal (negative, with match)
<i>The licence limit for Mitel SIP terminals has been reached</i>	A Mitel SIP terminal is unable to register or use the video functionality because there are too few <i>Mitel SIP Terminals</i> or <i>Mitel 8000i Video Options</i> licences available.	Parameter 1=1: Missing <i>Mitel SIP Terminals</i> licence, Parameter 2=1: Missing <i>Mitel 8000i Video Options</i> licence, Parameter 3=3: Max. number of licences, date, time	Serious (negative, with match)
<i>The licence limit for SIMPLE/MSRP has been reached</i>	A third-party application wishes to use the MSRP and/or SIMPLE protocol for a user, but not enough licences are available.	Date, time	Serious (negative, with match)
<i>The licence limit for standard SIP terminals has been reached</i>	A standard SIP terminal is unable to register or use the video functionality because there are too few <i>SIP Terminals</i> or <i>Video Terminals</i> licences available.	Parameter 1=1: Missing <i>SIP Terminals</i> licence, Parameter 2=1: Missing <i>Video Terminals</i> licence, Parameter 3=3: Max. number of licences, date, time	Serious (negative, with match)
<i>The licensing limit for the maximum number of users has been reached</i>	If in WebAdmin the 37. user is opened and no <i>Mitel 470 Expansion</i> licence is in place.	Date, time	Serious (negative, with match)
<i>The maximum number of users is within the licence limit again</i>	A <i>Mitel 470 Expansion</i> licence is now available or the number of users has been reduced to 36.	Date, time	Serious (positive, with match)

Event message	Trigger condition	Details ¹⁾	Severity
<i>TLS certificate expires soon</i>	A TLS certificate for a SIP node or SIP endpoint is about to expire (<i>Serious</i> severity level) or has just expired (<i>Critical</i> severity level) and needs to be renewed. If the endpoint type is = 0 (Mitel), then is parameter 2 = node ID. If the endpoint type is = 1 (3rd party), then the remaining parameter data contains the first eleven characters of the certificate name.	Type of endpoint (0: Mitel, 1: 3rd party), node ID or certificate name, date, time	Serious / Critical (without match)
<i>TLS certificate update failed</i>	The update of the TLS certificate for an SIP node or SIP endpoint via FTP has failed and needs to be renewed manually. If the endpoint type is = 0 (Mitel), then is parameter 2 = node ID. If the endpoint type is = 1 (3rd party), then the remaining parameter data contains the first eleven characters of the certificate name.	Type of endpoint (0: Mitel, 1: 3rd party), node ID or certificate name, date, time	critical (negative, with match)
<i>TLS certificate update successful</i>	A TLS certificate for a SIP node or SIP endpoint was successfully renewed. If the endpoint type is = 0 (Mitel), then is parameter 2 = node ID. If the endpoint type is = 1 (3rd party), then the remaining parameter data contains the first eleven characters of the certificate name.	Type of endpoint (0: Mitel, 1: 3rd party), node ID or certificate name, date, time	critical (positive, with match)
<i>TLS certificate was generated: Upgrade non-Mitel endpoints now</i>	A TLS certificate has been generated. If generation is manual, the certificate must be imported manually into the Mitel SIP nodes. The certificate must always be imported manually on all non-Mitel nodes and non-Mitel endpoints.	Date, time	Normal (without match)
<i>Too few FoIP channels</i>	Setting up a fax connection via T.38 failed because no FoIP channel is available.	Available FoIP channels on node	Normal (without match)
<i>Too few licences for IP system phones</i>	A MiVoice 5361 IP / 5370 IP / 5380 IP was unable to register because there are too few IP system phone licences.	Date, time	Serious (negative, with match)
<i>Too few licences for PMS interface</i>	Either the <i>Hospitality PMS Interface</i> licence is missing or the number of <i>Hospitality PMS Rooms</i> licences available is insufficient.	Number of licensed rooms, number of configured rooms, date, time	Serious (negative, with match)
<i>Too few VoIP channel licences</i>	Connection setup failed because the licence limit for simultaneously active VoIP channels has been reached.	No. of licensed VoIP channels, Date, Time	Normal (without match)
<i>Too few VoIP channels</i>	An user is trying to set up a connection that requires one or more VoIP channels which are currently not available.	Available VoIP channels on this node, date, time	Normal (without match)

Event message	Trigger condition	Details ¹⁾	Severity
<i>Too many errors with the same ID</i>	An unusual amount of errors (more than 50 per hour) with the same error ID have occurred.	Error ID, date, time	Normal (without match)
<i>Too many event messages</i>	Number of message types exceeds limit entered in the table on: <ul style="list-style-type: none"> • "Synch. "Synch.loss on BRI/PRI" • "Outgoing Call Rejected" • "No response from network" 	Date, time	Normal (without match)
<i>Too much user data</i>	System capacity exceeded	Date, time	Critical (without match)
<i>Total synchronization loss</i>	Network synchronisation has failed on all BRI/PRI interfaces	Date, time	Serious (negative, with match)
<i>Trial licence expired</i>	The duration for which a trial licence can be used for a specific feature has expired and there is no valid licence.	Licence ID, date, time	Normal (without match)
<i>USER EVENT MESSAGE</i>	With *77[nnnn] from a terminal	nnnn [0000...99999], user number, date, time	Serious (without match)
<i>User memory usage below the critical range again</i>	The memory usage in the file system for a specific user has again fallen below a defined (<i>Serious</i> severity level) or critical (<i>Critical</i> severity level) value.	User number, memory usage in %, date, time	Serious / Critical (positive, with match)
<i>User memory usage over the critical range</i>	The memory usage in the file system for a specific user has exceeded a defined (<i>Serious</i> severity level) or critical (<i>Critical</i> severity level) value.	User number, memory usage in %, date, time	Serious / Critical (negative, with match)
<i>Wake-up call failed</i>	The room wake-up call was not answered	Room No., date, time	Normal (negative, with match)
<i>Wake-up order confirmed</i>	The room wake-up call has now been answered	Room No., date, time	Normal (positive, with match)

1) The node is also always indicated in an AIN.

Tab. 25 Meaning of the parameter values for the event message *Send e-mail failed*

Parameter 1 (XXYY)			Parameter 2:	Parameter 3:
Value	Reason (XX)	Action (YY) ¹⁾	E-mail client	Additional info depending on the e-mail client (XXYY)
00	Not defined	Not defined	Not defined	
01	E-mail memory full	Connection set up to SMTP server	Voice mail	XX: Mailbox ID YY: Message ID
02	SMTP server access data invalid	Extended registration on SMTP server	Auto backup	
03	SMTP client cannot set up a connection to the server	Registration on SMTP server	Call recording	User number
04	Authentication failed	Transmission of e-mail address	Event message	
05	Continuous negative answer from SMTP server	Transmission of e-mail recipient address	Call logging for hospitality	
06	Temporary negative answer from SMTP server	Prepare data transmission	Configuration files	XX: User ID YY: Terminal ID
07	No answer from SMTP server	Data transmission in progress		
08	E-mail attachment not found	End data transmission		
09	Invalid host, domain or IP address on the communication server	Prepare authentication (LOGIN)		
10	E-mail text too long (body)	User name authentication (LOGIN)		
11	E-mail attachment too large	Password authentication (LOGIN)		
12	Format of e-mail attachment not supported	Authentication (PLAIN)		
13	No e-mail recipient address	Prepare encrypted authentication (CRAM-MD5)		
14	Invalid e-mail recipient address	Encrypted authentication (CRAM-MD5)		
15	Invalid e-mail sender address	Preparing to send next e-mail		

1) Action carried out by the SMTP client at the point when the error occurred.

6. 3. 1. 2 Event tables

Event tables ([Q=f4](#)) list all the event messages the system is capable of generating (see [Tab.](#)).

There are 7 event tables. After a first start, all event tables are assigned at least one destination. This assignment can be modified in the [Message destinations](#) (([Q=h1](#))) view. Each event table can be configured individually. This means it is possible with a filter to decide which event message – if any – should be sent to a particular signal destination either immediately, with a delay or not at all.

- [No event:](#)
This type of incoming event messages are **never** sent to the linked destination.
- [Every event:](#)
This type of incoming event messages are **all** sent to the linked destination.
- [Custom:](#)
With this setting, you can determine how often the event message may appear for each period, until they are sent to the linked destination.
The [Frequency](#) of an event message may range between 2 and 20. The [Period](#) is indicated in hours, ranging between 1 and 672. The longest time period corresponds to 28 days or 4 weeks.

Tab. 26 Example of event table

Event type	Frequency	Time period
Total synchronization loss	10	1

In this example an event message is sent to the message destinations if there is a [Total synchronization loss](#) event message when the system generates the event message 10 times within 1 hour.

6. 3. 1. 3 Signal destinations

After a first start, all event tables are exactly assigned to a message destination. (Exception: *Local destination* and *SNMP destination* use this event table.) You can assign event tables to several or no message destinations

The destinations are configured in the *Message destinations* (**Q**=h1) view.

Signal destination system phone

Depending on the allocated event table (normally Table 1), event messages are sent to all the system phones that have a display and are entered in message group 16.

External signal destinations

Depending on the event table allocated, event messages (normally Table 2) are sent to a specified external signal destination. Two external signal destinations can be specified:

- 1 primary external signal destination
- 1 alternative external signal destination

If the system issues an event message, the event message opens a PPP communication channel from the public network of the communication server to a terminal adapter or modem. Once the event message has been confirmed, the system clears down the PPP connection.

Signalling an event message to an external signal destination

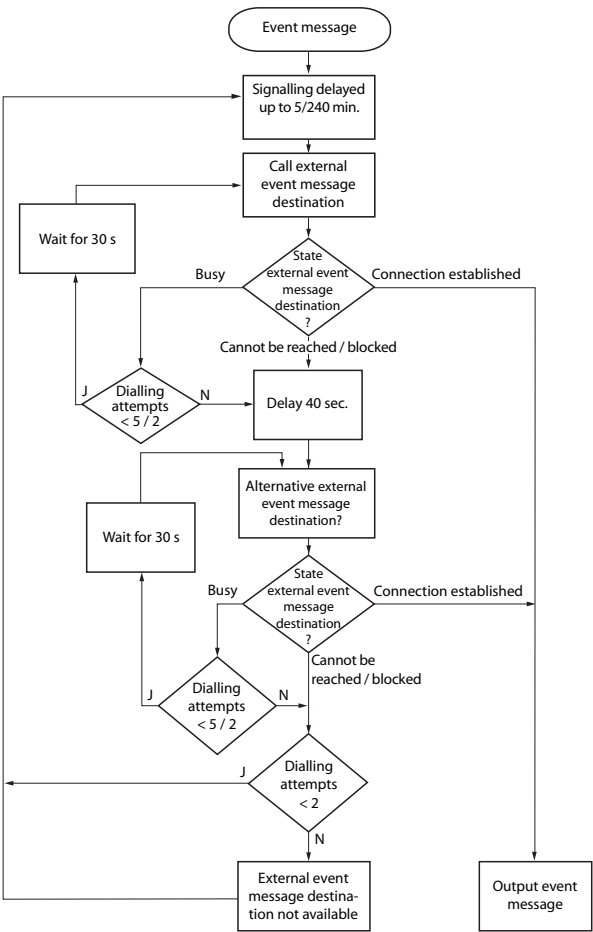


Fig. 11 Flowchart of the signalling of an event message to an external signal destination

The following principles govern the way event messages are signalled to an external signal destination:

- Individual event messages are not signalled if they occur at short intervals. The event messages are stored temporarily for 5 minutes and then sent together to the external signal destination.
- If over a period of one hour an attempt is made unsuccessfully to send the event messages to the external signal destination, the signalling period is extended from 5

minutes to 4 hours. As soon as the event messages are successfully output at the external signal destination, the time period is reset to 5 minutes.

- If over a period of 1 hour an attempt is made unsuccessfully to send an event message to an external signal destination, the number of dialling attempts is reduced from 5 to 2. As soon as an event message has been successfully sent, the number of dialling attempts is increased to 5 again.
- If the attempt to send an event message to an external signal destination was unsuccessful, the system will generate the event message *External event message destination missing*.



Note:

Event tables and signal destinations should be set in such a way that the event message *External event message destination missing* is signalled immediately to any signal destination still available.

Local signal destinations

Depending on the event table allocated, event messages (normally Table 3) are sent to a specified local signal destination.

PPP links:

Like with an external signal destination the event message opens a PPP communication channel from the communication server to a terminal adapter or modem. Once the event has been confirmed, the system clears down the PPP connection.

Ethernet link:

A PC connected either directly to the Ethernet interface or to the communication server via a LAN can be configured as the local signal destination.



Notes:

- The local destination is linked with the same event table as the SNMP destination. Any changes to the link and/or filter criteria for the linked event table also apply to the SNMP destination.
- Event tables and signal destinations should be set in such a way that the event message *External event message destination missing* is signalled immediately to any signal destination still available.

SNMP destination

Depending on the event table allocated, event messages (normally Table 3) are sent to a specified SNMP destinations.

SNMP stands for "Simple Network Management Protocol" and is used by Network Management Systems (NMS).

If the Network Management System is to know the potential events of the communication system, the corresponding system components have to be defined in the form of

configurable objects (Managed Objects: MO). These objects and the related event messages are stored in an object library referred to as the Management Information Base (MIB). The current MIB version can be downloaded from <https://pbxweb.aastra.com>. The user name and password are required in order to access the data. Registration with the "Mitel Application Partner Programm" is required. 5 SNMP destinations can be defined. Forwarding to the SNMP destinations can be activated and deactivated independently of the forwarding to the local and external signal destinations.



Notes:

The SNMP destination is linked with the same event table as the local destination. Any changes to the link and/or filter criteria for the linked event table also apply to the local destination.


Signal destination event log

Normally, the signal destination event log is assigned to Event table 4. The filter on this event table is preconfigured for most event types in such a way that event messages are entered in the event log once they arrive.

If the signal destination event log is assigned a different event table or if event table 4 is reconfigured, the event messages are entered in the event log in accordance with the new event table or the new configuration.

The last 254 event messages are recorded in the *Event log* (**Q=r5**). *Active event messages* (**Q=mr**) and the last 10 *Power failures* (**Q=bn**) are recorded in separate logs.

If the maximum number of entries is exceeded, the oldest entry in each case is deleted.

If active event messages are available, they are indicated in WebAdmin on the left, with the  symbol.

E-mail signal destination

With the e-mail client integrated in the communication server, event messages can be sent to internal or external e-mail destinations. Normally, the signal destination *E-mail destination* is automatically assigned to event table 5. Up to 5 e-mail destinations can be defined, and e-mail notification can be activated or deactivated globally.

For the communication server to send the e-mails the access to the e-mail service provider's SMTP server must be configured in the *SMTP server* (**Q=rm**) view.

Destination alarm server (ATAS)

Event messages can also be sent via the ATAS interface, for instance, to an alarm server. This may be an Mitel Alarm Server or a third-party alarm server. The use of the ATAS protocol is subject to a licence.

After a first-start of the communication server, the signal destination *Alarm server (ATAS)* is automatically allocated event table 6. The notification service via the ATAS interface to the alarm server can be globally switched on or off.

SRM destination

Event messages can also be sent to the SRM server. Depending on the severity level in the SRM agent, this changes the system status on the corresponding communication server line. The line colour changes at the same time. If the corresponding positive event message arrives later or if the event message is confirmed in WebAdmin, the status and colour are restored again. The following system statuses are defined:

- *Normal* (Blue colour):
No active event messages with the severity level *Serious* or *Critical* is available.
- *Serious* (Yellow colour):
At least one event message is available and needs to be closely examined. (Example: *Charge counter overflow*)
- *Critical* (Red colour):
At least one event message is available and is hampering the system's function. (Example: *Fan failure*)



Note:

Not all negative event messages have a positive match. In this case, the event messages must be confirmed manually in WebAdmin.

Event messages, which are not *Serious* or *Critical*, are not sent to the SRM server. The severity of individual event messages is given in the Tab. 24 table.


Example:

Power output: There are no serious or critical event messages. The communication server line in the SRM agent is blue and the system status is on *Normal*.


1. The event message *Charge counter overflow* reaches the SRM server.
→ The communication server's system status in the SRM agent changes to *Serious*, and the destinations turn yellow.
2. The event message *Fan failure* reaches the SRM server.
→ The communication server's system status in the SRM agent changes to *Critical*, and the destinations turn red.
3. The event message *Charge counter overflow* is confirmed in WebAdmin in the *Active event messages view* (*Q=mr*).

- The system status of the communication server in the SRM agent remains on **Critical**, and the destinations turn red, because there is still an event message with this severity.
- 4. The event message **Fan failure** reaches the SRM server.
 - The communication server's system status in the SRM agent changes to **Normal**, and the destinations turn red.

After a first-start of the communication server, the **SRM destination** is automatically allocated event table 7. The notification service to the SRM destination can be switched on or off.

On the SRM server the status modification per communication server must be allowed and configurations are also required in WebAdmin. You can find a configuration guide in WebAdmin help under the **Message destinations**  **=h1** view.

Testing the signal destination configuration

To test the configuration, a test event message can be separately initiated for each destination in the WebAdmin configuration (**Message destinations**  **=h1** view). The event message is signalled without any delay, directly at the selected signal destination.

If the communication server is connected via a modem or terminal adapter, the test event messages will be signalled only once the connection is cleared down.

6.3.2 Other aids

6.3.2.1 System logs

During operation or in the event of a malfunction the communication server stores the current operating data in the file system in the directory `/home/mivo400/logs`.

You can open, view and back up these log files on any storage device, in WebAdmin in the *System logs* (**Q=1w**) view.

6.3.2.2 File system state

In the *File system state* (**Q=e3**) view you can see the thematically structured file system's memory load. In an AIN the file systems for all nodes can be viewed.

6.3.2.3 File browser

With the *File browser* (**Q=2s**) you have access to the communication server file system and you can create new folders as well as view, import, replace or delete files in the file system.

All communication server folders and files are located in the home directory `/home/mivo400/`.



Note:

Be extremely careful while replacing or deleting files. The absence of files can hamper or even render impossible the working of the communication server.

7 Annex

In this chapter you will find a list of functions and products not supported, licence information on third-party software products, and a table summary of related documents and online help.

7.1 Functions and terminals no longer supported

The MiVoice Office 400 series continues to support the terminals and functions of the Aastra IntelliGate series. Exceptions include the following terminals and functions:

- Digital system phones Office 20, Office 30, Office 40
- IP system phones Office 35IP, Office 70IP-b
- Cordless system phones Office 100, Office 130/130pro, Office 150, Office 150EEEx, Office 155pro/155ATEX
- The Aastra 6751i phone is no longer supported as an Mitel SIP phone.
- IP system softphone Office 1600/1600IP
- DECT radio unit SB-4
- Pocket Adapter V.24
- X.25 in the D channel
- Ascotel® Mobility Interface (AMI) and DCT terminals
- Universal Terminal Interface (UTI)
- AMS Hotel manager and Hospitality Mode V1.0 (hotel functions)
- Operator application Office 1560/1560IP
- Aastra Management Suite (AMS) is replaced by the web-based configuration tool WebAdmin, the remote management SRM (Secure IP Remote Management) and the application System Search.
- The external remote control (ERC) cannot be set up with WebAdmin. ERC is replaced by the possibility, to integrate mobile phones and other external phones into the system (Mobile or External Phone Extension).
- Only language package downloading is available for Virtual Appliance in System Search, Emergency Upload and the display of Virtual Appliance communication servers is not available.
- Mitel BluStar 8000i is not supported by the Virtual Appliance communication server.
- The CPU2 application card is no longer supported (only CPU2-S).
- The Telephony Web Portal (TWP) application is replaced with Mitel MiCollab Audio, Web and Video Conferencing.

7.2 Licensing information of third-party software products

York Technologies Limited

Copyright and License Information

You agree that all ownership and copyright of licensed icons remain the property of York Technologies Limited. You will be granted a non-exclusive license to display the graphical media royalty-free in any personal or commercial software applications, web design, presentations, and multimedia projects that you create and/or distribute. You may modify the icons and display the resulting derived artwork subject to the terms of this agreement. Where an application is to be distributed, the graphical media must be compiled into the application binary file or its associated data files, documentation files, or components. If you are creating software applications or websites on behalf of a client they must either purchase an additional license for the icons from York Technologies Limited or you may surrender and fully transfer your license to your client and notify us that you have done so. Except where stated above you may not license, sub-license, grant any rights, or otherwise make available for use the icons either in their original or modified state to any other party. You may not include the icons in any form of electronic template that allows other parties to distribute multiple copies of customised applications. You may not include the icons in form of obscene, pornographic, defamatory, immoral or illegal material.

TO THE EXTENT PERMITTED BY APPLICABLE LAW ICONS AND OTHER GRAPHICAL MEDIA ARE PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR NONINFRINGEMENT. THE ENTIRE RISK ARISING OUT OF USE OR PERFORMANCE OF THE ICONS AND OTHER GRAPHICAL MEDIA REMAINS WITH YOU.

IN NO EVENT WILL YORK TECHNOLOGIES LIMITED BE LIABLE FOR ANY DAMAGES, INCLUDING LOSS OF DATA, LOST OPPORTUNITY OR PROFITS, COST OF COVER, OR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL, DIRECT, OR INDIRECT DAMAGES ARISING FROM OR RELATING TO THE USE OF THE ICONS AND OTHER GRAPHICAL MEDIA, HOWEVER CAUSED ON ANY THEORY OF LIABILITY. THIS LIMITATION WILL APPLY EVEN YORK TECHNOLOGIES LIMITED HAS BEEN ADVISED OR GIVEN NOTICE OF THE POSSIBILITY OF SUCH DAMAGE. IN ANY CASE, YORK TECHNOLOGIES LIMITED'S ENTIRE LIABILITY UNDER ANY PROVISION OF THIS AGREEMENT SHALL BE LIMITED TO THE GREATER OF THE LICENSE/PURCHASE FEE PAID BY YOU FOR THE ICONS OR £1.00. NOTHING IN THESE TERMS AND CONDITIONS SHALL EXCLUDE OR LIMIT YORK TECHNOLOGIES LIMITED'S LIABILITY FOR DEATH OR PERSONAL INJURY CAUSED BY ITS NEGLIGENCE OR FRAUD OR ANY OTHER LIABILITY WHICH CANNOT BE EXCLUDED OR LIMITED UNDER APPLICABLE LAW.

This Agreement shall be subject to and construed and interpreted in accordance with English Law and shall be subject to the jurisdiction of the Courts of England. Any enquiries regarding this Agreement should be directed to York Technologies Limited, St Mary's Cottage, St Buryan, Penzance, UK, TR19 6DJ.

20 August 2007

Glyph Lab is a trading name of York Technologies Limited registered in England and Wales, No 3846468. Registered office St Marys Cottage, St Buryan, Penzance TR19 6DJ, UK. Glyph Lab is a trademark of York Technologies Limited

7.3 Documents and online help systems with further information

Product	Document
MiVoice Office 400-series products	System Manual Mitel 415/430 System Manual Mitel 470 User Guide Getting Started with Virtual Appliance System Manual System Functions and Features SIP Access User's Guide (English) MiVoice Office 400 feature overview Application Notes, technical information, FAQs and compatibility lists are all available on the internet/extranet support page at: https://pbxweb.aastra.com
Applications	System Manual Mitel Alarm Server Mitel Alarm Server User's Guide Installation Instructions Mitel OpenCount for MiVoice Office 400 Configuration Guide Mitel OpenCount for MiVoice Office 400 Installation and Administration Guide "Mitel Standard Linux" Solutions Guide "Virtual Appliance Deployment"
WebAdmin	Online Help Configuration assistant Setup wizard
Self Service Portal (SSP)	Online Help
Project planning application Mitel CPQ	Online Help
DECT	Planning DECT systems User's Guide
Mitel SIP-DECT	User's Guide for Mitel 600 SIP-DECT on MiVoice Office 400
Basic/Enterprise voice mail system	User's Guide for MiVoice Office 400 voice mail system System Manual System Functions and Features
OIP	System Manual Mitel Open Interfaces Platform Online Help User's Guide Mitel OfficeSuite User's Guide for First Party TAPI Service Provider
Networking	System Manual for Mitel Advanced Intelligent Network (AIN) and IP system phones Private networking system manual
Mitel SIP phones on MiVoice Office 400	Mitel 6730/31/53 SIP, Mitel 6735/37/55/57 SIP, Mitel 6739 SIP, Mitel 6863/65 SIP, Mitel 6867/69 SIP user's guide
Mitel SIP phones (platform-independent)	User's guide, short user's guide, installation instructions, administration instructions
IP system phones	Quick User's Guide MiVoice 5360 IP / MiVoice 5361 IP / MiVoice 5370 IP / MiVoice 5380 IP

Product	Document
	Operating Instructions for MiVoice 5360 IP / MiVoice 5361 IP / MiVoice 5370 IP / MiVoice 5380 IP / MiVoice 2380 IP
Digital system phones	Quick User's Guide Office 10 / Office 25 / Office 35 / Office 45/45pro / Office 135/135pro / Office 160pro/Safeguard/ATEX / MiVoice 5360 / MiVoice 5361 / MiVoice 5370 / MiVoice 5380 / Mitel 610 DECT / Mitel 612 DECT / Mitel 620 DECT / Mitel 622 DECT / Mitel 630 DECT / Mitel 632 DECT / Mitel 650 DECT Office 10 / Office 25 / Office 35 / Office 45/45pro / Office 135/135pro / Office 160pro/Safeguard/ATEX / MiVoice 5360 / MiVoice 5361 / MiVoice 5370 / MiVoice 5380 / MiVoice 5380 / Mitel 610 DECT / Mitel 612 DECT / Mitel 620 DECT / Mitel 622 DECT / Mitel 630 DECT / Mitel 632 DECT / Mitel 650 DECT user's guide
Analogue phones	Mitel 6710 Analogue / Mitel 6730 Analogue user's guide
PC operator console	User's Guide MiVoice 1560 PC Operator Online Help

Most of the documents are accessible at <http://www.mitel.com/docfinder>. Many documents in the above table are summarised per language and software release in documentation sets, and can be downloaded as a .zip file. Note: Documentation sets are very large (~500 MB). The download can take some time, depending on the connection.

More documents are available on the internet:

- Environmental information for communication server and system phones
- Declarations of conformity for communication server and system phones
- Labels for system phones and expansion key modules
- Safety instructions for system phones
- Application Notes
- Product information
- Leaflets
- Brochures
- Data sheets

Index

A

- Aastra 5300ip series
 - Integrated switch 66
 - Power supply 66
- About this document 11
- Access control 76
- Access log 79
- Access types 75
- Application interfaces 29
- Authorization profile 76
- Auxiliary applications 71

C

- Configuration 69
- Configuration data 93
- Conformity 7
- Connection possibilities (overview) 35
- CTI - Computer Telephony Integration 32

D

- Data backup 89
- Data Maintenance 93
- Data protection 10
- DECT 96
- Default user account 76
- Distribution service 90

E

- E-mail distribution service 90
- Environment 8
- Event messages 98
- Event table 116
- Exclusion of Liability 8

F

- File browser 123
- File system state 123
- First start 88, 89
- First-party CTI 33
- FTP distribution service 90

H

- Hazard alert messages 12

I

- Interfaces (overview) 35

L

- Limited Warranty (Australia only) 13
- Log data 79

M

- Maintenance 93
- Message and alarm systems 32
- Message destinations 117
- MiContact Center Business 27
- Mitel 6
 - Mitel 400 Call Center 30
 - Mitel 400 CCS 26, 30
 - Mitel 400 Hospitality Manager 28
 - Mitel 600 DECT 23
 - Mitel 6710a, Mitel 6730a 23
 - Mitel 6730 SIP 20
 - Mitel 6750 SIP 20
 - Mitel 6800 SIP 19
 - Mitel Alarm Server 27
 - Mitel applications (overview) 26
 - Mitel BluStar for PC 21
 - Mitel Border Gateway (MBG) 27
 - Mitel Business CTI 27
 - Mitel Dialer 26
 - Mitel Hospitality Manager 71
 - Mitel MiCollab 26
 - Mitel Mobile Client (MMC) 22
 - Mitel Office Suite 21
 - Mitel Open Interfaces Platform (OIP) 26, 29
 - Mitel OpenCount 26
 - Mitel phones and clients (overview) 19
 - Mitel Plan 27
 - Mitel WAV Converter 74
 - MiVoice 1560 PC Operator 21
 - MiVoice 2380 Softphone 21
 - MiVoice 5300 Digital 22
 - MiVoice 5300 IP 22

N

- Networking Possibilities 18

O

Operations supervision 98

Overview

- applications 26
- communication systems 16
- Connection possibilities 35
- Mitel system phones and clients 19
- Networking possibilities 18
- Positioning 17

P

Password syntax 78

PoE 66

Positioning (overview) 17

Power over Ethernet 66

Product information 6

R

Remote access 79

Restart 88

S

Safety Information 9

Secure IP Remote Management (SRM) 28

Self Service Portal 72

Self Service Portal (SSP) 28

Software assurance 42

Symbols 12

System logs 123

System overview 16

System Search 73

T

Third-party CTI 33

U

Update Software 94

User access control 76

User accounts 76

User information 7

W

WebAdmin 27, 69

WebAdmin auxiliary applications 71

WebAdmin configuration tool 69