

MiCollab Advanced Messaging
Avaya Communication Manager SRTP/TLS
SIP Station with Session Manager
Integration Technical Note

For version 6.1 and above

Notice

The information contained in this document is believed to be accurate in all respects but is not warranted by Mitel Networks™ Corporation (MITEL®). Mitel makes no warranty of any kind with regards to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. The information is subject to change without notice and should not be construed in any way as a commitment by Mitel or any of its affiliates or subsidiaries. Mitel and its affiliates and subsidiaries assume no responsibility for any errors or omissions in this document. Revisions of this document or new editions of it may be issued to incorporate such changes.

No part of this document can be reproduced or transmitted in any form or by any means - electronic or mechanical - for any purpose without written permission from Mitel Networks Corporation.

Trademarks

The trademarks, service marks, logos and graphics (collectively "Trademarks") appearing on Mitel's Internet sites or in its publications are registered and unregistered trademarks of Mitel Networks Corporation (MNC) or its subsidiaries (collectively "Mitel") or others. Use of the Trademarks is prohibited without the express consent from Mitel. Please contact our legal department at legal@mitel.com for additional information. For a list of the worldwide Mitel Networks Corporation registered trademarks, please refer to the website: <http://www.mitel.com/trademarks>.

© Copyright 2016, Mitel Networks Corporation

All rights reserved

Contents

Preface	5
References	6
Documentation	6
Documentation Updates	6
Help	6
Document Conventions	7
Feature Supported by This Integration	8
Critical Application Considerations	10
Installation Requirements	13
Telephone System Requirements	13
MiCollab AM Requirements	13
Programming the Telephone System	14
Preparing the Telephone System for the Integration	14
Assigning Node IP Addresses in the Communication Manger	14
Creating a SIP Signaling Group	15
Defining the IP Interfaces	16
Creating a SIP Trunk Group	17
Configuring Aura System Manager	19
Configuring Domain	20
Configuring Locations	20
Configuring Adaptation	22
Configuring SIP Entities	23
Configuring Entity Links	24
Configuring Time Ranges	25
Configuring Routing Policies	25
Adding Avaya Trusted Certificates	27
Adding Trusted Certificates	27
Setting up Avaya SRTP SIP	29
Programming MiCollab AM Ports	30

Configuring the SIP Entities on Avaya Servers	32
Configuring the Session Manager Firewall	35
Configuring the Routing Policies	38
Adding the MiCollab AM Port User Definitions	39
Creating a Hunt Group and Pilot Number	41
Creating a Coverage Path	42
Creating a Route Pattern	43
Modifying Digit Conversion Tables	43
Defining the Telephone System Location	44
Programming Subscriber Telephones	44
Configuring MiCollab AM	50
Completing the Integration	56
Configuring MiCollab AM for SIP Failover	56
Changing the Network Binding Order on the MiCollab AM Platform	59
Windows Server 2008 R2 with Service Pack 1	59
Windows Server 2012 R2	60
Configuring Quality of Service (QoS)	61

Preface

This Integration Technical Note (ITN) is written for MiCollab Advanced Messaging (MiCollab AM) certified technicians who are experienced with MiCollab AM and are familiar with its procedures and terminology. This document also assumes that you are familiar with the features and programming of the Avaya Aura Communication Manager Telephone system.

This document describes how to integrate MiCollab AM with an Avaya Aura Communication Manager Telephone system, using the Session Initiation Protocol (SIP) integration. This integration operates exclusively over an IP-based network. It uses no analog or digital voice telephony ports, but instead passes voice communication and signaling information over the network.

The Avaya Communication Manager SIP integration consists of the following five major components:

- The Avaya Aura Communication Manager
- The Avaya G430/G450/G650 Media Gateway
- Avaya Aura Session Manager server
- Avaya Aura System Manager server
- MiCollab AM

MiCollab AM registers its SIP ports as terminals or endpoints with the Avaya Aura Session Manager server. The SIP ports are configured as Off-Premises Stations (OPS) and are assigned into a hunt group of the PBX.

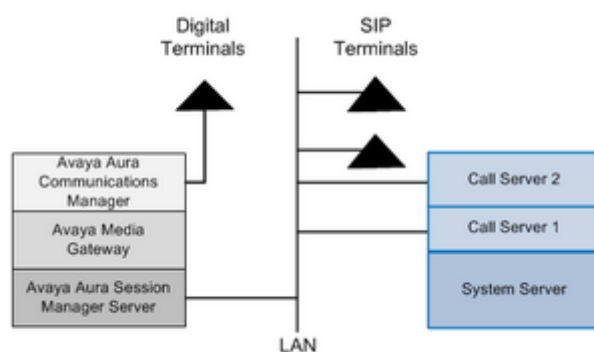


Figure 1. Avaya Communication Manager SIP Integration

Calls intended for MiCollab AM, whether direct or forwarded, are directed to the pilot number of this hunt group. The Call Server uses these same lines to place or transfer calls to the telephone system.

MiCollab AM sets and clears message-waiting indicators (MWIs) by transmitting SIP messages to the Aura Session Manager server. As a result, MWI operations never restrict the number of lines available for calls.

The integration process consists of configuring SIP support on the media server, configuring the telephone system at the gateway, configuring subscriber workstations at the media server, and configuring MiCollab AM. This document also describes the critical application considerations with which you should be familiar before you begin work on the integration.

References

A catalog of technical documentation is included on the MiCollab AM Installation Media. If you are installing any advanced applications, such as Networking and Fax Server applications, you should refer to the appropriate technical documentation for application and installation information.

Documentation

The technical documentation is produced in the PDF format and requires the PDF reader to view it. The documentation set for this MiCollab AM includes the following documents and resources:

- **Developer Resources.** Contains programming guides and API references for developers for integrating the server clients and web applications with MiCollab AM.
- **Integration Technical Notes (ITN).** Contains a set of guides that describe the integration methods and instructions for a variety of phone systems to work with MiCollab AM. The ITNs are generally used by resellers or administrators who are experienced with MiCollab AM and familiar with the integration procedures and terminology.
- **Quick Reference Card (QRC).** Contains shortcuts and quick instructions telling subscribers how to access and use the messaging system.
- **Server Documentation.** Available as a PDF only. Contains administrative guides for administrators about installing, configuring, and administering the messaging system, and user guides for subscribers about accessing the messaging system and checking and sending messages.
- **Spare Parts Documentation.** Contains a set of guides that describe the instructions for installing and configuring hardware parts to work with MiCollab AM. These documents are written for Mitel certified MiCollab AM technicians who are experienced with MiCollab AM and familiar with the procedures and terminology.
- **Software Release Notice (SRN).** This notice introduces the new features, capabilities, and hardware/software requirements for the corresponding MiCollab AM version.

Documentation Updates

Documentation updates may be available from the following sources:

- Mitel certified technicians can view or download the latest/updated documents and program files from our partner web site: connect.mitel.com/connect

Help

The primary source of information about MiCollab AM is the online help available within any of its administrative utilities. You can access **Help** as follows:

- Click the **Help** button in the dialog box or window in which you are working
- Press the **F1** key at any time.

Document Conventions

The following conventions are used in this document:

- **Key Names.** Names of keys on the keyboard are shown in a box.

Example: **Enter**

When two keys must be pressed simultaneously, they are joined by a + sign.

Example: **Alt** + **Tab**

- **Reference to Document.** *Italics* fonts can also signify the titles of other documents.

Example: Refer to *System Installation Guide*.

- **UI Element Names.** Names of UI elements such as dialog windows, screens, menu items, tabs, buttons, icons, etc. are shown in bold.

Example: On the **Startup** screen, click the **Start** icon.

- **User Input.** Information required to be typed is shown in italics.

Example: Type the password *voicemail*.

- **Warning, Caution, Important, and Notes.** Text for the contents that require attention are shown as follows:

WARNING A warning paragraph advises you of circumstances that can result in the loss of data, harm to the system server platform, or personal harm.

CAUTION Failure to follow these recommendations can result in unauthorized access to the system and consequent loss of data.

IMPORTANT An important paragraph gives decision-making information or informs you of the order in which tasks need to be completed.

NOTE A note gives additional information, provides an explanation, or indicates an exception to the information in the preceding text.

Feature Supported by This Integration

The following tables list the features supported using the Avaya Aura Communication Manager SRTP-TLS SIP Station integration.

Table 1. Call forward to personal greeting support for these common call types

Divert to MiCollab AM on	Supported
No Answer	Yes
Busy	Yes
Forward All	Yes
Do Not Disturb	Yes

Table 2. Integration features supported for Avaya Communication Manager SRTP/TLS SIP Station

Feature	Supported	Notes
Automatic subscriber logon	Yes	
ANI/CLI	Yes	
"Announce Busy" greeting on forwarded calls	Yes	
Call screening	Yes	Note 1
Caller queuing	Yes	Note 1, 2
DNIS	Yes	
End-to-end DTMF, attendant console	Yes	
End-to-end DTMF, proprietary telephones	Yes	
Fax Tone Detection	Yes	
Internal calling party ID for reply	Yes	
Live record, integrated	No	
Live reply to sender	Yes	
Message notification callouts	Yes	
MWI, set/clear	Yes	

MWI, inband/outband	Outband	
Networking, analog	Yes	
Overflow from MiCollab AM to attendant	Yes	
Overflow to MiCollab AM from attendant	Yes	
PBX-provided disconnect signaling	Yes	
Revert to operator	Yes	
Silence Timeout	Yes	
SRTP	Yes	Note 3
TLS	Yes	Note 3
Transfers, blind	Yes	
Transfers, confirmed	Yes	
Transfers, fully supervised	Yes	
Transfers, monitored	Yes	
Trunk ID for call routing	No	
Multiple Integrations	Yes	Note 4

NOTES

1. Available only when using supervised transfers.
2. Caller Queuing is specific to each local Call Server. Call Servers within the system are unaware of queued calls to the same subscriber on other Call Servers. For more information, refer to the next section, [Critical Application Considerations](#).
3. MiCollab AM supports negotiation for SRTP media streams using the Secure RTP profile defined in RFC 3711 with the offer/answer model defined in RFC 3264. To enable SRTP, RTP, or both, see integration configuration options documentation for the switch. The default setting is RTP. Please note that MiCollab AM doesn't support RFC 5939 which is an extension of RFC 3264.
4. Refer to the [Critical Application Considerations](#) section.

Critical Application Considerations

Known limitations or conditions within the telephone system and MiCollab AM that affect the integration performance are listed here. General recommendations are provided when ways to avoid these limitations exist.

- You must populate Line extension numbers on the Lines tab before starting MiCollab AM or the integration will fail. The extension numbers are registered as SIP stations with the IP PBX during system startup.
- Configure the MiCollab AM Incoming Hunt Mode in the Switch Section Options dialog box. The hunt mode must match the type of hunting provided by the IP PBX. This helps to alleviate any “glare” conditions between the IP PBX and the Call Server. The default mode is Terminal.
- You must configure the Hunt Group Access Code in the Switch Section Options dialog box. This code cannot conflict with extensions.

For example:

You can use 6000 for the Hunt Group Access Code and start MiCollab AM extensions with 6001.

- On a MiCollab AM server with two or more NICs, the NIC that supports this integration must not occupy first place in the operating system’s binding order, the primary (public) network interface card (NIC) must be the first network connection in the network binding order. MiCollab AM binds and communicates to other servers and subscribers on this network connection. For more information, refer to [Changing the Network Binding Order on the MiCollab AM Platform](#) later in this document.
- MiCollab AM supports G.729a with support for annex b on the incoming audio stream only. MiCollab AM does not transmit annex b packets.
- When codec negotiation takes place between MiCollab AM and the PBX, MiCollab AM always offers the G.729a audio format as an option. You may configure G.729a as the preferred codec in MiCollab AM; however, the decision whether to use G.729a is always made by the PBX.
- The SIP Domain Name in the Integration Options dialog box must match the domain name configured in the telephone system and on the TFTP server. This value is case sensitive.
- The Integration Options parameter, “Validate Remote Hosts for Media” validates each incoming audio packet and accepts it only if it is sent from a valid endpoint. The parameter is disabled by default. Enabling this parameter causes MiCollab AM to reject RTP packets from invalid endpoints. See Technical Bulletin #42285 for more information on this parameter.

IMPORTANT Enabling this parameter causes processing overhead and should only be enabled when necessary.

- The Call Queuing feature does not transcend the Call Server. Calls may be queued on multiple Call Servers for the same subscriber but Call Servers do not have knowledge of calls in the queue on other Call Servers within the system. Callers may be prompted with specific information about their

place in the queue; however, the information pertains only to the specific Call Server on which their call is queued.

- If the Avaya H.323 telephones do not provide end-to-end DTMF to MiCollab AM, disable the system-wide parameter "IP Shuffling" in the System Parameters programming section of the Communication Manager. This is particularly important where multiple Avaya Medpro's are in use. Be sure the parameter, "Hairpinning" is enabled for all H.323 telephones and the SIP Signaling Group supporting MiCollab AM.
- In an environment with Avaya Communication Manager, Session Manager, Nortel CS1000 Call server and Signaling Server, there are limitations in transferring to Nortel phones registered to the Signaling Server.
- If another application requiring a different configuration will use Session Manager, a separate gateway will be required.
- Direct IP-to-IP communication settings updates for Avaya Aura:
 - If the direct IP-to-IP setting is set as 'n', it will route calls directly through the Session Manager and bypass any MedPro configured on the TDM bus. This setting is also required to be used for TLS calls which will route through the Session Manager as well.
 - If the direct IP-to-IP setting is set as 'y' it will route the call through the TDM Bus (MedPro) resources.
 - When you are using the MedPro on the TDM bus as your IP resource, and you are calling between two SIP endpoints (when a SIP endpoint calls another SIP endpoint), the media stream will initially pass through a TDM resource.

However, once the call has been established and the TDM resource is no longer required, the call is "shuffled" away from the TDM bus and IP flows directly between the two SIP endpoints. This will Free up the TDM resource, releasing time-slots on the voice bus, and allow IP media to flow more efficiently

A few rules apply:

- Both SIP endpoints must be administered to allow shuffling. For Avaya phones, enable Intra-region IP-IP Direct Audio, Inter-region IP-IP Direct Audio, and IP Audio Hairpinning for the IP Network Region, and Direct-IP in System Features and the Signaling Group.
- The endpoints must be in the same LAN region or in interconnected LAN regions. The inter-region connection management rules must be met. There is at least one codec in common between the codec lists of the endpoints involved and the Internetwork region connection management codec list.
- The endpoints don't have to do anything special to initiate shuffling. It's all handled by the gateway. The endpoints will know when shuffling is occurring when they receive re-INVITE messages with new media descriptions.
- For additional clarification on network regions defined in the Avaya Communication Manager refer to the following two Avaya Documents:
 - *Administering Network Connectivity on Avaya Aura Communication Manager* (Document ID: 555-233-504)

- *Avaya Communication Manager Network Region Configuration Guide* (Document ID: 103244)
- MiCollab AM 6.1 supports up to 10 integration types (i.e. licensed integrations) in total per system. However, the following limitations apply to each Call Server:
 - Limited to 3 integration types per Call Server
 - The 3 integration types can be any mix of TDM and SIP (e.g. 1 TDM and 2 SIP)
 - Limited to 1 Mitel MiTAI or 1 Cisco UCM SCCP IP integration. Can be mixed with TDM, but not with SIP
 - Connect up to 10 telephone systems total per Call Server (e.g. 2 Avaya Communication Manager systems using SIP + 5 Avaya IP Office systems using SIP + 3 Siemens HiPath 4000 systems using Station Set Emulation)
 - SIP timers for Aastra EETS integrations are incompatible with other SIP integrations. Thus, it is not possible to have an EETS integration with any other SIP integration on the Call Server

Installation Requirements

Review the following information before performing any of the procedures in this document. To install this integration successfully, you must meet the installation requirements for both the telephone system and MiCollab AM.

Telephone System Requirements

- Avaya Aura Communication Manager 7.0 and prior
- Avaya Aura Session Manager 7.0 and prior
- G430 or G450 Media Gateways with possible additional DSP resources required; or G650 with C-LAN and IP Media Processor with current firmware update, to handle voice processing tasks
- TN2302/TN2602 IP Media Processor with current firmware update, to handle voice processing tasks (Applicable only in G650 configuration)
- TN799D C-LAN to process signaling information (Applicable only in G650 configuration)
- One Off-Premises Station (OPS) license per MiCollab AM port
- One Administered SIP Trunk license per MiCollab AM port

MiCollab AM Requirements

- MiCollab AM version 6.1
- MiCollab AM software key diskette or feature file with the Avaya Communication Manager SIP trunk integration enabled and one RADVISION SIP and RTP license enabled for each port involved in the integration
- One 100 Mbps or 1000 Mbps (1 Gbps) network interface card

Programming the Telephone System

Follow the recommendations and programming examples in this section to program the telephone system for integration with MiCollab AM. Programming examples show commands and parameters that are necessary for integration; they do not represent PBX programming in its entirety. Settings that are critical to the integration appear in boldface.

The installing technician should be familiar with programming the telephone system. For detailed information on programming and installing the telephone system, refer to the Avaya documentation.

Preparing the Telephone System for the Integration

Before beginning the integration, make sure that the following configuration tasks are completed on the telephone system.

- Verify the PBX has enough Administered SIP Trunk and OPS Extension licenses available for use with MiCollab AM.
- Assigning IP node names and addresses to the components of the Communication Manager, and the Session Manager server platforms.
- Defining IP interfaces.
- Administering IP network regions.

For more information on completing these tasks, refer to the documentation accompanying your telephone system.

Assigning Node IP Addresses in the Communication Manger

Assign the IP addresses on the Communication Manager. These IP address assignments are for communication between the Communication Manager, the Session Manager, and the gateway. Use the command, `change node-names ip` to assign the IP addresses required for the installation.

The screenshot shows the 'change node-names ip' command interface. At the top, there is a command bar with 'change node-names ip' and buttons for 'send (return)', 'help (f5)', 'cancel (esc)', 'enter (f3)', 'schedule (f9)', 'next (f7)', and 'previous (f8)'. Below the command bar, there are two tabs labeled '1' and '2'. The main area displays a table titled 'IP NODE NAMES' with two columns: 'Name' and 'IP Address'. The table contains six rows of data.

Name	IP Address
Gateway001	172.16.1.1
Hugo	172.16.1.2
Integautotest01	172.16.1.3
Integautotest02	172.16.1.4
Lucy	172.16.1.5
SUR-E1224	172.16.1.6

Using an Avaya Site Administration (ASA) terminal, define a Signaling Group associating the Communication Manager and Session Manager servers, as shown in the following example.

- 1 Specify a node name for the **Session Manager** and a listening port accessible to both the **Session Manager** and **Communication Manager** servers.
- 2 Specify the name of the domain on which the MiCollab AM platform is located.
- 3 Enable **Direct IP-to-IP Audio Connections** and **IP Audio Hairpinning**.
- 4 Specify the **rtp-payload** method for the telephone system to use in transmitting DTMF tone sequences over the IP network.

Programming the Telephone System **15**

Define the IP Authoritative Domain and IP interfaces.

IMPORTANT Be sure the Authoritative Domain name is the same throughout the Session Manager server, Communication Manager, and MiCollab AM programming.


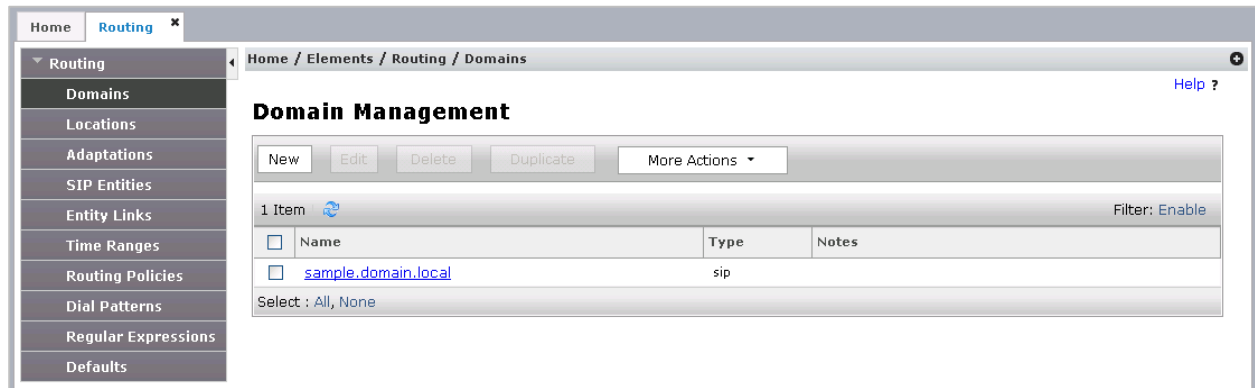


Figure 2. Avaya System Manager

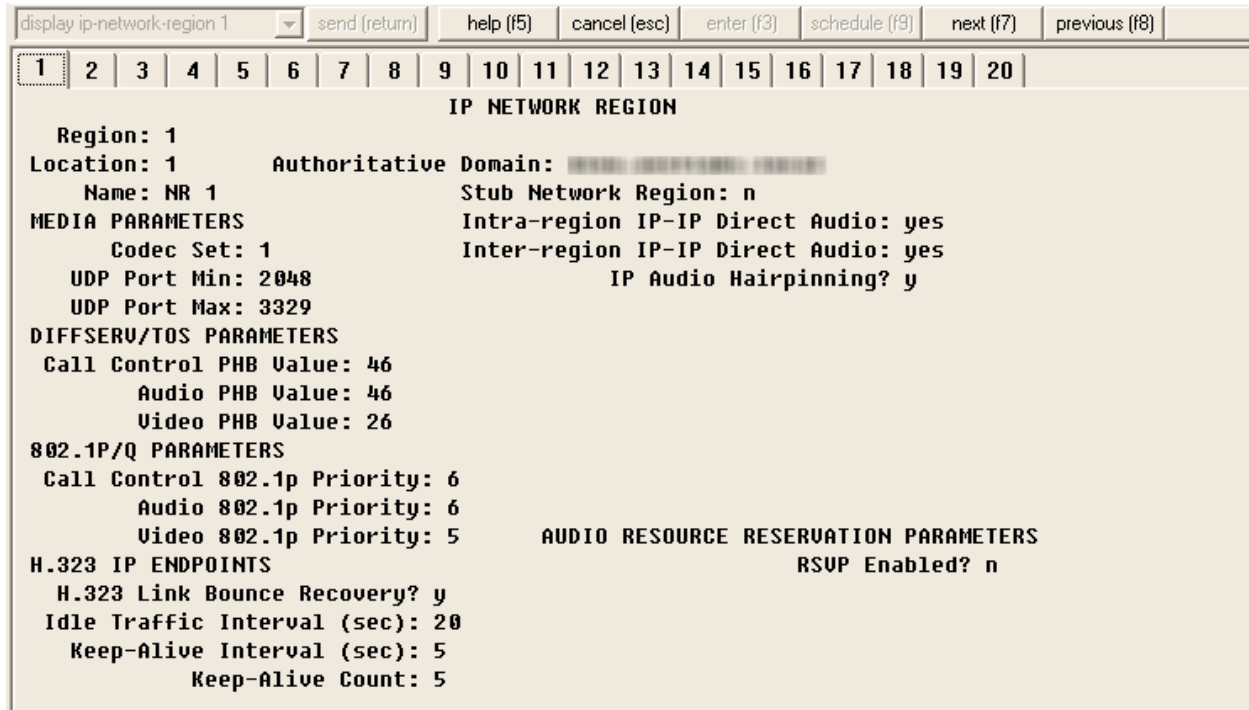

Creating a SIP Trunk Group

Create a Trunk Group and populate it with the ports that support the MiCollab AM integration, as shown in the following two examples.

To create a SIP Trunk Group:

- 1 Specify sip as the **Group Type** and tie as the **Service Type**. (Page 1)

add trunk-group 1		send (return)	help (f5)	cancel (esc)	enter (f3)	schedule (f9)	next (f7)	previous (f8)												
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21
TRUNK GROUP																				
Group Number: 1				Group Type: sip				CDR Reports: y												
Group Name: sip trunk				COR: 1				TN: 1				TAC: 201								
Direction: two-way				Outgoing Display? n				Night Service:												
Dial Access? n				Queue Length: 0																
Service Type: tie				Auth Code? n				Member Assignment Method: auto												
								Signaling Group: 1												
								Number of Members: 255												

- 2 Set the **Preferred Minimum Session Refresh Interval** to **12000**. (Page 2)

add trunk-group 1		send (return)	help (f5)	cancel (esc)	enter (f3)	schedule (f9)	next (f7)	previous (f8)												
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21
Group Type: sip																				
TRUNK PARAMETERS																				
Unicode Name: yes								Redirect On OPTIM Failure: 5000												
SCCAN? n								Digital Loss Group: 18												
								Preferred Minimum Session Refresh Interval(sec): 12000												
Disconnect Supervision - In? y				Out? n																
								XOIP Treatment: auto				Delay Call Setup When Accessed Via IGAR? n								
								Caller ID for Service Link Call to H.323 1xC: station-extension												

- 3 Verify that the settings match the following: (Page 3)

add trunk-group 1				send (return)				help (f5)				cancel (esc)				enter (f3)				schedule (f9)				next (f7)				previous (f8)			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21											
TRUNK FEATURES																															
ACA Assignment? <input type="checkbox"/> n										Measured: <input type="text" value="none"/>										Maintenance Tests? <input type="checkbox"/> y											
Numbering Format: <input type="text" value="public"/>										UI Treatment: <input type="text" value="service-provider"/>																					
Replace Restricted Numbers? <input type="checkbox"/> n										Replace Unavailable Numbers? <input type="checkbox"/> n																					
Hold/Unhold Notifications? <input type="checkbox"/> y										Modify Tandem Calling Number: <input type="text" value="no"/>																					
Show ANSWERED BY on Display? <input type="checkbox"/> y																															

4 Verify that the settings match the following: (Page 4)

add trunk-group 1				send (return)				help (f5)				cancel (esc)				enter (f3)				schedule (f9)				next (f7)				previous (f8)			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21											
PROTOCOL VARIATIONS																															
Mark Users as Phone? <input type="checkbox"/> n										Prepend '+' to Calling/Alerting/Diverting/Connected Number? <input type="checkbox"/> n																					
Send Transferring Party Information? <input type="checkbox"/> y										Network Call Redirection? <input type="checkbox"/> y																					
Build Refer-To URI of REFER From Contact For NCR? <input type="checkbox"/> n										Send Diversion Header? <input type="checkbox"/> n																					
Support Request History? <input type="checkbox"/> y										Telephone Event Payload Type: <input type="text" value="101"/>																					
Convert 180 to 183 for Early Media? <input type="checkbox"/> n										Always Use re-INVITE for Display Updates? <input type="checkbox"/> n																					
Identity for Calling Party Display: <input type="text" value="P-Asserted-Identity"/>										Block Sending Calling Party Location in INVITE? <input type="checkbox"/> n																					
Accept Redirect to Blank User Destination? <input type="checkbox"/> n										Enable Q-SIP? <input type="checkbox"/> n																					
Interworking of ISDN Clearing with In-Band Tones: <input type="text" value="keep-channel-active"/>										Request URI Contents: <input type="text" value="may-have-extra-digits"/>																					

5 Associate the new **Trunk Group** with the **Signaling Group** you created previously.

add trunk-group 1 send (return) help (f5) cancel (esc) enter (f3) schedule (f9) next (f7) previous (f8)

1 2 3 4 **5** 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21

TRUNK GROUP

Administered Members (min/max): 1/255
Total Administered Members: 255

GROUP MEMBER ASSIGNMENTS

Port	Name
1: T00001	sip trunk
2: T00002	sip trunk
3: T00003	sip trunk
4: T00004	sip trunk
5: T00005	sip trunk
6: T00006	sip trunk
7: T00007	sip trunk
8: T00008	sip trunk
9: T00009	sip trunk
10: T00010	sip trunk
11: T00147	sip trunk
12: T00148	sip trunk
13: T00149	sip trunk
14: T00150	sip trunk
15: T00151	sip trunk

Configuring Aura System Manager

In order to use SRTP/TLS, you must properly configure routing in the Avaya Aura System Manager. The image below displays the main screen of the Avaya Aura System Manager. To configure the System Manager, follow the steps in the subsequent sections.

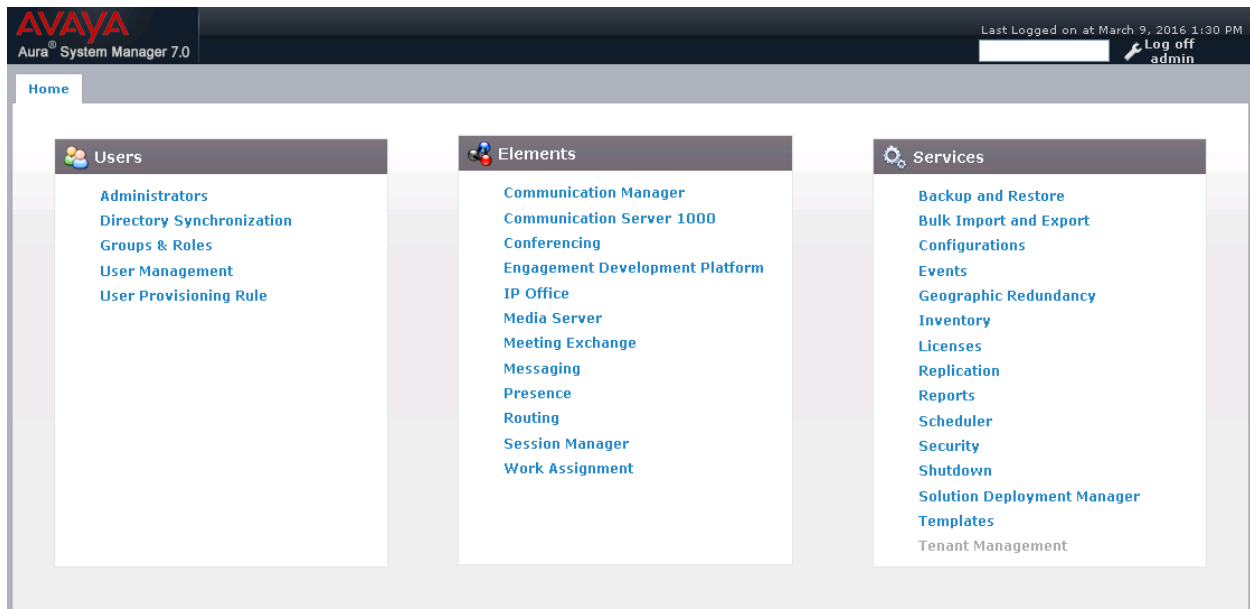


Figure 3. Avaya Aura System Manager

Configuring Domain

Log in to the System Manager, and go to **Elements > Routing > Domains**. The list of available domains appear in the **Domain Management** page.

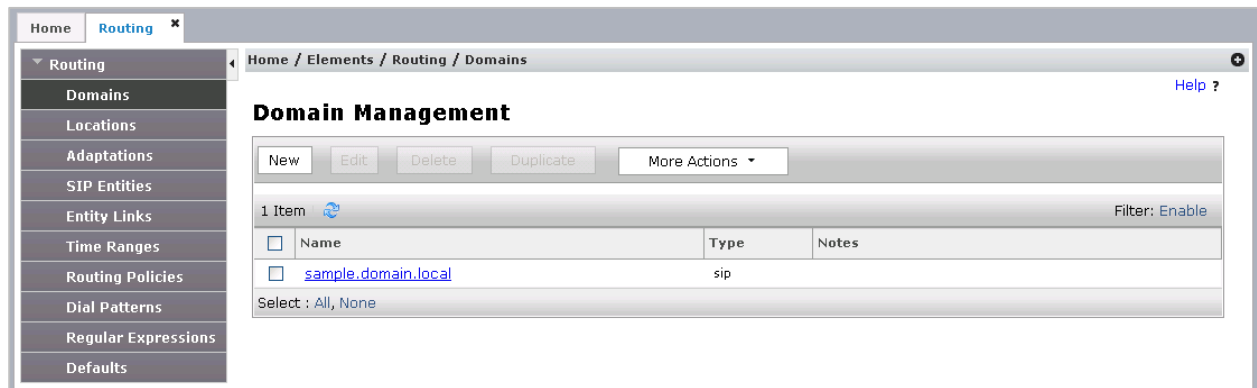


Figure 4. System Manager – Routing Domain Management

- To add a new domain, click **New**.
- To edit an existing domain, select the domain name, or select the domain checkbox and click **Edit**.
- On the **Domain Management** page, configure the required **Name** field; and the remaining fields appropriate for your organization.

The screenshot shows the 'Domain Management' form. At the top right are 'Commit' and 'Cancel' buttons. Below is a table with columns 'Name', 'Type', and 'Notes'. The 'Name' field is a text input with a red asterisk indicating it is required. The 'Type' field is a dropdown menu with 'sip' selected. The 'Notes' field is a text input. Above the table, it says '1 Item' with a refresh icon and a 'Filter: Enable' link.

Configuring Locations

Log in to the System Manager, and go to **Elements > Routing > Locations**. The list of available locations appear in the **Location** page.

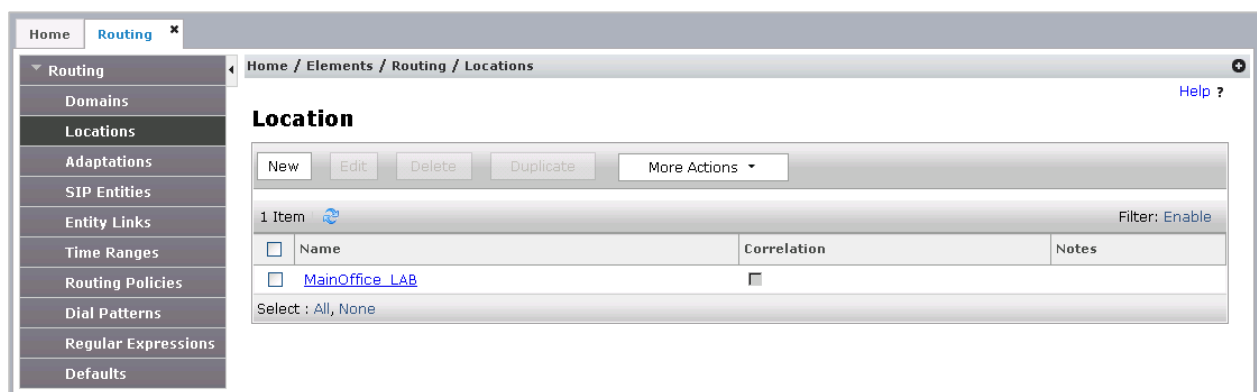


Figure 5. System Manager – Routing Location

- To add a new location, click **New**.
- To edit an existing location, select the location name, or select the location checkbox and click **Edit**.
- On the **Location Details** page, configure the required **Name** field; and the remaining fields appropriate for your organization especially the **Per-Call Bandwidth Parameters** and **Alarm Threshold** sections.

Location Details

CommitCancel

General

* Name:

Notes:

Dial Plan Transparency in Survivable Mode

Enabled:

☐

Listed Directory Number:

Associated CM SIP Entity:

Overall Managed Bandwidth

Managed Bandwidth Units:

Kbit/sec

Total Bandwidth:

Multimedia Bandwidth:

Audio Calls Can Take Multimedia Bandwidth:

☒

Per-Call Bandwidth Parameters

Maximum Multimedia Bandwidth (Intra-Location):

2000

Kbit/Sec

Maximum Multimedia Bandwidth (Inter-Location):

2000

Kbit/Sec

* Minimum Multimedia Bandwidth:

64

Kbit/Sec

* Default Audio Bandwidth:

80

Kbit/sec

Alarm Threshold

Overall Alarm Threshold:

80

%

Multimedia Alarm Threshold:

80

%

* Latency before Overall Alarm Trigger:

5

Minutes

* Latency before Multimedia Alarm Trigger:

5

Minutes

Location Pattern

Add

Remove

0 Items

Filter: Enable

	Notes
<input type="checkbox"/> IP Address Pattern	

Configuring Adaptation

Log in to the System Manager, and go to **Elements** > **Routing** > **Adaptations**. The list of available adaptations appear in the **Adaptations** page.

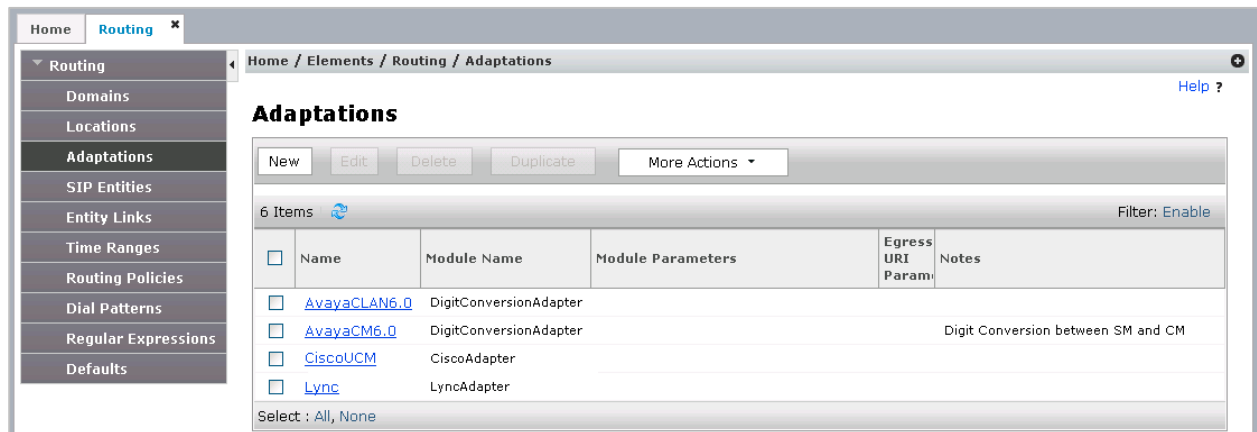


Figure 6. System Manager – Routing Adaptations

- To add a new adaptation, click **New**.
- To edit an existing adaptation, select the adaptation name, or select the adaptation checkbox and click **Edit**.
- On the **Adaptation Details** page, configure the required **Adaptation Name** and **Module Name** fields; and the remaining fields appropriate for your organization.

Adaptation Details Commit Cancel

General

* Adaptation Name:

* Module Name:

Module Parameter Type:

Egress URI Parameters:

Notes:

Digit Conversion for Incoming Calls to SM

Add Remove

0 Items Filter: Enable

<input type="checkbox"/>	Matching Pattern	Min	Max	Phone Context	Delete Digits	Insert Digits	Address to modify	Adaptation Data	Notes
--------------------------	------------------	-----	-----	---------------	---------------	---------------	-------------------	-----------------	-------

Digit Conversion for Outgoing Calls from SM

Add Remove

0 Items Filter: Enable

<input type="checkbox"/>	Matching Pattern	Min	Max	Phone Context	Delete Digits	Insert Digits	Address to modify	Adaptation Data	Notes
--------------------------	------------------	-----	-----	---------------	---------------	---------------	-------------------	-----------------	-------

Configuring SIP Entities

Log in to the System Manager, and go to **Elements > Routing > SIP Entities**. The list of available SIP entities appear in the **SIP Entities** page.

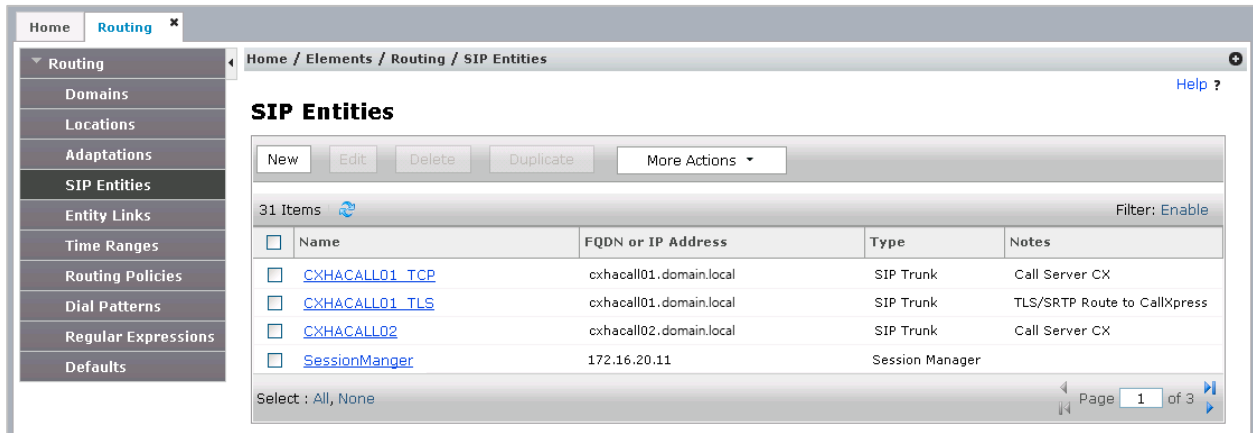


Figure 7. System Manager – Routing Location

- To add a new SIP Entity, click **New**.
- To edit an existing SIP Entity, select the SIP Entity name, or select the SIP Entity checkbox and click **Edit**.
- On the **SIP Entity Details** page, configure the required **Name** and **FQDN or IP Address** fields; and the remaining fields appropriate for your organization.

The screenshot shows the 'SIP Entity Details' page. At the top right are 'Commit' and 'Cancel' buttons. The page is divided into three sections:

- General**: Contains fields for Name, FQDN or IP Address, Type (dropdown menu set to 'Session Manager'), Notes, Location (dropdown menu), Outbound Proxy (dropdown menu), Time Zone (dropdown menu set to 'America/Los_Angeles'), and Credential name.
- SIP Link Monitoring**: Contains a dropdown menu set to 'Use Session Manager Configuration'.
- Entity Links**: Contains an 'Add' and 'Remove' button, a table with 0 items, and a 'Filter: Enable' link. The table has columns: Name, SIP Entity 1, Protocol, Port, SIP Entity 2, Port, Connection Policy, and Deny New Service.

Image continues on next page

Image continued from previous page

Listen Ports

TCP Failover port:

TLS Failover port:

Add Remove

0 Items [Filter: Enable](#)

<input type="checkbox"/>	Listen Ports	Protocol	Default Domain	Notes
--------------------------	--------------	----------	----------------	-------

SIP Responses to an OPTIONS Request

Add Remove

0 Items [Filter: Enable](#)

<input type="checkbox"/>	Response Code & Reason Phrase	Mark Entity Up/Down	Notes
--------------------------	-------------------------------	---------------------	-------

Configuring Entity Links

Log in to the System Manager, and go to **Elements > Routing > Entity Links**. The list of available entity links appear in the **Entity Links** page.

Home Routing

Routing

Domains

Locations

Adaptations

SIP Entities

Entity Links

Time Ranges

Routing Policies

Dial Patterns

Regular Expressions

Defaults

Home / Elements / Routing / Entity Links

Entity Links

New Edit Delete Duplicate More Actions

26 Items [Filter: Enable](#)

<input type="checkbox"/>	Name	SIP Entity 1	Protocol	Port	SIP Entity 2	DNS Override	Port	Connection Policy	Deny New Service	Notes
<input type="checkbox"/>	SessionManger_CXHACALL01_TCP_5060_TCP	SessionManger	TCP	5060	CXHACALL01_TCP	<input type="checkbox"/>	5060	trusted	<input type="checkbox"/>	
<input type="checkbox"/>	SessionManger_CXHACALL02_TLS_5061_TLS	SessionManger	TLS	5061	CXHACALL02_TLS	<input type="checkbox"/>	5061	trusted	<input type="checkbox"/>	
<input type="checkbox"/>	SessionManger_CXHASYSTEM_5060_TCP	SessionManger	TCP	5060	CXHASYSTEM	<input type="checkbox"/>	5060	trusted	<input type="checkbox"/>	
<input type="checkbox"/>	SessionManger_CXHASYSTEM_5061_TLS	SessionManger	TLS	5061	CXHASYSTEM	<input type="checkbox"/>	5061	trusted	<input type="checkbox"/>	

Select : All, None

Page 1 of 2

Figure 8. System Manager – Routing Entity Links

- To add a new Entity Link, click **New**.
- To edit an existing Entity Link, select the Entity Link name, or select the Entity Link checkbox and click **Edit**.
- On the **Entity Links** page, configure the required **Name**, **SIP Entity 1**, **Protocol**, **Port**, **SIP Entity 2**, and **Port** fields; and the remaining fields appropriate for your organization.

Entity Links

Commit Cancel

1 Item [Filter: Enable](#)

<input type="checkbox"/>	Name	SIP Entity 1	Protocol	Port	SIP Entity 2	DNS Override	Port	Connection Policy	Deny New Service	Notes
<input type="checkbox"/>	* <input type="text"/>	* <input type="text"/>	TLS	* 5061	* <input type="text"/>	<input type="checkbox"/>	* 5061	trusted	<input type="checkbox"/>	<input type="text"/>

Select : All, None

Configuring Time Ranges

Log in to the System Manager, and go to **Elements > Routing > Time Ranges**. The list of available time ranges appear in the **Time Ranges** page.

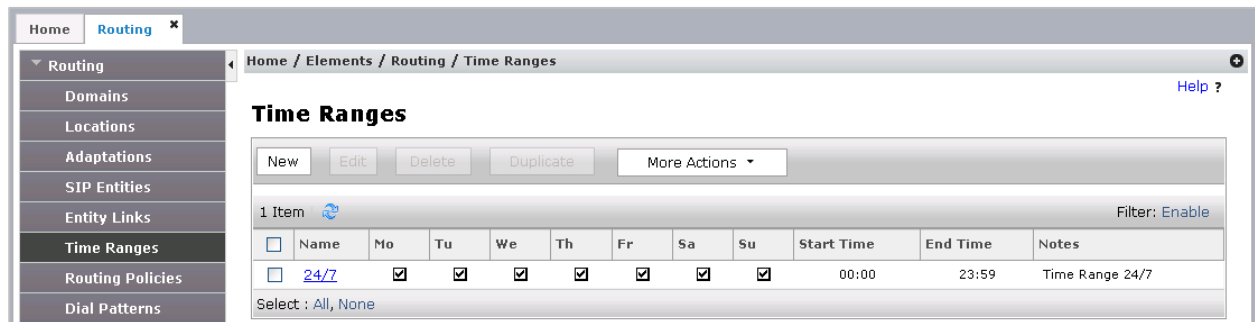


Figure 9. System Manager – Routing Time Ranges

- To add a new Time Range, click **New**.
- To edit an existing Time Range, select the Time Range name, or select the Time Range checkbox and click **Edit**.
- On the **Time Ranges** page, configure the required **Name**, **Start Time**, and **End Time** fields; and the the days of the week boxes appropriate for your organization.

Time Ranges Commit Cancel

1 Item Filter: Enable

Name	Mo	Tu	We	Th	Fr	Sa	Su	Start Time	End Time	Notes
* <input type="text"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	* 00:00	* 23:59	<input type="text"/>

Configuring Routing Policies

Log in to the System Manager, and go to **Elements > Routing > Routing Policies**. The list of available routing policies links appear in the **Routing Policies** page.

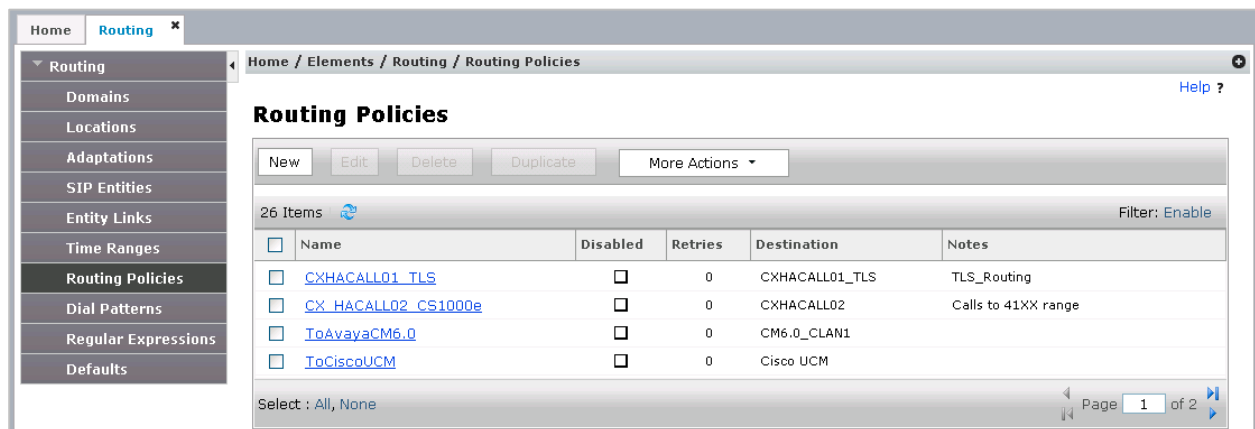


Figure 10. System Manager – Routing Policies

- To add a new Routing Policy, click **New**.
- To edit an existing Routing Policy, select the Routing Policy name, or select the Routing Policy checkbox and click **Edit**.
- On the **Routing Policy Details** page, configure the required **Name** and **Retries** fields; and the remaining fields appropriate for your organization.

Routing Policy Details

CommitCancel

General

* Name:

Disabled:

☐

* Retries:

0

Notes:

SIP Entity as Destination

Select

Name	FQDN or IP Address	Type	Notes
------	--------------------	------	-------

Time of Day

AddRemoveView Gaps/Overlaps

1 Item

Filter: Enable

<input type="checkbox"/>	Ranking	Name	Mon	Tue	Wed	Thu	Fri	Sat	Sun	Start Time	End Time	Notes
<input type="checkbox"/>	0	24/7	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	00:00	23:59	Time Range 24/7

Select : All, None

Dial Patterns

AddRemove

0 Items

Filter: Enable

<input type="checkbox"/>	Pattern	Min	Max	Emergency Call	SIP Domain	Originating Location	Notes
--------------------------	---------	-----	-----	----------------	------------	----------------------	-------

Regular Expressions

AddRemove

0 Items

Filter: Enable

<input type="checkbox"/>	Pattern	Rank Order	Deny	Notes
--------------------------	---------	------------	------	-------

Adding Avaya Trusted Certificates

Adding Trusted Certificates


You need to import the certificates that you want to add as trusted certificate in the trust store of the application. The following are the four methods of importing a trusted certificate in the trust store for an application instance:

- Import from existing
- Import from file
- Import as PEM Certificate
- Import using TLS

You can add a trusted certificate from a list of an existing certificates, a file, a remote location using TLS connection, and by copying the content from a PEM file.

To add Trusted Certificates:

- 1 Log in to the System Manager, and go to **Services > Inventory > Manage Elements**. The **Manage Elements** page appears.

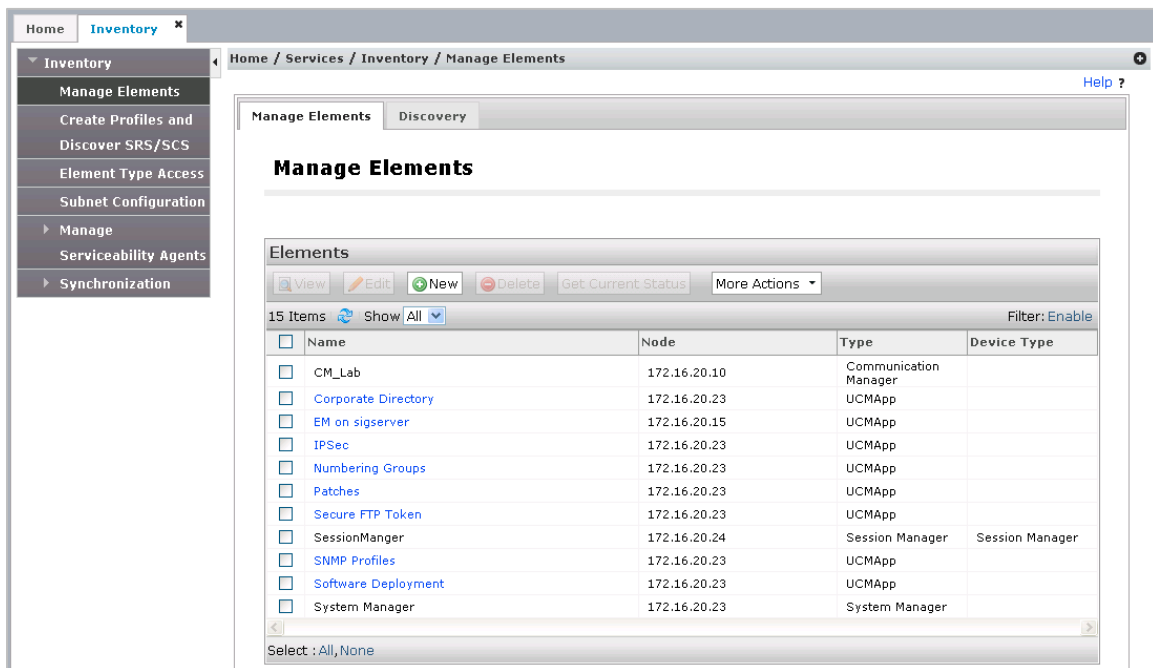

- 2 On the **Manage Elements** page, select checkbox(es) of the element(s) you want to add trusted certificates to.
- 3 Click the **More Actions** dropdown list, and select **Configure Trusted Certificates**.

- 4 On the **Trusted Certificates** page, click **Add**.
- 5 On the **Add Trusted Certificate** page, select store type from the **Store Type** field and perform one of the following steps:
 - a To import certificates from existing certificates:
 - ① Click **Import from existing**.
 - ② Select the certificate from the **Global Trusted Certificate** section.
 - ③ Click **Commit**.
 - b To import certificates from a file:
 - ① Click **Import from file**.
 - ② Enter the name of the file. You can also click **Browse** to select a file.
 - ③ Click **Retrieve Certificate**.
 - ④ Click **Commit**.
 - c To import certificates in the PEM format:
 - ① Locate the **PEM** certificate.
 - ② Open the certificate in the Notepad application.
 - ③ Select all the contents in the file.
 - ④ Perform a copy operation.
 - ⑤ Click **Import as PEM Certificate**.
 - ⑥ Perform a paste operation in the box provided at the bottom of the page.

NOTE You may include the start and end tags:
" -----BEGIN CERTIFICATE-----" and " -----END CERTIFICATE-----".
 - ⑦ Click **Commit**.
 - d To import using TLS:
 - ① Click **Import using TLS**.
 - ② Enter the IP address of the computer in the **IP Address** field.
 - ③ Enter the port of the computer in the **Port** field.
 - ④ Click **Retrieve Certificate**.
 - ⑤ Click **Commit**.

Setting up Avaya SRTP SIP

For detailed instructions on setting up Avaya SRTP SIP, please refer to Avaya the Solution & Interoperability Test Lab Application Notes document entitled *Configuring Secure Real-Time Transport Protocol (SRTP) and G.722 Audio using Avaya 9600-Series IP Telephones running SIP and H.323 Firmware – Issue 1.0*. The document is available at: downloads.avaya.com/css/P8/documents/003954807.

Programming MiCollab AM Ports

Assign the station ports to the trunk group you have created (and have therefore included in the integration). Assign an **Extension Number** and a **Name** to each port and set the **Station Type** to **4602+**.

(Page 1)

add station 4002		send (return)	help (f5)	cancel (esc)	enter (f3)	schedule (f9)	next (f7)	previous (f8)
1 2 3 4 5								
STATION								
Extension: 4002			Lock Messages? <input type="checkbox"/>			BCC: 0		
Type: 4620			Security Code: *			TN: 1		
Port: S00008			Coverage Path 1:			COR: 1		
Name: Test			Coverage Path 2:			COS: 1		
			Hunt-to Station:			Tests? <input type="checkbox"/>		
STATION OPTIONS								
Loss Group: 19			Time of Day Lock Table:					
			Personalized Ringing Pattern:			1		
Speakerphone: 2-way			Message Lamp Ext:			4002		
Display Language: english			Mute Button Enabled?			<input type="checkbox"/>		
Survivable GK Node Name:			Expansion Module?			<input type="checkbox"/>		
Survivable COR: internal			Media Complex Ext:					
Survivable Trunk Dest? <input type="checkbox"/>			IP SoftPhone?			<input type="checkbox"/>		
			IP Video?			<input type="checkbox"/>		
			Short/Prefixed Registration Allowed:			default		
			Customizable Labels?			<input type="checkbox"/>		

(Page 2)

add station 4002		send (return)	help (f5)	cancel (esc)	enter (f3)	schedule (f9)	next (f7)	previous (f8)
1 2 3 4 5								
STATION								
FEATURE OPTIONS								
LWC Reception: spe			Auto Select Any Idle Appearance? <input type="checkbox"/>					
LWC Activation? <input type="checkbox"/>			Coverage Msg Retrieval? <input type="checkbox"/>					
LWC Log External Calls? <input type="checkbox"/>			Auto Answer: none					
CDR Privacy? <input type="checkbox"/>			Data Restriction? <input type="checkbox"/>					
Redirect Notification? <input type="checkbox"/>			Idle Appearance Preference? <input type="checkbox"/>					
Per Button Ring Control? <input type="checkbox"/>			Bridged Idle Line Preference? <input type="checkbox"/>					
Bridged Call Alerting? <input type="checkbox"/>			Restrict Last Appearance? <input type="checkbox"/>					
Active Station Ringing: single			EMU Login Allowed? <input type="checkbox"/>					
H.320 Conversion? <input type="checkbox"/>			Per Station CPN - Send Calling Number? <input type="checkbox"/>					
Service Link Mode: as-needed			EC500 State: disabled					
Multimedia Mode: enhanced			Audible Message Waiting? <input type="checkbox"/>					
MWI Served User Type: sip-adjunct			Display Client Redirection? <input type="checkbox"/>					
			Select Last Used Appearance? <input type="checkbox"/>					
			Coverage After Forwarding? <input type="checkbox"/>					
			Multimedia Early Answer? <input type="checkbox"/>					
			Direct IP-IP Audio Connections? <input type="checkbox"/>					
Emergency Location Ext: 4002			Always Use? <input type="checkbox"/>			IP Audio Hairpinning? <input type="checkbox"/>		

(Page 3)

add station 4002	send (return)	help (f5)	cancel (esc)	enter (f3)	schedule (f9)	next (f7)	previous (f8)
1	2	3	4	5			
STATION							
Conf/Trans on Primary Appearance? <input type="text" value="n"/>							
Bridged Appearance Origination Restriction? <input type="text" value="n"/>							
Call Appearance Display Format: <input type="text" value="disp-param-default"/>							
IP Phone Group ID: <input type="text"/>							
Enhanced Callr-Info Display for 1-Line Phones? <input type="text" value="n"/>							
ENHANCED CALL FORWARDING							
				Forwarded Destination			
Unconditional For Internal Calls To:				<input type="text"/>	Active <input type="text" value="n"/>		
External Calls To:				<input type="text"/>	<input type="text" value="n"/>		
Busy For Internal Calls To:				<input type="text"/>	<input type="text" value="n"/>		
External Calls To:				<input type="text"/>	<input type="text" value="n"/>		
No Reply For Internal Calls To:				<input type="text"/>	<input type="text" value="n"/>		
External Calls To:				<input type="text"/>	<input type="text" value="n"/>		
SAC/CF Override: <input type="text" value="n"/>							

(Page 4)

add station 4002	send (return)	help (f5)	cancel (esc)	enter (f3)	schedule (f9)	next (f7)	previous (f8)
1	2	3	4	5			
STATION							
SITE DATA							
Room: <input type="text"/>				Headset? <input type="text" value="n"/>			
Jack: <input type="text"/>				Speaker? <input type="text" value="n"/>			
Cable: <input type="text"/>				Mounting: <input type="text" value="d"/>			
Floor: <input type="text"/>				Cord Length: <input type="text" value="0"/>			
Building: <input type="text"/>				Set Color: <input type="text"/>			
ABBREVIATED DIALING							
List1: <input type="text"/>		List2: <input type="text"/>		List3: <input type="text"/>			
BUTTON ASSIGNMENTS							
1: <input type="text" value="call-appr"/>		5: <input type="text"/>					
2: <input type="text" value="call-appr"/>		6: <input type="text"/>					
3: <input type="text" value="call-appr"/>		7: <input type="text"/>					
4: <input type="text"/>		8: <input type="text"/>					

Declare the ports you have defined, and any SIP-based extensions that MiCollab AM subscribers use, as parts of an external integration.

To do this, enter the command ***change off-pbx-telephone station-mapping <number>***, where ***<number>*** is the station number for any port involved in the integration.

The command displays a table that you can use to configure all of the station ports you need to change. Associate all of these ports with the trunk group you defined earlier, as the following two examples demonstrate.

(Page 1)

display off-pbx-telephone station ▾

send (return)

help (f5)

cancel (esc)

enter (f3)

schedule (f9)

next (f7)

previous (f8)

1

2

3

STATIONS WITH OFF-PBX TELEPHONE INTEGRATION

Station Extension	Application	Dial Prefix	CC	Phone Number	Trunk Selection	Config Set	Dual Mode
5001	OPS	-		5001	1	1	
5002	OPS	-		5002	1	1	
5003	OPS	-		5003	1	1	
5004	OPS	-		5004	1	1	
5005	OPS	-		5005	1	1	
5006	OPS	-		5006	1	1	
5007	OPS	-		5007	1	1	

(Page 2)

display off-pbx-telephone station ▾

send (return)

help (f5)

cancel (esc)

enter (f3)

schedule (f9)

next (f7)

previous (f8)

1

2

3

STATIONS WITH OFF-PBX TELEPHONE INTEGRATION

Station Extension	Appl Name	Call Limit	Mapping Mode	Calls Allowed	Bridged Calls	Location
5001	OPS	2	both	all	none	
5002	OPS	2	both	all	none	
5003	OPS	2	both	all	both	
5004	OPS	2	both	all	both	
5005	OPS	2	both	all	both	
5006	OPS	2	both	all	both	
5007	OPS	2	both	all	both	

Configuring the SIP Entities on Avaya Servers

Verify the connection between the Communications Manager and Session Manager servers on the Session Manager server. Make sure the Communication Manager server Interface reflects the same IP addresses as the Media Server Interface.

Configure a SIP Entity for the Communication Manager server and a SIP Entity for the Session Manager server.

NOTE For more information on SIP Entities, refer to the Avaya document 03-603324. See the topic, *Administering Avaya Aura Session Manager*.

To configure the SIP Entities:

- 1 Log in to the System Manager, and go to **Elements > Routing > SIP Entities**. The **SIP Entities** page displays.

SIP Entities

31 Items

Name	FQDN or IP Address	Type	Notes
CXHACALL01_TCP	cxhacall01.domain.local	SIP Trunk	Call Server CX
CXHACALL01_TLS	cxhacall01.domain.local	SIP Trunk	TLS/SRTP Route to CallXpress
CXHACALL02	cxhacall02.domain.local	SIP Trunk	Call Server CX
SessionManager	172.16.20.11	Session Manager	

Select : All, None

Page 1 of 3

- From the SIP Entities table, select **Session Manager**, or select the **Session Manager** checkbox and then click **Edit**. The **SIP Entity Details** page displays.
- On the **SIP Entity Details** page, go to the **Port** section, and then assign the **Listen Port** number, select **TCP** or **EDP** as the **Protocol**, and select the **Default Domain**.

Listen Ports

TCP Failover port:

TLS Failover port:

Add Remove

3 Items

Listen Ports	Protocol	Default Domain	Notes
<input type="text" value="5060"/>	TCP	<input type="text" value=""/>	<input type="text" value=""/>
<input type="text" value="5060"/>	TCP	<input type="text" value=""/>	<input type="text" value=""/>
<input type="text" value="5061"/>	TCP	<input type="text" value=""/>	<input type="text" value=""/>

Select : All, None

IMPORTANT The port number and the protocol you enter here must match the SIP Server Port and the Transport for Outgoing SIP Message of the Required Parameters fields on the MiCollab AM Integration options dialog box.

The default protocol is **TCP** and the default port number is **5060**. For more information, refer to the [In the Communication Profile](#) section, add password as required.

- In the **Communication Address** section, click **New**. The options for adding a new communication address display.

Communication Address

New Edit Delete


Type	Handle	Domain
No Records found		


Type:

* Fully Qualified Address: @

Add Cancel

- From the **Type** dropdown menu, select **Avaya SIP**.

- 6 Fill in appropriate address in the **Fully Qualified Address** fields, and then click **Add**.
- 7 Repeat **Steps 10 to 12** to add **Avaya E.164**.
- 8 In the **Session Manager Profile** section, select the arrow  to open the section.

☐ Session Manager Profile 

SIP Registration

* Primary Session Manager

Secondary Session Manager

Survivability Server

Max. Simultaneous Devices

Block New Registration When Maximum Registrations Active? ☐

Application Sequences

Origination Sequence

Termination Sequence


Call Routing Settings

* Home Location

Conference Factory Set

Call History Settings

Enable Centralized Call History? ☐

- 9 In the **Session Manager Profile** section, fill in the following options:
 - a In the **Primary Session Manger** field, enter or select **Session Manager**.
 - b In the **Application Sequences** section, for the **Origination Sequence** and **Termination Sequence** options, select **CM Features**.
 - c In the **Call Routing Settings** section, for the **Home Location** option, select the appropriate location.
- 10 Select the arrow  icon at the end of the **CM Endpoint Profile** option to open the section.

☐ CM Endpoint Profile

*

System

Select

*

Profile Type

Endpoint

Use Existing Endpoints

☐

*

Extension

Endpoint Editor

*

Template

Select/Reset

Set Type

Security Code

*

Port

Voice Mail Number

Preferred Handle

(None)

Calculate Route Pattern

☐

Sip Trunk

Enhanced Callr-Info display for 1-line phones

☐

Delete Endpoint on Unassign of Endpoint from User or on Delete User.

☒

Override Endpoint Name and Localized Name

☒

Allow H.323 and SIP Endpoint Dual Registration

☐

- 11 In the **CM Endpoint Profile** section, fill in the appropriate options for **System**, **Profile Type**, **Extension**, **Template**, **Security Code**, **Port**, and **Voice Mail Number**.


Configuring MiCollab AM section.

Configuring the Session Manager Firewall

Verify that the MiCollab AM server's IP address is not blocked by the Session Manager firewall. If there is more than one Call Server participating in the integration, ensure that the Session Manager server does not block the IP Address of any Call Server.

To configure the Firewall:

- 1 Log in to the System Manager, and go to **Elements > Session Manager > Network Configuration > SIP Firewall**. The **SIP Firewall Configuration** page displays.

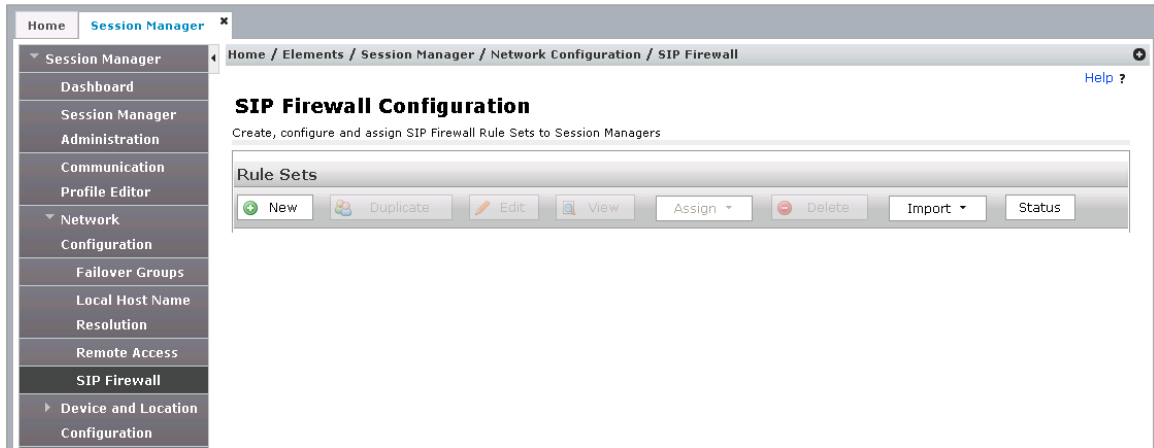

- 2 On the **SIP Firewall Configuration** page, in the **Rule Sets** section, click **New**. The **Rule Set** page displays.

The 'Rule Set' page has a title bar with 'Commit' and 'Cancel' buttons. Below the title is the text 'Edit or view SIP Firewall Rule Set whitelist, blacklist, and rules.' There are two input fields: '*Name' and 'Description'. Below these are three tabs: 'Rules' (selected), 'Blacklist', and 'Whitelist'. Under the 'Rules' tab, there is an 'Enabled' checkbox. Below the checkbox are buttons: 'New', 'Edit', 'View', 'Delete', 'Up', and 'Down'. At the bottom is a table with the following columns: 'Enabled', 'Name', 'Action Type', 'Log Type', and 'Log Message'.

- 3 In the **Name** field, select or type *Rule Set for SessionManager*.
- 4 In the **Rules** tab, click **New**. The **Rule** page displays.

Rule Cancel Done

General | IP Layer Match Options | SIP Layer Match Options | IP/SIP Layer Track | Threshold | Connection |
Expand All | Collapse All

General

Enabled: ☒

*Name:

*Action Type:

Log Type:

Log Message:

IP Layer Match Options

Protocol:

Remote IP Address:

Remote Port:

Local Port:

SIP Layer Match Options

New Delete

<input type="checkbox"/>	Key Type	Value Type	Value
--------------------------	----------	------------	-------

IP/SIP Layer Track

Track:

Threshold

Count (packets):

Period (secs):

Timeout (secs):

Connection

Connection Type:

*Required Cancel Done

- 5 On the **Rule** page, configure the firewall appropriately to allow access to each Call Server in the integration. When finished, click **Done**.
- 6 Click the **Whitelist** tab and click **New**.

Rule Set Commit Cancel

Edit or view SIP Firewall Rule Set whitelist, blacklist, and rules.

*Name:

Description:

Rules **Blacklist** **Whitelist**

Enabled ☐

New Delete

<input type="checkbox"/>	Key	Value	Mask
<input type="checkbox"/>	Remote IP Address <input type="text" value="Any"/>	<input type="text"/>	<input type="text"/>

Select : All, None

- 7 Define an IP address to ensure that an IP address is not being blocked by a firewall. Click **Commit**.

Configuring the Routing Policies

Configure the routing policies and the dialing pattern for the MiCollab AM hunt group and the non-SIP subscriber directory number range.

To configure the routing policies:

- 1 Log in to the System Manager, and go to **Elements > Routing > Routing Policies**. The **Routing Policies** page displays.
- 2 On the **Routing Policies** page, click **New** to create a new Routing Policy. The **Routing Policy Details** page displays.

- 3 In the **General** section, enter the name for the policy and number of retries.
- 4 In the **SIP Entity as Destination** and **Dial Pattern** sections, configure the options for the MiCollab AM hunt group number and the non-SIP subscriber directory number range according to the requirements of the site. This enables the non-SIP calls to route to the Communication Manager.

IMPORTANT When you add user definitions for the MiCollab AM ports, you must assign the same password to all users and all ports. If you do not, the integration cannot function correctly.

- 5 Click **Commit** to save the changes.

Adding the MiCollab AM Port User Definitions

Add a user definition for each MiCollab AM port in the integration.

To add a user definition:

- 1 Log in to the System Manager, and go to **Users > User Management > Manage Users**. The **User Management** page displays.
- 2 On the **User Management** page, click **New**. The **New User Profile** page displays in the **Identity** tab.

The screenshot shows the 'New User Profile' page in the 'Identity' tab. The page has a sidebar on the left with a tree view containing 'User Management', 'Manage Users', 'Public Contacts', 'Shared Addresses', 'System Presence', 'ACLs', 'Communication', 'Profile Password', and 'Policy'. The main content area is titled 'New User Profile' and has tabs for 'Identity', 'Communication Profile', 'Membership', and 'Contacts'. The 'Identity' tab is active. It contains a 'User Provisioning Rule' dropdown menu, an 'Identity' section with fields for 'Last Name', 'Last Name (Latin Translation)', 'First Name', 'First Name (Latin Translation)', 'Middle Name', 'Description', and 'Login Name', and buttons for 'Commit & Continue', 'Commit', and 'Cancel'.

- 3 In the **Identity** tab, fill in the appropriate fields.
- 4 Click the **Communication Profile** tab.

The screenshot shows the 'New User Profile' page in the 'Communication Profile' tab. The page has the same sidebar as the previous screenshot. The main content area is titled 'New User Profile' and has tabs for 'Identity', 'Communication Profile', 'Membership', and 'Contacts'. The 'Communication Profile' tab is active. It contains a 'Communication Profile' section with fields for 'Communication Profile Password' and 'Confirm Password', a 'Name' section with a 'Primary' radio button and a 'Select : None' dropdown, and a 'Communication Address' section with a table. The table has columns for 'Type', 'Handle', and 'Domain', and a row for 'No Records found'. There are buttons for 'New', 'Delete', 'Done', and 'Cancel' at the top of the table.

Image continues on next page.

Image continued from previous page.

This screenshot shows a configuration window with a list of profile types on the left and a main configuration area on the right. The list includes 'Session Manager Profile', 'CM Endpoint Profile', 'CS 1000 Endpoint Profile', and 'CallPilot Messaging Profile'. The 'Session Manager Profile' is selected. The main area is currently empty. At the bottom, there is a 'Required' indicator and three buttons: 'Commit & Continue', 'Commit', and 'Cancel'.

- 5 In the **Communication Profile** section, enter the same numeric password for MiCollab AM.

NOTE The password is required later to configure the MiCollab AM integration.

- 6 In the **Communication Address** section, click **New**. The options for adding a new communication address display.

This screenshot shows the 'Communication Address' configuration window. It has a 'New' button and a table with columns 'Type', 'Handle', and 'Domain'. Below the table, there is a 'Type' dropdown menu set to 'Avaya SIP'. Below that, there is a 'Fully Qualified Address' field with an '@' symbol and a domain dropdown menu. At the bottom right, there are 'Add' and 'Cancel' buttons.

- 7 From the **Type** dropdown menu, select **Avaya SIP**.
- 8 In the **Fully Qualified Address** fields, enter the extension number assigned to the port and the domain. And then click **Add**.

NOTE Assign each port the same extension number as you assigned it in the ASA configuration screens.

- 9 In the **Session Manager Profile** section, select the arrow to open the section.

This screenshot shows the 'Session Manager Profile' configuration window. It has a 'Session Manager Profile' section with a dropdown arrow. Below this, there are several sections: 'SIP Registration' with fields for 'Primary Session Manager', 'Secondary Session Manager', 'Survivability Server', 'Max. Simultaneous Devices' (set to 1), and 'Block New Registration When Maximum Registrations Active?'; 'Application Sequences' with dropdowns for 'Origination Sequence' and 'Termination Sequence'; 'Call Routing Settings' with dropdowns for 'Home Location' and 'Conference Factory Set'; and 'Call History Settings' with a checkbox for 'Enable Centralized Call History?'. At the bottom right, there are 'Add' and 'Cancel' buttons.

- 10 In the **Session Manager Profile** section:
 - a In the **SIP Registration** section, select the **Primary Session Manager**.
 - b In the **Call Routing Settings** section, select the **Home Location**.
- 11 No administration is required for the **CM Endpoint Profile** section.
- 12 Click **Commit**.

Creating a Hunt Group and Pilot Number

In order to create a hunt group and pilot number:

- Define a Hunt Group for MiCollab AM and assign a Pilot Number to it that is not associated with any port or extension.
- Set the ISDN/SIP Caller Display to mbr-name to allow the stations in the group to display the ame of the group member receiving the call.
- Add all MiCollab AM port extensions to the new hunt group.

The following examples show a typical hunt group configuration for this integration.

(Page 1)

change hunt-group 56																								
send (return) help (f5) cancel (esc) enter (f3) schedule (f9) next (f7) previous (f8)																								
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25
HUNT GROUP																								
Group Number: 56										ACD? <input type="text" value="n"/>														
Group Name: Buffalo - SIP Trunk INTG										Queue? <input type="text" value="n"/>														
Group Extension: 5600										Vector? <input type="text" value="n"/>														
Group Type: ucd-mia										Coverage Path: <input type="text" value=""/>														
TN: 1										Night Service Destination: <input type="text" value=""/>														
COR: 1										MM Early Answer? <input type="text" value="n"/>														
Security Code: <input type="text" value=""/>										Local Agent Preference? <input type="text" value="n"/>														
ISDN/SIP Caller Display: grp-name																								

(Page 2)

change hunt-group 56																								
send (return) help (f5) cancel (esc) enter (f3) schedule (f9) next (f7) previous (f8)																								
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25
HUNT GROUP																								
Message Center: sip-adjunct																								
Voice Mail Number										Voice Mail Handle										Routing Digits				
																				(e.g., AAR/ARS Access Code)				
5600										5600										107				

change hunt-group 56		send (return)	help (f5)	cancel (esc)	enter (f3)	schedule (f9)	next (f7)	previous (f8)																
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25

HUNT GROUP

Group Number: 56 Group Extension: 5600 Group Type: ucd-mia
 Member Range Allowed: 1 - 1500 Administered Members (min/max): 0 / 0
 Total Administered Members: 0

GROUP MEMBER ASSIGNMENTS

Ext	Name(19 characters)	Ext	Name(19 characters)
1:		14:	
2:		15:	
3:		16:	
4:		17:	
5:		18:	
6:		19:	
7:		20:	
8:		21:	
9:		22:	
10:		23:	
11:		24:	
12:		25:	
13:		26:	

At End of Member List

Creating a Coverage Path

Define a Coverage Path to use on all MiCollab AM subscriber extensions, as shown in the following example. In this Coverage Path (2), define the MiCollab AM hunt group (2) as the only Coverage Point. Configure the Coverage Path so that the telephone system forwards calls to this Coverage Point when a subscriber extension is busy, ring-no-answer (RNA), or set to do-not-disturb mode (DND).

add coverage path 2		send (return)	help (f5)	cancel (esc)	enter (f3)	schedule (f9)	next (f7)	previous (f8)
---------------------	--	---------------	-----------	--------------	------------	---------------	-----------	---------------

COVERAGE PATH

Coverage Path Number: 2
 Cvg Enabled for UDN Route-To Party? ☐ n Hunt after Coverage? ☐ n
 Next Path Number: Linkage

COVERAGE CRITERIA

Station/Group Status	Inside Call	Outside Call
Active?	<input type="checkbox"/> n	<input type="checkbox"/> n
Busy?	<input type="checkbox"/> y	<input type="checkbox"/> y
Don't Answer?	<input type="checkbox"/> y	<input type="checkbox"/> y
All?	<input type="checkbox"/> n	<input type="checkbox"/> n
DND/SAC/Goto Cover?	<input type="checkbox"/> y	<input type="checkbox"/> y
Holiday Coverage?	<input type="checkbox"/> n	<input type="checkbox"/> n

Number of Rings: 5

COVERAGE POINTS

Terminate to Coverage Pts. with Bridged Appearances? ☐ n

Point1: h2	Rng: <input type="checkbox"/>	Point2: <input type="text"/>
Point3: <input type="text"/>		Point4: <input type="text"/>
Point5: <input type="text"/>		Point6: <input type="text"/>

Creating a Route Pattern

Define a call routing pattern as shown in the following example. Associate this pattern with the trunk group you defined earlier under Creating a SIP Trunk Group.

IMPORTANT You must deactivate Secure SIP in this route pattern.

add route-pattern 1 send (return) help (f5) cancel (esc) enter (f3) schedule (f9) next (f7) previous (f8)

1 2 3

Pattern Number: 1 Pattern Name: SIP

SCCAN? ☐ Secure SIP? ☐ Used for SIP stations? ☐

Grp No	FRL	NPA	Pfx	Hop	Toll	No.	Inserted	DCS/ IXC
			Mrk	Lmt	List	Del	Digits	QSIG
1:	1	0						n user
2:								n user
3:								n user
4:								n user
5:								n user
6:								n user

BCC	VALUE	TSC	CA-TSC	ITC	BCIE	Service/Feature	PARM	Sub	Numbering	LAR
	0 1 2 M 4 W		Request					Dgts	Format	
1:	y y y y y n	n		rest					lev0-pvt	none
2:	y y y y y n	n		rest						none
3:	y y y y y n	n		rest						none
4:	y y y y y n	n		rest						none
5:	y y y y y n	n		rest						none
6:	y y y y y n	n		rest						none

Modifying Digit Conversion Tables

Update the Automatic Alternate Routing (AAR) digit analysis table so that the hunt pilot number is a valid dialed string that maps to the route pattern you have defined for the MiCollab AM hunt group, as shown in the following example:

list aar analysis	send (return)	help (f5)	cancel (esc)	enter (f3)	schedule (f9)	next (f7)	previous (f8)
Dialed String	Min	Max	Route Pat	Call Type	Node Number		
2	7	7	999	aar			
3	7	7	999	aar			
4	7	7	999	aar			
4200	4	4	10	lev0			
4300	4	4	10	lev0			
4400	4	4	9	aar			
4500	4	4	45	aar			
4600	4	4	46	aar			
4800	4	4	48	aar			
490	4	4	99	aar			
5	7	7	999	aar			
5300	4	4	53	aar			
5400	4	4	54	aar			
5500	4	4	27	aar			
5600	4	4	1	aar			

[illegible]

Update the location definition as shown in the following example, so that the definition specifies the route pattern you defined earlier under the [Creating a Route Pattern](#) section.

Programming Subscriber Telephones

NOTE There are several ways to setup initialization parameters for 9600 SIP phones.

For more information, refer to *Avaya one-X® Deskphone Edition for 9600 Series IP Telephones Installation and Maintenance Guide* available at: downloads.avaya.com/css/P8/documents/100169223.

The document contains detailed information about initializing switch parameters for 9600 SIP phones.

To create a station definition for subscriber telephones:

- 1 At the ASA terminal, create a station definition for each subscriber extension as shown in the examples in Step 2.
- 2 Make the **MWI LAMP Ext** number the same as the station's extension number, and set the **Coverage Path 1** to the one you created earlier.
- 3 Set the **MWI Served User Type** as, **sip-adjunct**, and then associate the station with the Trunk Group you defined previously.

(Page 1)

display station 4010	send (return)	help (f5)	cancel (esc)	enter (f3)	schedule (f9)	next (f7)	previous (f8)
1	2	3	4	5	6		
STATION							
Extension: 4010		Lock Messages? n		BCC: 0			
Type: 9620SIP		Security Code: *		TN: 1			
Port: S00101		Coverage Path 1: 58		COR: 1			
Name: 4010SIP, stn4010		Coverage Path 2:		COS: 1			
		Hunt-to Station:					
STATION OPTIONS							
Loss Group: 19				Time of Day Lock Table:			
				Message Lamp Ext: 4010			
Display Language: english							
Survivable COR: internal				IP SoftPhone? n			
Survivable Trunk Dest? y				IP Video? n			

(Page 2)

display station 4010	send (return)	help (f5)	cancel (esc)	enter (f3)	schedule (f9)	next (f7)	previous (f8)
1	2	3	4	5	6		
STATION							
FEATURE OPTIONS							
LWC Reception: spe		Coverage Msg Retrieval? y					
LWC Activation? y		Auto Answer: none					
CDR Privacy? n		Data Restriction? n					
Per Button Ring Control? n		Idle Appearance Preference? n					
Bridged Call Alerting? n		Bridged Idle Line Preference? n					
Active Station Ringing: single		Restrict Last Appearance? n					
H.320 Conversion? n		Per Station CPN - Send Calling Number?					
		EC500 State: enabled					
MWI Served User Type:		Coverage After Forwarding? s					
AUDIX Name:		Direct IP-IP Audio Connections? y					
Emergency Location Ext: 4010		Always Use? n IP Audio Hairpinning? n					

- 4 Associate the station with the SIP trunk. This is required for MWI purposes.

(Page 6)

display station 4010	send (return)	help (f5)	cancel (esc)	enter (f3)	schedule (f9)	next (f7)	previous (f8)
1	2	3	4	5	6		
STATION							
SIP FEATURE OPTIONS							
Type of 3PCC Enabled: None							
SIP Trunk: 1							

- 5 Add the station to the *off-pbx-telephone station-mapping*. **AAR** is used for routing of 4011 and 4012. In the **AAR** form:

display off-pbx-telephone station	send (return)	help (f5)	cancel (esc)	enter (f3)	schedule (f9)	next (f7)	previous (f8)
1	2	3					
STATIONS WITH OFF-PBX TELEPHONE INTEGRATION							
Station Extension	Application	Dial Prefix	CC	Phone Number	Trunk Selection	Config Set	Dual Mode
4001	OPS	-		4001	1	1	
4010	OPS	-		4010	1	1	
4011	OPS	-		4011	aar	1	
4012	OPS	-		4012	aar	1	
4013	OPS	-		4013	1	1	
4014	OPS	-		4014	1	1	
4015	OPS	-		4015	1	1	
4017	OPS	-		4017	1	1	
4019	OPS	-		4019	1	1	
5001	OPS	-		5001	1	1	
5002	OPS	-		5002	1	1	
5003	OPS	-		5003	1	1	
5004	OPS	-		5004	1	1	
5005	OPS	-		5005	1	1	
5006	OPS	-		5006	1	1	
5007	OPS	-		5007	1	1	

- 6 Add the extension number into the public-unknown-numbering form.

display public-unknown-number	send (return)	help (f5)	cancel (esc)	enter (f3)	schedule (f9)	next (f7)	previous (f8)
1	2						
NUMBERING - PUBLIC/UNKNOWN FORMAT							
Ext Len	Ext Code	Trk Grp(s)	CPN Prefix	Total CPN Len			
4	4			4	Total Administered: 7 Maximum Entries: 9999		
5	4	27		4			
4	5	1		4			
6	8		88	8			
7	8	11	555	10			
4	4400	11	425111	10	Note: If an entry applies to a SIP connection to Avaya Aura(R) Session Manager, the resulting number must be a complete E.164 number.		
4	5700	57		4			
					Communication Manager automatically inserts a '+' digit in this case.		

- 7 To add new users, log in to the System Manager, and go to **Users > User Management > Manage Users**. And the click **New**. The **New User Profile** page displays in the **Identity** tab.

The screenshot shows the 'New User Profile' page in the Identity tab. The page has a sidebar on the left with a tree view containing 'User Management', 'Manage Users', 'Public Contacts', 'Shared Addresses', 'System Presence', 'ACLs', 'Communication', 'Profile Password', and 'Policy'. The main content area is titled 'New User Profile' and has tabs for 'Identity', 'Communication Profile', 'Membership', and 'Contacts'. The 'Identity' tab is active. Below the tabs, there is a 'User Provisioning Rule' dropdown menu. The 'Identity' section contains several form fields: 'Last Name' (required), 'Last Name (Latin Translation)', 'First Name' (required), 'First Name (Latin Translation)', 'Middle Name', 'Description' (with up/down arrows), 'Login Name' (required), 'Authentication Type' (set to 'Basic'), 'Password', 'Confirm Password', 'Localized Display Name', 'Endpoint Display Name', 'Title', 'Language Preference', 'Time Zone', 'Employee ID', 'Department', and 'Company'. At the bottom of the form, there are sections for 'Address' and 'Localized Names'. The page has 'Commit & Continue', 'Commit', and 'Cancel' buttons at the top right and bottom right. A legend at the bottom left indicates that a red asterisk (*) denotes a required field.

- 8 In the **Identity** tab, add in the name and password as required.

- 9 Click the **Communication Profile** tab.


The screenshot shows the 'New User Profile' page in the Communication Profile tab. The sidebar and main content area are the same as in the previous screenshot. The 'Communication Profile' tab is active. Below the tabs, there is a 'Communication Profile' section with 'Communication Profile Password' and 'Confirm Password' fields. Below these fields, there is a table with columns 'Name' and 'Select'. The table has one row with 'Primary' in the 'Name' column and a radio button in the 'Select' column. Below the table, there is a 'Name' field (required) and a 'Default' checkbox. The page has 'Commit & Continue', 'Commit', and 'Cancel' buttons at the top right and bottom right.


Image continues on next page

Image continued from previous page

- 10 In the **Communication Profile** section, add password as required.
- 11 In the **Communication Address** section, click **New**. The options for adding a new communication address display.

- 12 From the **Type** dropdown menu, select **Avaya SIP**.
- 13 Fill in appropriate address in the **Fully Qualified Address** fields, and then click **Add**.
- 14 Repeat **Steps 10 to 12** to add **Avaya E.164**.
- 15 In the **Session Manager Profile** section, select the arrow to open the section.

- 16** In the **Session Manager Profile** section, fill in the following options:
- a** In the **Primary Session Manager** field, enter or select **Session Manager**.
 - b** In the **Application Sequences** section, for the **Origination Sequence** and **Termination Sequence** options, select **CM Features**.
 - c** In the **Call Routing Settings** section, for the **Home Location** option, select the appropriate location.
- 17** Select the arrow  icon at the end of the **CM Endpoint Profile** option to open the section.

☐ **CM Endpoint Profile** 

* System

Select

* Profile Type

Endpoint

Use Existing Endpoints

☐

* Extension

Endpoint Editor

* Template

Select/Reset

Set Type

Security Code

* Port

Voice Mail Number

Preferred Handle

(None)

Calculate Route Pattern

☐

Sip Trunk

Enhanced Callr-Info display for 1-line phones

☐

Delete Endpoint on Unassign of Endpoint from User or on Delete User.

☒

Override Endpoint Name and Localized Name

☒

Allow H.323 and SIP Endpoint Dual Registration

☐

- 18** In the **CM Endpoint Profile** section, fill in the appropriate options for **System**, **Profile Type**, **Extension**, **Template**, **Security Code**, **Port**, and **Voice Mail Number**.


Configuring MiCollab AM

After you have programmed the telephone system, you must configure MiCollab AM for the integration. Follow the steps in the subsequent section to complete the integration.

IMPORTANT During the integration process, you would be required to import certificate files to the MiCollab AM system. Prior to configuring MiCollab AM, copy the certificate files (**Telephonyserversipcert.pem** and **Telephonyserversipkey.pem**) to local MiCollab AM server of designated certificate repository.

To configure MiCollab AM for the integration:

- 1 In the **Installation Configuration** dialog box, enter the name of your site in the **Site Name** box, the mailbox length in digits in the **Mailbox Length** box, and the first extension number for the first line in the **First Extension** box.
- 2 Select **Avaya** as the manufacturer, **Communication Manager** as the model, and then **SIP Trunk** as the integration type.

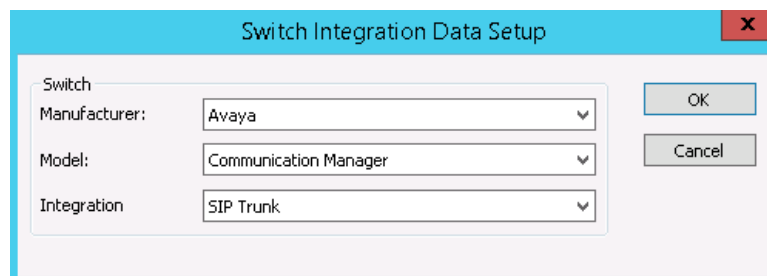

- 3 Click **OK**. The **Switch Options** dialog box displays.

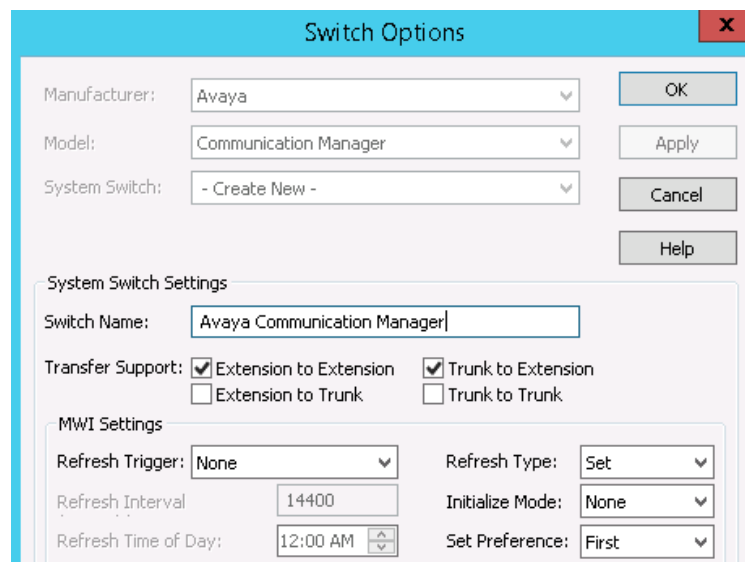


Image continues on next page

Image continued from previous page

MWI Settings

Refresh Trigger: Refresh Type:
 Refresh Interval: Initialize Mode:
 Refresh Time of Day: Set Preference:

Inter-Switch Connectivity Group Assignments

Name	Type	Member
Incoming 1	Inter-Switch Incoming Uniform Numbering Plan	<input type="checkbox"/>
Incoming 2	Inter-Switch Incoming Uniform Numbering Plan	<input type="checkbox"/>
Outgoing 1	Inter-Switch Outgoing Uniform Numbering Plan	<input type="checkbox"/>
Outgoing 2	Inter-Switch Outgoing Uniform Numbering Plan	<input type="checkbox"/>

Local Switch Settings

View:

Name	Value
Disconnect Loop Current Length (ms)	150
Flash Hook Time (ms)	500
T1 Protocol	FXS
T1 Signaling	Immediate

- 4 Make any changes to the default settings your site requires, and then click **OK**.
- 5 The **Local Integration Options** dialog box, **Required Parameters** view displays.

Integration Options

System Switch:
 Integration Type:
 Integration:
 Name:

Local Integration Settings

View:

Name	Value
SIP Server Address	
SIP Server Port	5060
SIP Domain Name	
Transport for outgoing SIP messages	TCP
Use DNS discovery procedures	<input type="checkbox"/>
Local IP Address to bind on	- Please Select -
SIP Local Connection Port	5060
SIP parser qualifier string	

- a Enter the information as shown in the following table.

Field	Required Value
SIP Server Address	Enter the IP address of the Session Manager server.
SIP Server Port	Enter the port number on which the Session Manager listens for SIP messages. This port must match the Session Manager port. The default port number is 5060.

SIP Domain Name	Enter the SIP domain name. This case-sensitive value must be the same as the Far-End Domain Name in the signaling group. NOTE This value is case-sensitive.
Transport for outgoing SIP messages	Enter TCP or UDP (TCP is the default value.)
Local IP Address to bind on	Enter the IP address of the network interface card (NIC) on the Call Server platform that supports the SIP integration. If there is only one NIC on the MiCollab AM server platform, this field typically contains the IP address of that NIC already.
SIP Location Connection Port	Enter the TCP port MiCollab AM listens for incoming SIP messages. The default value is 5060.
SIP parser qualifier string	In cases of a single SIP integration on the call server, enter the local IP address to which the integration is bound. This field is used by MiCollab AM to match SIP packets to the appropriate SIP integration. In cases where there are multiple SIP integrations on the call server, use a string that is unique to each SIP integration. For example: The Fully Qualified Domain Name (FQDN) of the switch, such as pbx1.sipdomain.com. NOTE This setting must match a string in the SIP header that is unique to this particular integration.
PBX Password	Enter the password that you assigned to the user definitions for the integrated ports earlier in this document.
Media packet size (milliseconds)	MiCollab AM sends/receives packets containing the number of milliseconds worth of audio data set here. The default value is 20.

6 On the **Local Integration Settings** View, select **Media Settings**.

- a** Select the checkbox in the **Validate Remote Hosts for Media**, if you want to use this feature.

IMPORTANT Enabling this parameter causes processing overhead and should only be enabled when necessary. For information on this setting, see the note in the [Critical Application Considerations](#) section.

7 From the **Local Integration Settings** View, select **Connection Security Settings** and follow the steps below.

IMPORTANT Make sure that you have copied the certificate files to local MiCollab AM server of designated certificate repository.

- a** Copy certificate files (**Telephonyserversipcert.pem** and **Telephonyserversipkey.pem**) to local MiCollab AM server of designated certificate repository.
- b** In the settings table, select the **Enable TLS** checkbox.
- c** Below the settings table, click **Add Trusted SIP Server Address**. This will add a line **SIP Server Address** to the settings table.
- d** In the **SIP Server Address** field, enter the address of the server.
- e** If the **Show thumbprint properties** checkbox is selected, deselect the checkbox. This will show the **Local Certificate FileName** and **Local Private Key FileName** fields in the settings table.

NOTE If you want retain the **Show thumbprint properties** checkbox as selected, you must have your ***cert.pem** and ***key.pem** files in the store.



- f** In the **Local Certificate FileName** field, click the  (browse) icon to import the ***cert.pem** connection security settings file.
 - g** In the **Local Private Key FileName** field, click the  (browse) icon to import the ***.key.pem** connection security settings file.
 - h** Click **Apply** to save your changes.
- 8** From the **Local Integration Settings** View, select **Software DTMF Detection Settings**. The **Software DTMF Settings** view displays.
 - 9** Confirm the **DTMF Detection Type** parameter is set to **Hardware**, the default value.
 - 10** Click **OK**. The **Switch Section Options** dialog box displays.
 - 11** In the **Switch Section Options** dialog box, select an **Incoming Hunt Mode**. In the **Hunt Group Access Code** box, type the hunt pilot number you defined earlier under the [In the Identity tab](#), fill in the appropriate fields.
 - 12** Click the **Communication Profile** tab.

Image continues on next page.

Image continued from previous page.

- 13** In the **Communication Profile** section, enter the same numeric password for MiCollab AM.

NOTE The password is required later to configure the MiCollab AM integration.

- 14** In the **Communication Address** section, click **New**. The options for adding a new communication address display.

- 15** From the **Type** dropdown menu, select **Avaya SIP**.

- 16** In the **Fully Qualified Address** fields, enter the extension number assigned to the port and the domain. And then click **Add**.

NOTE Assign each port the same extension number as you assigned it in the ASA configuration screens.

- 17 In the **Session Manager Profile** section, select the arrow ► to open the section.

Session Manager Profile

SIP Registration

* Primary Session Manager

Secondary Session Manager

Survivability Server

Max. Simultaneous Devices: 1

Block New Registration When Maximum Registrations Active?

Application Sequences

Origination Sequence: (None)

Termination Sequence: (None)

Call Routing Settings

* Home Location: Select

Conference Factory Set: (None)

Call History Settings

Enable Centralized Call History?

In the Session Manager Profile section:

*In the SIP Registration section, select the **Primary Session Manager**.*

In the **Call Routing Settings** section, select the **Home Location**.

- 18 No administration **is required for** the CM **Endpoint Profile** section.

a Click Commit.

- 19 **Creating** a Hunt Group and **Pilot Number** section.

NOTE Select the hunt mode that matches the hunt mode type you created in IP PBX programming.

- 20 Click **OK**.

- 21 In the **AT_SysCfg information** dialog box, click **Yes** to open the **Board Options** dialog box.

- 22 In the **Board Options** dialog box, select **RADVISION** as the **Manufacturer**, **SIP STACK (RADVISION)** as the **Model**, and then **SIP IP RTP** as the **Protocol**.

- 23 Click the **Lines** tab. Enter the extension number of each integrated line on the Call Server.

IMPORTANT You must enter the PBX extension numbers that the Call Server is configured to answer or the integration will fail. The extension numbers are registered as SIP stations with the IP PBX during system startup.

- 24 Click **OK** to save all changes.

The settings related to the telephone system on the **Switches** tab, and the other integration-specific settings not mentioned in this section, are filled in correctly for a typical site when you select the correct telephone system during setup.

If you need to customize settings on the **Switch Sections** or **Integrations** tab to meet requirements specific to your site, refer to the documentation accompanying the telephone system, the online help, and *System Installation Guide*.

Completing the Integration

Now you are ready to finish installing MiCollab AM. See the guides *System Installation Guide* and *System Administration Guide*, or refer to the MiCollab AM online help system, for instructions.

For general information on integrations, you may also wish to consult the chapter *Integrating MiCollab AM with the Telephone System* in *System Installation Guide*, and the topic *Integrate the System Server with the telephone system* in the online help system.

Configuring MiCollab AM for SIP Failover

MiCollab AM can be configured for automatic failover to the secondary SIP server in the event of the primary/host SIP server failure. Use the instructions provided in this section to add or remove secondary SIP server(s) for failover.

To add a SIP failover server:

- 1 From **MiCollab AM Configuration**, click the **Integrations** tab.
- 2 From the **Integrations** list, select your integration, and then click **Edit**.
- 3 In the **Integration Options** dialog box, go to the **Local Integration Settings** section.
- 4 From the **View** dropdown list, select **Failover Server Settings**.
- 5 Click the **Add Failover Server** button. Two new rows are added to configure the secondary SIP server.
- 6 In the **Secondary SIP Server Address** and **Secondary SIP Server Port** rows, enter the appropriate value as follows:

Table 3. Secondary SIP Server Address and the Secondary SIP Server Port example

Field	Value
Secondary SIP Server Address	Enter the TCP/IP address or an FQDN of the secondary node. For example: The IP address 123.45.6.789 as displayed on the Review/Modify SIP Gateway screen.
NOTE This integration requires the machine name to be a fully qualified domain name. Therefore, use the Machine Name field as displayed on the Review/Modify SIP Gateway screen during the integration process.	

IMPORTANT This value must match the configuration on the Gateway of the secondary node.

Secondary SIP Server Port Enter the port number of the secondary node. The default value is **5060**.

7 From the **View** dropdown list, select **Integration Specific Parameters**. The **Integration Specific Parameters** view displays.

8 In the **Integration Specific Parameters** list, enter the information as shown in the following table:

NOTE The parameters in the following table is listed in alphabetical order. The actual Integration Specific Parameters on your system may not be listed in the same order presented in the table below.

Table 4. Integration Specific Parameters

Field	Value
Enable SIP server failover	Select this check box to allow for failover and to enable the failover server setting changes.
Delay (in ms) between Failover attempts	The delay in milliseconds before MiCollab AM attempts to register its port with the SIP server. The default is 1000 ms .
Incoming off hook delay	800
Outgoing off hook delay	0
On hook delay	300
Type of Call Progress to use for External Calls	<p>How this should be set depends on the gateway used for the integration.</p> <ul style="list-style-type: none">• If the gateway supports call progress through to the endpoint, set to Digital.• If the gateway reports early that the call is connected, such as before the phone rings or while the phone is ringing, set to Media.

9 Click **Apply** to save the changes.

10 To add another failover server repeat **Steps 4-9**.

11 Click **OK** to close the **Integration Options** dialog box.

To remove a SIP Failover Server:

- 1 From **MiCollab AM Configuration**, click the **Integrations** tab.
- 2 From the **Integrations** list, select your integration, and then click **Edit**.
- 3 In the **Integration Options** dialog box, go to the **Local Integration Settings** section.
- 4 From the **View** dropdown list, select **Failover Server Settings**.
- 5 In the **Failover Server Settings** view, click the **Remove Failover Server** button.
- 6 At the confirmation prompt, click **Yes** to confirm the deletion.

NOTE If multiple servers are listed, the last server address and port pair on the list is deleted first.

- 7 Click **Apply** to save the changes, and then click **OK** to close the **Integration Options** dialog box.

Changing the Network Binding Order on the MiCollab AM Platform

If your MiCollab AM server platform is a component of two or more local or wide area networks (LANs or WANs), you must make sure that this integration does not interfere with the normal network operation of the server.

By default, MiCollab AM uses the primary (public) network interface card (NIC) in the platform, the first NIC in the network binding order. If you want MiCollab AM to use a NIC other than the first one, you must make several required configuration changes. It is much easier to configure the Integration to use another NIC by simply setting the integration parameter "Local IP Address to bind on" to the address of the NIC card connected to the PBX.

NOTE The operating system gives precedence to the first network connection in the list followed by the remaining connections based on their position in the list.

The instructions in this section ensure that the binding order is correct when you set up the integration. If you replace a NIC on the MiCollab AM server platform later, the platform's operating system registers the new adapter at the bottom of its binding order. Restoring the original binding order should correct any problems caused by the change.

IMPORTANT The following procedure shifts the binding order of the network interface cards. To determine which NIC is associated with a specific network connection, right-click the connection in the Network Connections window, and then select Properties.

Windows Server 2008 R2 with Service Pack 1

To change the binding order of multiple NICs:

- 1 From the taskbar, click **Start > Control Panel**.
- 2 In the **Control Panel**, click **Network and Sharing Center**.
- 3 On the left pane, select **Change Adapter Settings**.
- 4 Press **Alt** to display the menu bar.
- 5 On the menu bar, select **Advanced**, and then click **Advanced Settings**.
- 6 On the **Adapters and Bindings** tab of **Advanced Settings**, click the network connection that serves MiCollab AM.
- 7 Click the up arrow button to the right of the **Connections** list as many times as needed to move the connection to the top of the list.
- 8 Click **OK**, and then close the **Network Connections** window and the **Control Panel**.

Windows Server 2012 R2

To change the binding order of multiple NICs:

- 1 From the taskbar, click **Start > Control Panel**.
- 2 In the **Control Panel**, click **Network and Sharing Center**.
- 3 On the left pane, select **Change Adapter Settings**.
- 4 Press **Alt** to display the menu bar.
- 5 On the menu bar, select **Advanced**, and then click **Advanced Settings**.
- 6 On the **Adapters and Bindings** tab of **Advanced Settings**, click the network connection that serves MiCollab AM.
- 7 Click the up arrow button to the right of the **Connections** list as many times as needed to move the connection to the top of the list.
- 8 Click **OK**, and then close the **Network Connections** window and the **Control Panel**.

Configuring Quality of Service (QoS)

As of version 6.0, MiCollab AM has no internal support for QoS. QoS must now be implemented externally via group policies as Policy-Based QoS. Refer to your operating system's documentation for details.

Table 5. QoS Configuration

Field	Setting
Application Name	At_TelephonyServer.exe
Protocol	Match the setting used for the integration UDP or TCP
Source Port	<p>MiCollab AM requires a range of ports for audio support. The MiCollab AM audio ports start at the Local Media Base UDP Port configured in the Server tab. Each MiCollab AM line reserves 10 ports. Hence, the port range starts from the number configured there, and goes to the last port of the last line. The formula for calculating the highest port number in the range is as follows:</p> $\text{BasePortNumber} + (\text{NumberOfCXPorts} * 10) - 1.$ <p>Hence, if the base port is 10000, and MiCollab AM has 8 lines, then the port range to use would be:</p> <p>10000:10079</p>
DSCP Value	46